

Finestop RA/RS/VB

Framed Construction Incorporating Fluid-Applied LaHabra Air/Water-Resistive Barriers
Typical Details





Finestop RA/RS/VB

Typical Details

Framed Construction Incorporating LaHabra Fluid-Applied Air/Water-Resistive Barriers

Table of Contents

- 1. Joint and Fastener Treatement
- 2. Vertical Expansion Joint
- 3. Rough Opening Corner Reinforcement
- 4. Rough Opening Reinforcement with Sheathing Fabric
- 5. Fast Corner Application
- 6. Rough Opening Reinforcement with Fast Corners and Sheathing Fabric
- 7. Rough Opening Reinforcement with Fast Corners and SikaWall Flash Seal
- 8. Penetration through Wall Construction (Sheathing Fabric Only)
- 9. Through Wall Construction (with MaxFlash or Sealant)
- 10. Penetration through Wall Construction (Rough Cut)
- 11. Inside Corner Change in Substrate
- 12. Inside Corner
- 13. Outside Corner
- 14. Window Flange Treatment
- 15. Window Head
- 16. Window Jamb
- 17. Window Sill

- 18. Pan Flashing
- 19. Termination at Grade Sheathing Overlapping Foundation
- 20. Termination at Grade Sheathing Flush with Foundation
- 21. ermination at Grade Masonry Veneer
- 22. Brick Anchor Treatment (Installed Prior to AWRB Application)
- 23. Brick Anchor Treatment (Installed After AWRB Application)
- 24. Brick Expansion Joint
- 25. Termination at Grade Brick
- 26. Termination at Foundation with Through Wall Flashing Brick
- 27. Termination at Foundation incorporating a Termination Bar with Through Wall Flashing Brick
- 28. Through Wall Flashing at Head Brick
- 29. Saddle Application incorporating Sheathing Fabric
- 30. Saddle Application incorporating SikaWall Flash Seal NP
- 31. Kick-Out Flashing
- 32. Roof Edge Flashing
- 33. Roof Edge Flashing
- 34. Parapet Cap Flashing

Notes:


- The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The
 details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown,
 consult Sika for review of specific details.
- · Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.





Finestop RA/RS/VB

TYPICAL JOINT AND FASTENER TREATMENT

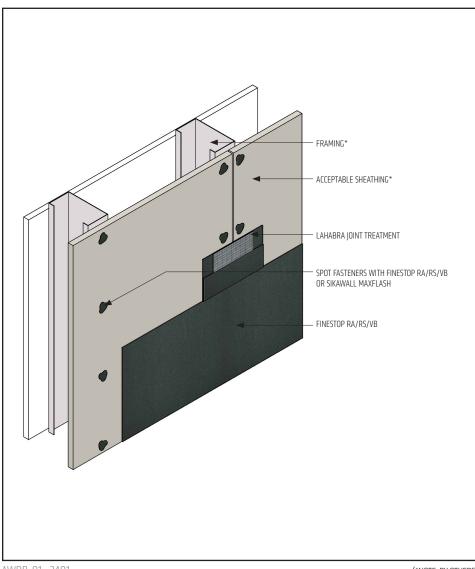

- Ensure all fastener heads are spotted with Finestop RA/RS/VB or SikaWall MaxFlash.
 Spotting fasteners at sheathing joints is optional.
- For more information, reference the selected LaHabra air/water-resistive barrier product bulletin.
- LaHabra Joint Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikWall Flash Seal NP.
- SikaWall Sheathing Fabric can treat joints up to 1/4" wide. SikaWall MaxFlash can treat joints up to 1/2" wide.

 Note: Not for use at expansion joints.

AWRB-01 2401 (*NOTE: BY OTHERS)


- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.





Finestop RA/RS/VB

TYPICAL VERTICAL EXPANSION JOINT

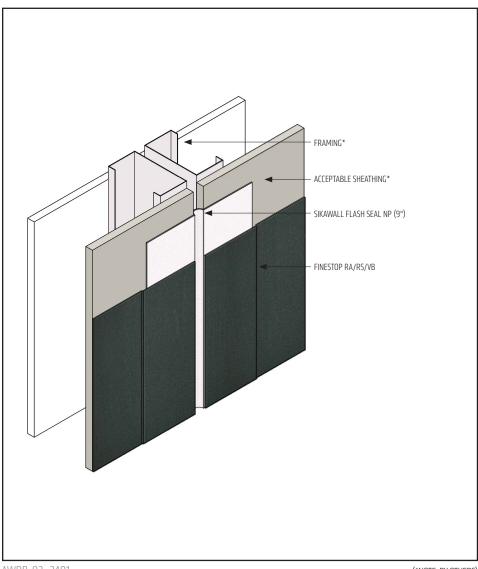

- Provide sufficient slack in the SikaWall Flash Seal NP at expansion join to allow for movement.
- Fully Coat SikaWall Flash Seal NP with Finestop RA/RS/VB.


AWRB-02 2401 (*NOTE: BY OTHERS)

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL ROUGH OPENING CORNER REINFORCEMENT

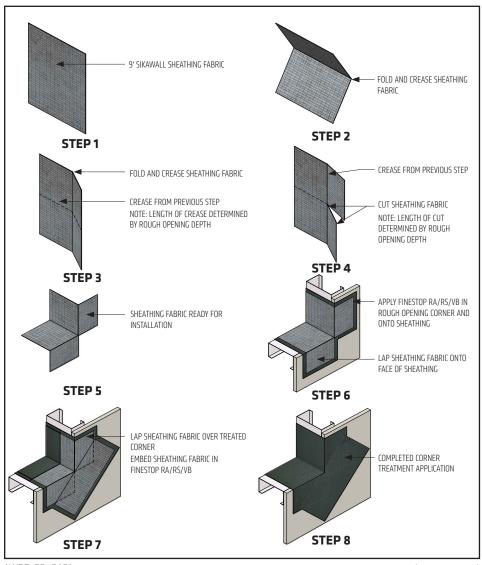

• Wrap rough opening in accordance with Detail AWRB-04, AWRB-06 or AWRB-07.


AWRB-03 2401 (*NOTE: BY OTHERS)

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL ROUGH OPENING REINFORCEMENT WITH SIKAWALL SHEATHING FABRIC

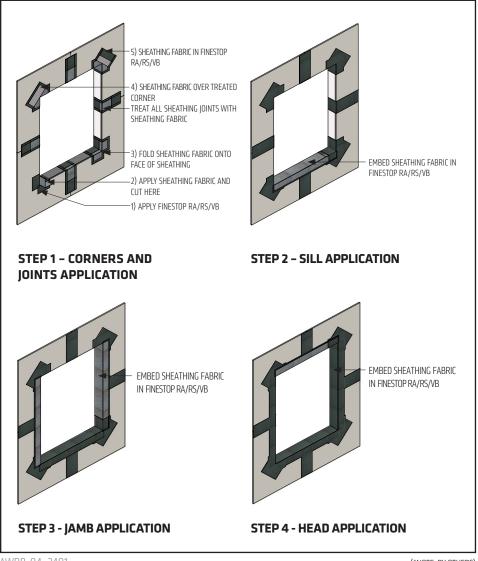

- Ensure SikaWall Sheathing Fabric is embedded in Finestop RA/RS/VB.
- Ensure Finestop RA/RS/VB and SikaWall Sheathing Fabric are installed without voids and pinholes.
- Apply SikaWall Flash Seal NP over punched stud openings.


AWRB-04 2401 (*NOTE: BY OTHERS)

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL SIKAWALL FAST CORNER FABRIC APPLICATION

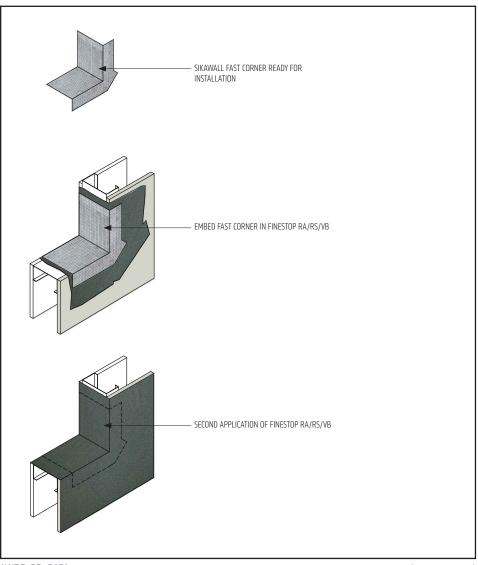

 For additional information reference SIkaWall Fast Corner Fabric Product Data Sheet.

AWRB-05 2401 (*NOTE: BY OTHERS)

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.


- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Technical Service



Finestop RA/RS/VB

TYPICAL ROUGH OPENING CORNER TREATMENT WITH SIKAWALL FAST CORNER FABRIC AND SIKAWALL SHEATHING FABRIC

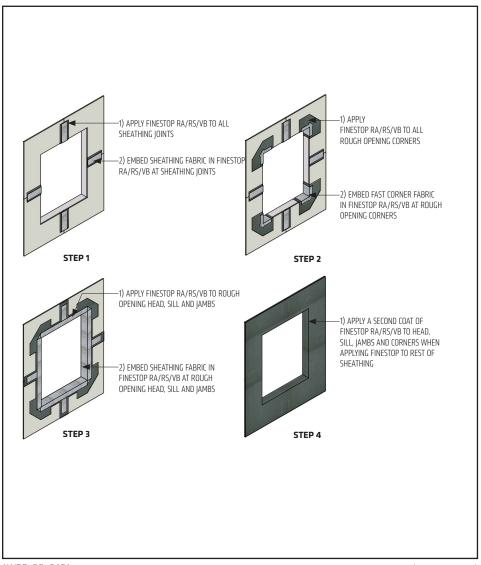

- Apply SikaWall Flash Seal NP over punched stud openings.
- Fully coat SikaWall Flash Seal NP with Finestop RA/RS/VB.


AWRB-06 2401 (*NOTE: BY OTHERS)

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL ROUGH OPENING CORNER TREATMENT WITH SIKAWALL FAST CORNER AND SIKAWALL FLASH SEAL NP

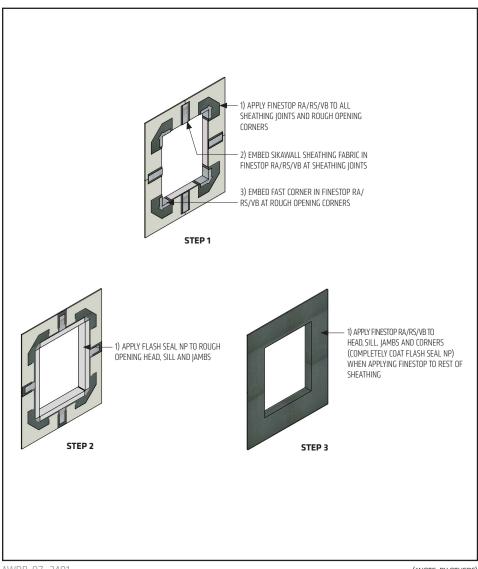

- Apply SikaWall Flash Seal NP over punched stud openings.
- Fully coat SikaWall Flash Seal NP with Finestop RA/RS/VB.
- SikaWall Sheathing Fabric and SikaWall Flash Seal NP are produced by Sika.


AWRB-07 2401 (*NOTE: BY OTHERS)

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL PENETRATION THROUGH WALL CONSTRUCTION (SIKAWALL SHEATHING FABRIC ONLY)

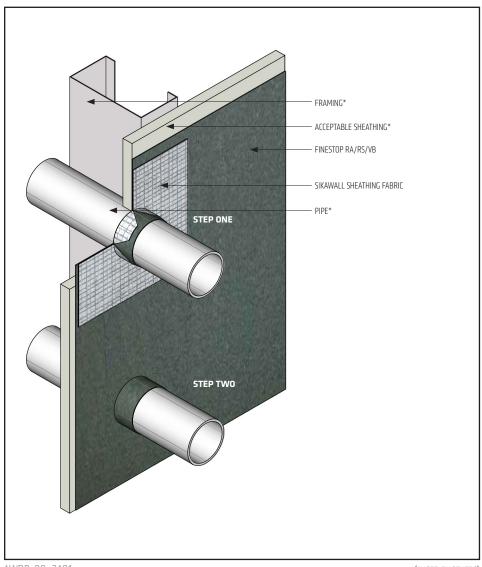

- Cut a square piece of SikaWall Sheathing Fabric large enough to extend past the pipe by 2" in each direction.
- At the center of the square piece of SikaWall, pierce a small hole with a blade or scissors.
- With a blade or scissors, cut an "X". Turn the square about 45° and cut another X. The center point of both "X"s will be the point you pierced previously.
- Insert the pipe through the newly cut square so it is centered with a minimum of 2" on each side with the cut flaps point outward. The square should be flush with the sheathing, See Step 1.
- Embed the SikaWall Sheathing Fabric in Finestop RA/RS/VB and coat the flaps around the pipe, See Step 2.
- Wrap a 1" strip of SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB around the flaps.


AWRB-08 2401 (*NOTE: BY OTHERS)

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL PENETRATION THROUGH WALL CONSTRUCTION (WITH MAXFLASH OR SEALANT)

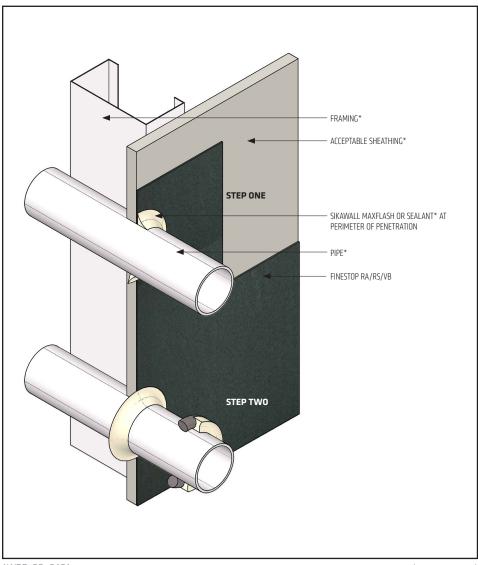

- Finestop RA/RS/VB with SikaWall Sheathing Fabric may be used as an alternate to provide an air/water-resistive barrier around penetrations, see detail AWRB-08.
- Provide backer rod and Sikaflex HY 150 sealant or equal between pipe and cladding (by others).


AWRB-09 2401 (*NOTE: BY OTHERS)

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL PENETRATION THROUGH WALL CONSTRUCTION (ROUGH CUT)

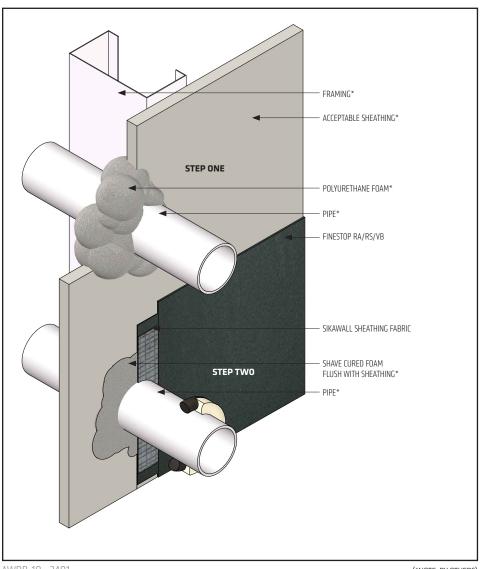

- Ensure spray foam is low expansion.
- Provide backer rod and Sikaflex HY 150 sealant or equal between pipe and cladding (by others).
- Embed SikaWall Sheathing Fabric in Finestop RA/RS/VB.
- Follow detail AWRB-08 for installation of SikaWall Sheathing Fabric and Finestop RA/ RS/VB at penetration.

AWRB-10 2401 (*NOTE: BY OTHERS)


- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.





Finestop RA/RS/VB

TYPICAL INSIDE CORNER CHANGE IN SUBSTRATE

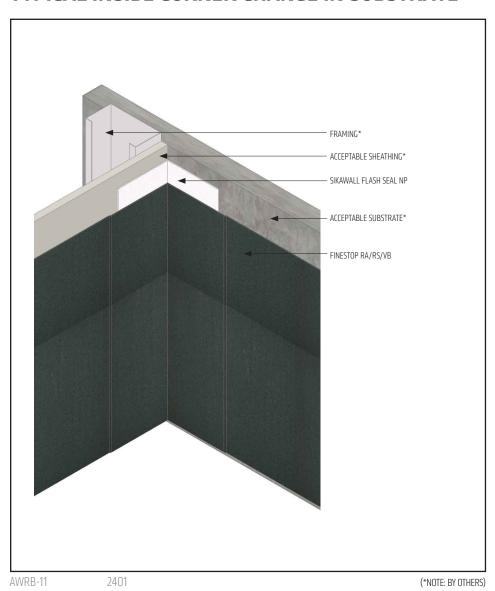


 Fully coast SikaWall Flash Seal NP with Finestop RA/RS/VB.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL INSIDE CORNER

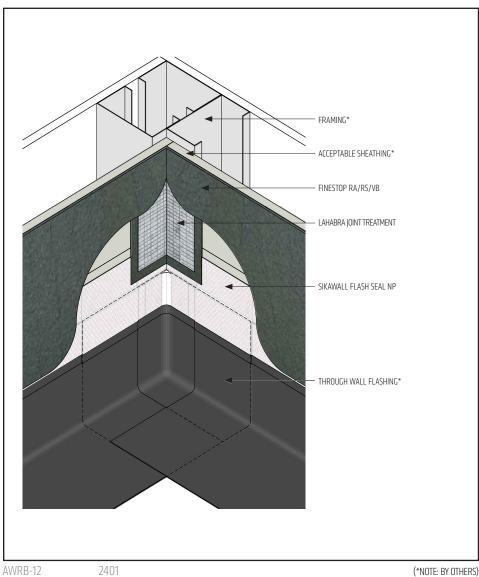

- Center SikaWall Flash Seal NP so half of the width covers through wall flashing and half covers the substrate.
- A termination bar and Sikaflex HY 150 sealant can be used at through wall flashing instead of SikaWall Flash Seal NP (See detail AWRB-33).
- Lap LaHabra joint treatment a minimum of 2" over SikaWall Flash Seal NP.
- If using a termination bar, LaHabra joint treatment must be beneath through wall flashing membrane.
- LaHabra Joint Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.


AWIND 12 2401 (NOTE, DI OTNE

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL OUTSIDE CORNER

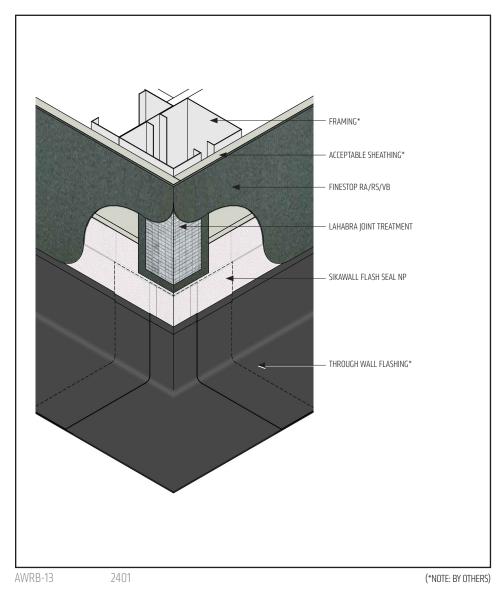

- Center SikaWall Flash Seal NP so half of the width covers through wall flashing and half covers the sheathing.
- If using a termination bar, LaHabra joint treatment must be beneath through wall
- LaHabra Joint Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.


no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

Technical Service



Finestop RA/RS/VB

TYPICAL WINDOW FLANGE TREATMENT

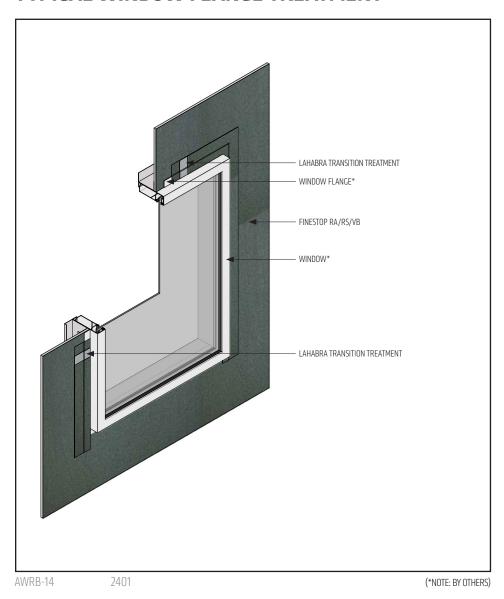


- Prior to window installation, ensure waterresistive barrier is properly applied into the rough openings in accordance with application guidelines and code requirements. See details AWRB 04-07.
- Do not block drainage at window sill.
- · Air seal to window by others.
- LaHabra Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- Consult window and sealant manufacturers to verify window installation, detailing and to ensure no water leakage into the wall assembly.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL WINDOW HEAD

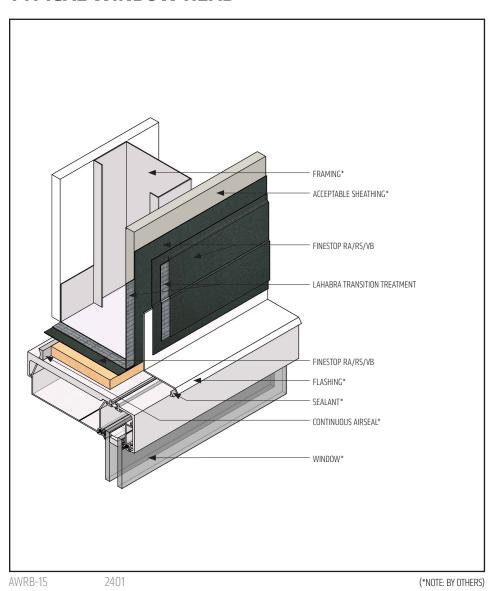

- · Provide end dams at flashing terminations.
- If blocking is installed prior to Finestop RA/RS/ VB application, it shall be treated as a rough opening; verify adhesion before proceeding.
- LaHabra Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- Prior to window installation, ensure waterresistive barrier is properly applied into the rough openings in accordance with application guidelines and code requirements. See details AWRB 04-07.
- Consult window and sealant manufacturers to verify window installation, detailing and to ensure no water leakage into the wall assembly.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts


- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.



Finestop RA/RS/VB

TYPICAL WINDOW JAMB

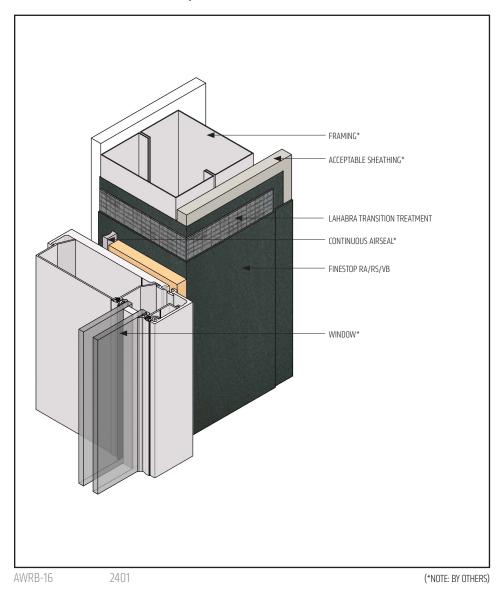

- Apply SikaWall Flash Seal NP over punched stud opening.
- If blocking is installed prior to Finestop RA/RS/ VB application, it shall be treated as a rough opening; verify adhesion before proceeding.
- LaHabra Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- Prior to window installation, ensure waterresistive barrier is properly applied into the rough openings in accordance with application guidelines and code requirements. See details AWRB 04-07.
- Consult window and sealant manufacturers to verify window installation, detailing and to ensure no water leakage into the wall assembly.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

• Install Sika materials in accordance with current installation instructions.


Sika Corporation

• Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL WINDOW SILL

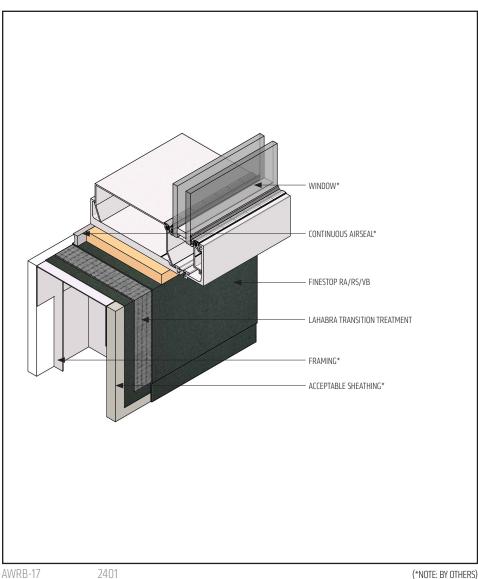

- · Install end/back dams as required.
- If blocking is installed prior to Finestop RA/RS/ VB application, it shall be treated as a rough opening; verify adhesion before proceeding.
- If pan flashing is required, see detail AWRB-18.
- LaHabra Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- Prior to window installation, ensure waterresistive barrier is properly applied into the rough openings in accordance with application guidelines and code requirements. See details AWRB 04-07.
- Consult window and sealant manufacturers to verify window installation, detailing and to ensure no water leakage into the wall assembly.

AVIND I7 2401 (NOIE DI DINERS)


- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.





Finestop RA/RS/VB

TYPICAL PAN FLASHING

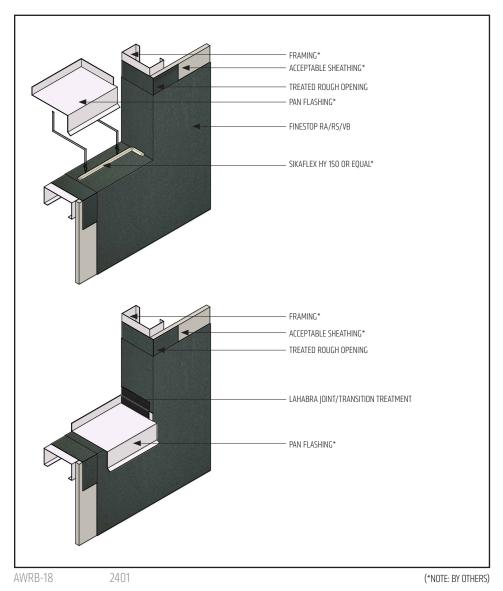

- Install Sikaflex HY 150 sealant or equal as depicted onto the sill and jamb to maintain continuity of the air barrier.
- Install pan flashing into the wet sealant. Remove excess sealant as required.
- Install LaHabra Joint Treatment at the jamb end
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- Prior to pan flashing installation, ensure waterresistive barrier is properly applied into the rough opening in accordance with application guidelines and code requirements. See details AWRB 04-07.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.


- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Technical Service



Finestop RA/RS/VB

TYPICAL TERMINATION AT GRADE – SHEATHING OVERLAPPING FOUNDATION

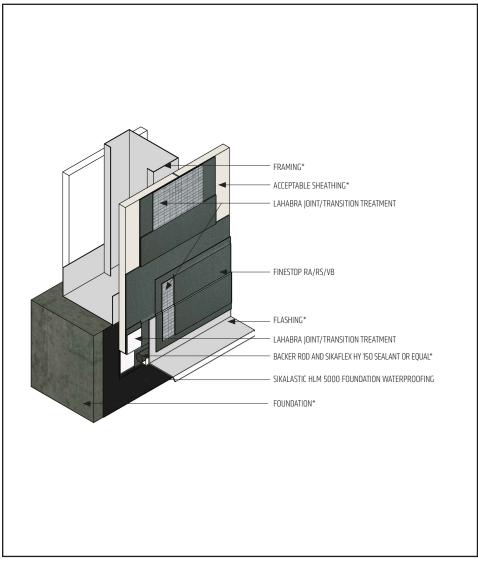

- Extend flashing over LaHabra transition treatment on foundation.
- If SikaWall MaxFlash is used at foundation transition, apply at 20–30 mils.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.


AWRB-19 2401 (*NOTE: BY OTHERS)

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL TERMINATION AT GRADE – SHEATHING FLUSH WITH FOUNDATION

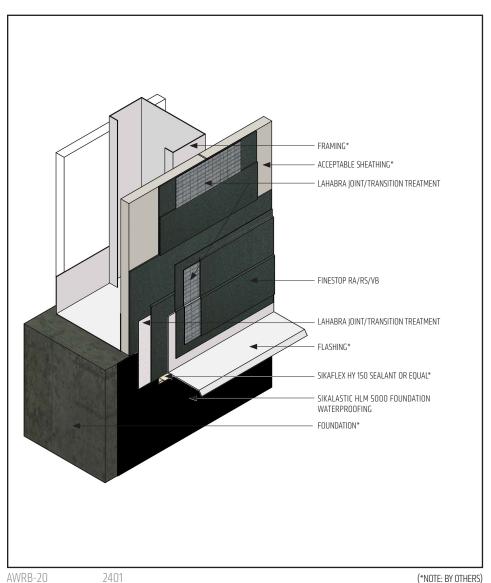


- Extend flashing over LaHabra transition treatment on foundation.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL TERMINATION AT GRADE - MASONRY **VENEER**

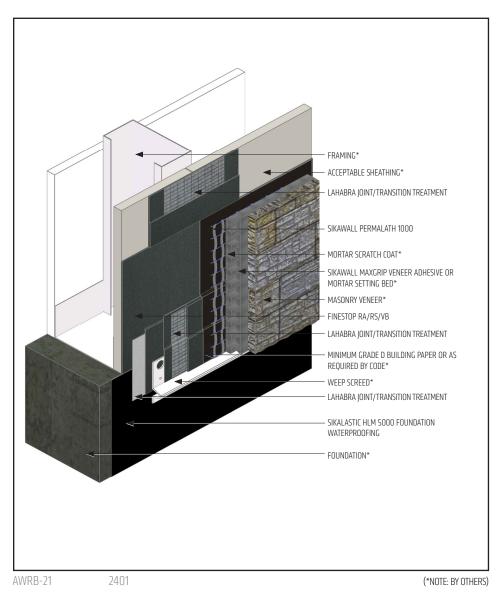

- Ensure Finestop RA/RS/VB fully covers LaHabra joint/transition treatment at overlap.
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts

• Install Sika materials in accordance with current installation instructions.

Sika Corporation

• Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.


Customer Service

Technical Service



Finestop RA/RS/VB

TYPICAL BRICK ANCHOR (INSTALLED PRIOR TO AWRB APPLICATION)

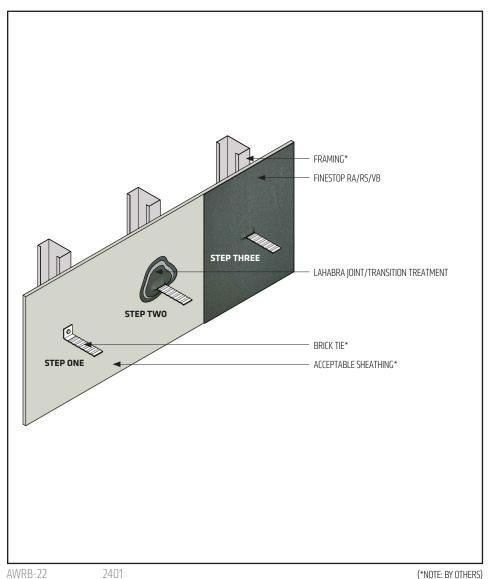

- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- Consult the brick tie manufacturer for proper attachment.


AWNO 22 2401 (NOIE DI OTRE

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL BRICK ANCHOR (INSTALLED AFTER AWRB APPLICATION)

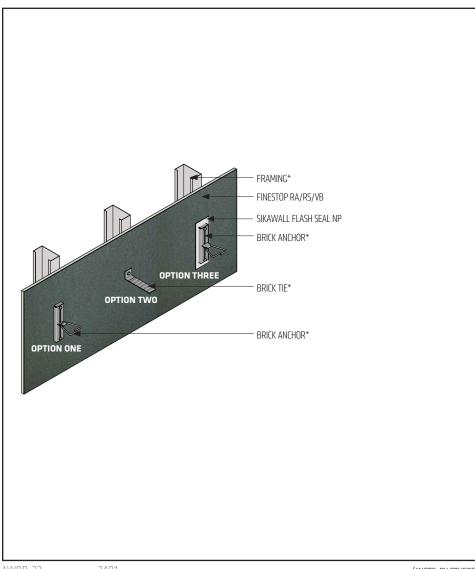

- For additional information, see Finestop Fastener Self-Sealing technical bulletin.
- Consult the brick anchor manufacturer for proper attachment.
- Additional Finestop RA/RS/VB, SikaWall MaxFlash or sealant may be post applied at anchor points.
- Option 3: Apply SikaWall Flash Seal NP to Finestop RA/RS/VB prior to application of brick anchor.


AWRB-23 2401 (*NOTE: BY OTHERS)

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL BRICK EXPANSION JOINT

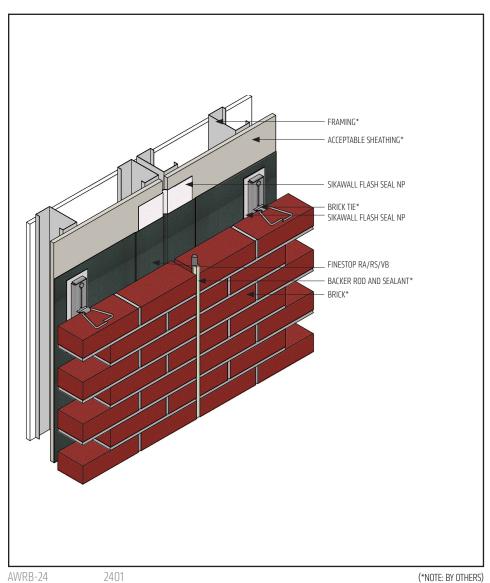

- See detail AWRB-22 & 23 for typical brick anchor treatment.
- Fully coat SikaWall Flash Seal NP with Finestop RA/RS/VB.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.


no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts



Finestop RA/RS/VB

TYPICAL TERMINATION AT GRADE - BRICK

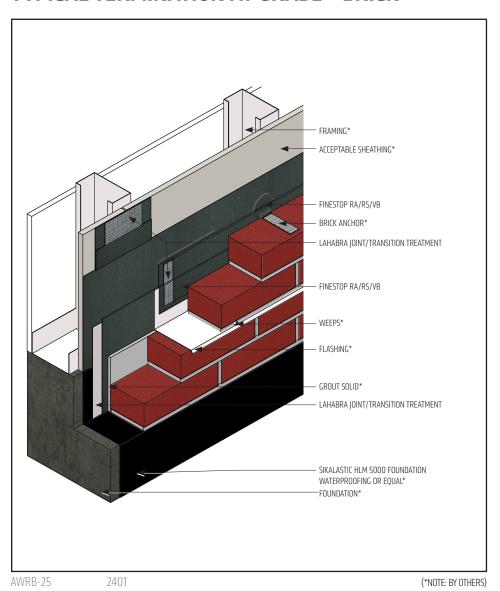

- Ensure Finestop RA/RS/VB fully covers LaHabra joint treatment at flashing overlap.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.


no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts



Finestop RA/RS/VB

TYPICAL TERMINATION AT FOUNDATION WITH THROUGH WALL FLASHING - BRICK

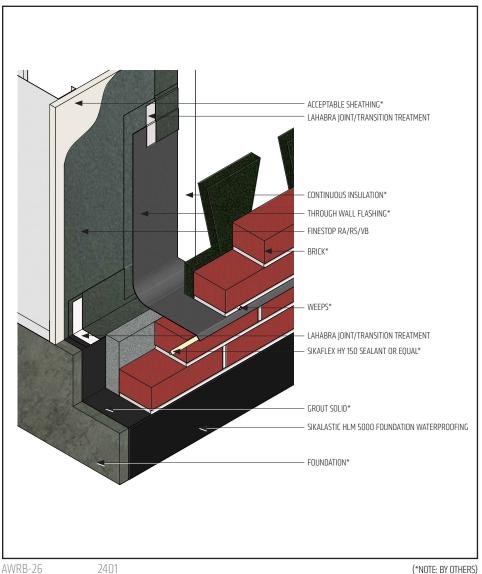


- Air space between sheathing and brick per design (not shown).
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop RA/RS/VB or SikaWall Flash Seal NP.
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL TERMINATION AT FOUNDATION INCORPORATING TERMINATION BAR WITH THROUGH WALL FLASHING - BRICK

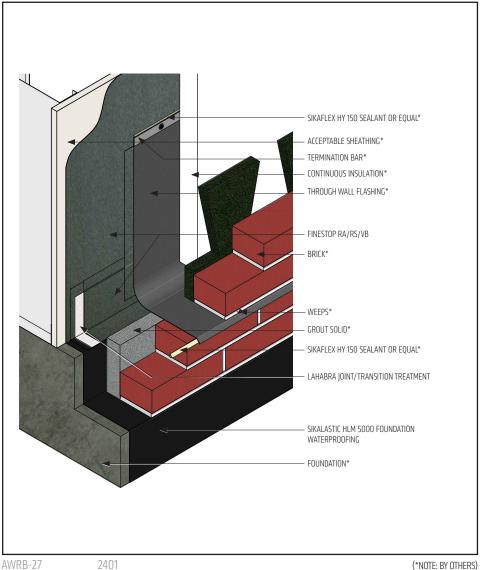

- Air space between sheathing and brick per design (not shown).
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop or SikaWall Flash Seal NP.
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.


AVIND-27 ZHOT (NOTE: DT OTHE

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL THROUGH WALL FLASHING AT HEAD -BRICK

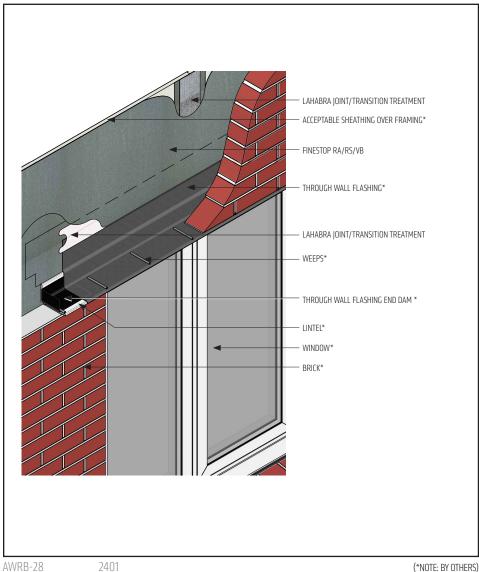


- · Center LaHabra transitional treatment so half of the width covers through wall flashing and half covers the substrate.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop or SikaWall Flash Seal
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL SADDLE APPLICATION INCORPORATING SHEATHING FABRIC

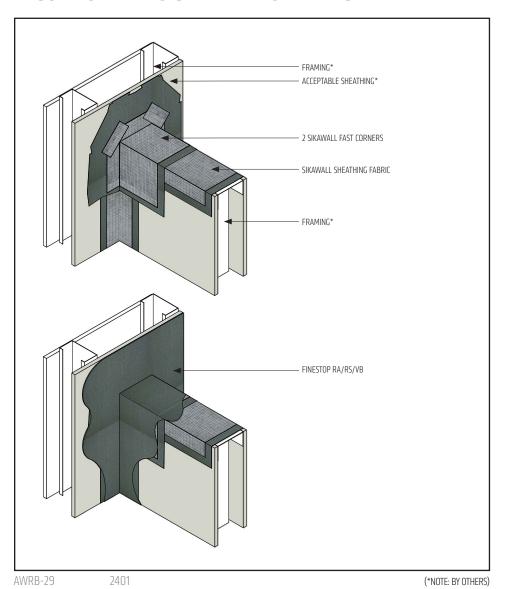

- Embed SikaWall Fast Corner Fabric and SikaWall Sheathing Fabric in Finestop RA/RS/ VR
- Two SikaWall Fast Corners are used, one on each side of the saddle.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts


- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.



Finestop RA/RS/VB

TYPICAL SADDLE APPLICATION INCORPORATING SIKAWALL FLASH SEAL NP

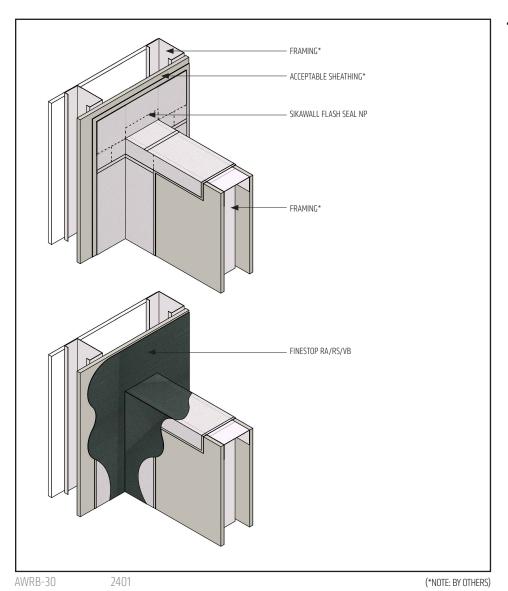


 Fully coat SikaWall Flash Seal NP with Finestop RA/RS/VB.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL KICK-OUT FLASHING

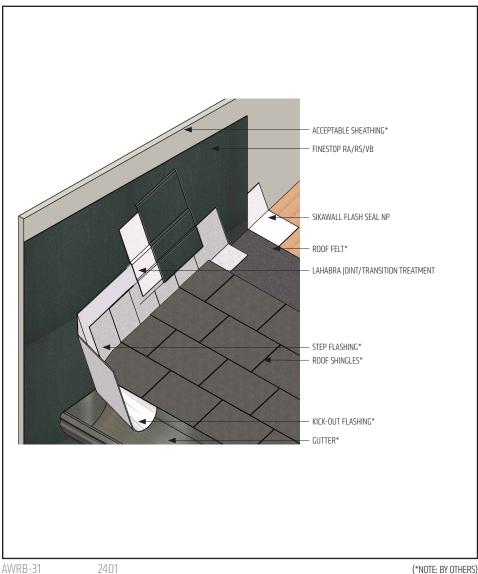

- Where LaHabra joint/transition treatment is installed over the flashing, ensure termination occurs a minimum of 2" above the roof.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop or SikaWall Flash Seal NP.
- If SikaWall Flash Seal is used, it must be fully coated with Finestop RA/RS/VB.


AWRB-31 24U1 (*NOTE: BY OTHER

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL ROOF EDGE FLASHING

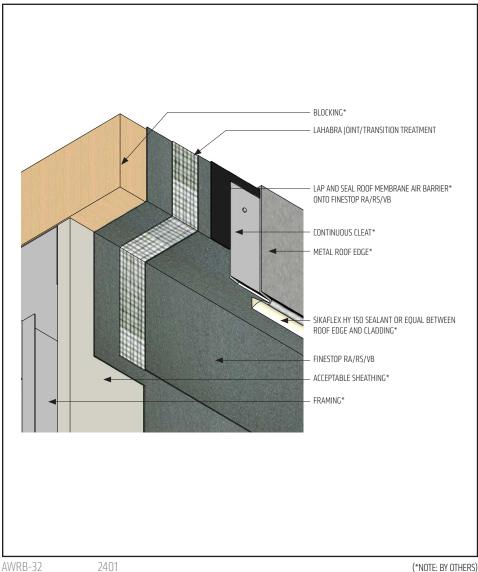


- · Ensure continuity of air barrier is maintained.
- Avoid solvent-based adhesives/primers where roofing laps Finestop RA/RS/VB.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop or SikaWall Flash Seal
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL ROOF EDGE FLASHING

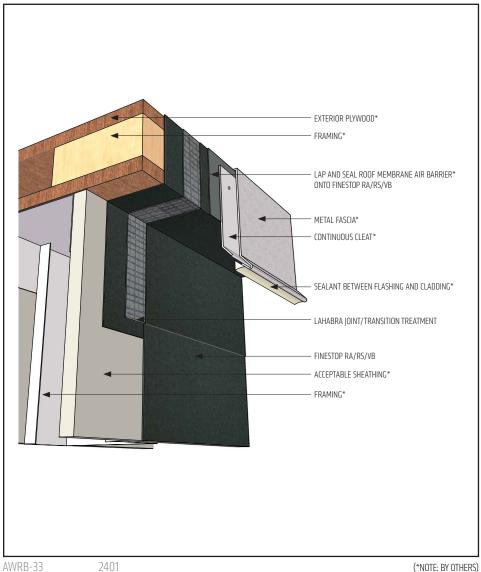

- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop or SikaWall Flash Seal NP.
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.
- Avoid solvent-based adhesives/primers where roofing laps Finestop RA/RS/VB.


(UDIE. CC UNIVIA

- \bullet Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



Finestop RA/RS/VB

TYPICAL PARAPET CAP FLASHING

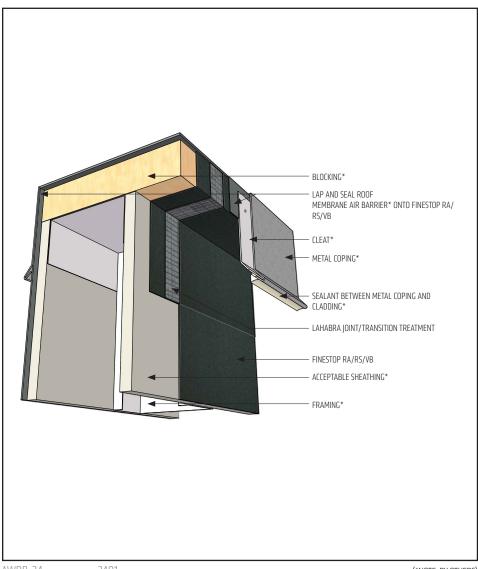

- SikaWall Flash Seal NP may be used as an alternate to provide an air/water-resistive barrier at transition of SikaWall Sheathing to blocking.
- LaHabra Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Finestop or SikaWall Flash Seal NP
- If SikaWall Flash Seal NP is used, it must be fully coated with Finestop RA/RS/VB.

AWRB-34 2401 (*NOTE: BY OTHERS)

This represents Master Builders Solutions Construction Systems US, LLC (hereinafter Master Builders Solutions) latest recommendations. It is presented in good faith by Master Builders Solutions. The detail is subject to change without notice. Master Builders Solutions accepts no liability for the end use of the detail. For conditions not shown, consult Master Builders Solutions for review of specific detail.





LIMITED WARRANTY NOTICE

Prior to each use of any product of Sika Corporation, its subsidiaries or affiliates ("SIKA"), the user must always read and follow the warnings and instructions on the product's most current product label, Product Data Sheet and Safety Data Sheet which are available at usa.sika.com/lahabra or by calling our Technical Service Department at +1 (800) 589-1336.

Nothing contained in any SIKA literature or materials relieves the user of the obligation to read and follow the warnings and instructions for each SIKA product as set forth in the current product label, Product Data Sheet and Safety Data Sheet prior to use of the SIKA product.

SIKA warrants this product for one year from date of installation to be free from manufacturing defects and to meet the technical properties on the current Product Data Sheet if used as directed within the product's shelf life. User determines suitability of product for intended use and assumes all risks. User's and/ or buyer's sole remedy shall be limited to the purchase price or replacement of this product exclusive of any labor costs. NO OTHER WARRANTIES EXPRESS OR IMPLIED SHALL APPLY INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SIKA SHALL NOT BE LIABLE UNDER ANY LEGAL THEORY FOR SPECIAL OR CONSEQUENTIAL DAMAGES. SIKA SHALL NOT BE RESPONSIBLE FOR THE USE OF THIS PRODUCT IN A MANNER TO INFRINGE ON ANY PATENT OR ANY OTHER INTELLECTUAL PROPERTY RIGHTS HELD BY OTHERS. Sale of SIKA products are subject to the Terms and Conditions of Sale which are available at usa.sika.com.

For the most current version of this literature, please visit our website at usa.sika.com/lahabra.

Sika Corporation 201 Polito Avenue Lyndhurst, NJ 07071 USA Customer Service +1 (800) 433-9517 Technical Service +1 (800) 589-1336 usa.sika.com/lahabra

