


APPLY SIKAFLEX-1A OR SIKASIL SG-15 AROUND DOWEL. CUT A HOLE IN THE CENTER OF FLASHING PIECE SMALLER THAN DOWEL DIAMETER, STRETCH FLASHING PIECE DOWN DOWEL AND HOT-AIR WELD IN-PLACE.

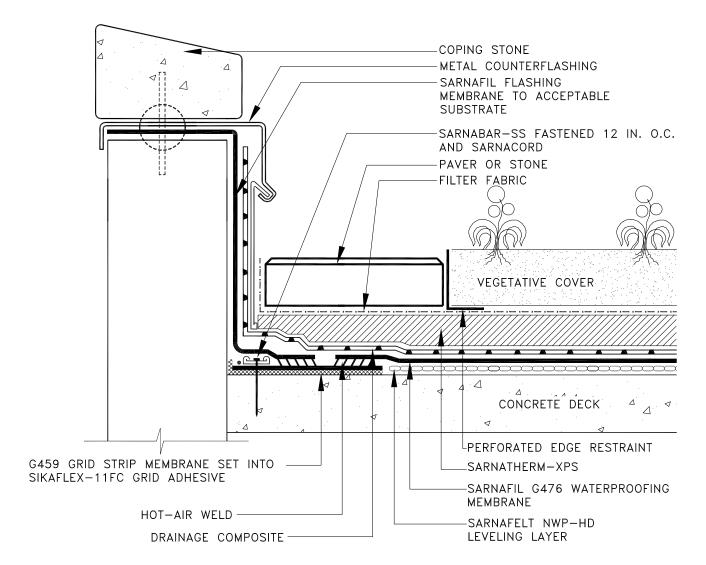

NOTES:

- 1) THE BACK OF THE G459 GRID STRIP MEMBRANE MUST BE PRIMED WITH SIKAFLEX PRIMER 449.
- 2) ALL FLASHING SHALL EXTEND A MIN. OF 8 INCHES ABOVE THE OVERBURDEN.
- 3) METAL COUNTERFLASHING AND COPING STONE ARE TO BE INSTALLED TO MEET LOCAL CODES AND REQUIREMENTS.

COPING STONE

