


APPLY SIKAFLEX — 1A AROUND DOWEL. CUT A HOLE IN THE CENTER OF FLASHING PIECE SMALLER THAN DOWEL DIAMETER, STRETCH FLASHING PIECE DOWN DOWEL AND HOT—AIR WELD IN—PLACE.

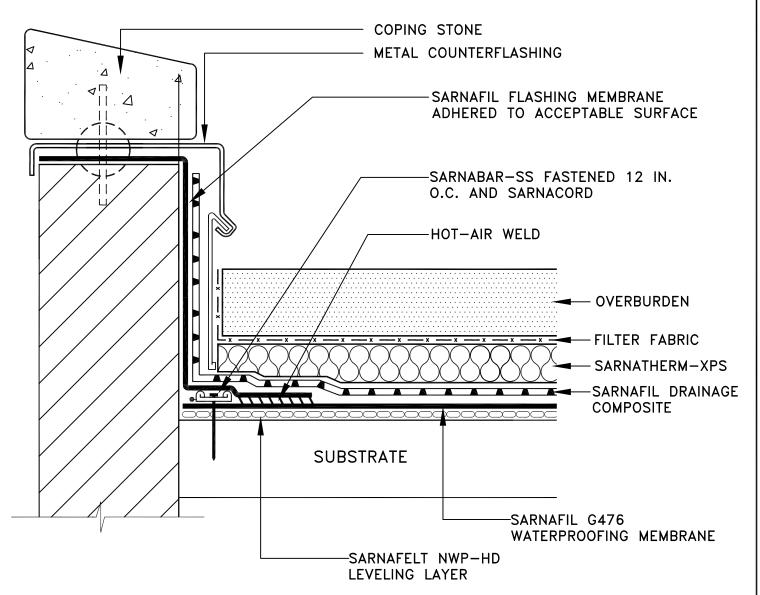

NOTES:

- 1) ALL FLASHING SHALL EXTEND A MIN. OF 8 INCHES ABOVE THE OVERBURDEN.
- 2) METAL COUNTERFLASHING AND COPING STONE ARE TO BE INSTALLED TO MEET LOCAL CODES AND REQUIREMENTS.

COPING STONE

