

BATCHING INSTRUCTIONS

1

Add fibers **LAST**

*ADD ONLY AFTER ALL
OTHER MATERIALS & TRUCK
IS WASHED DOWN.

NO EXCEPTIONS!*

Note: Bring SLUMP UP before adding fibers.



2

**ONE (1) BAG
Per Drum Turn**
(or until bag disappears)

****NOT APPLICABLE FOR STEEL FIBERS****




x 1

3

**MIX FOR 5 MINUTES
at high speed**
(~ 15 RPMs)



5 MIN

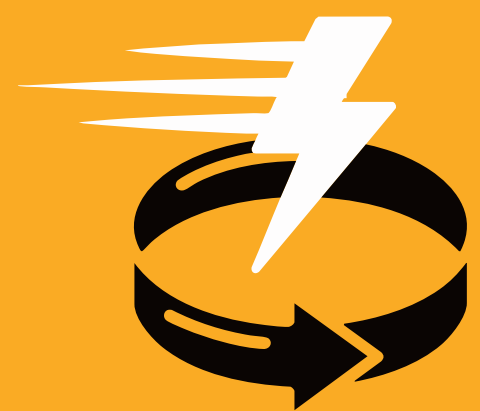

HIGH SPEED



QUESTIONS? CALL:

