


OPTION AT SLOPE-TO-FLAT TRANSITION

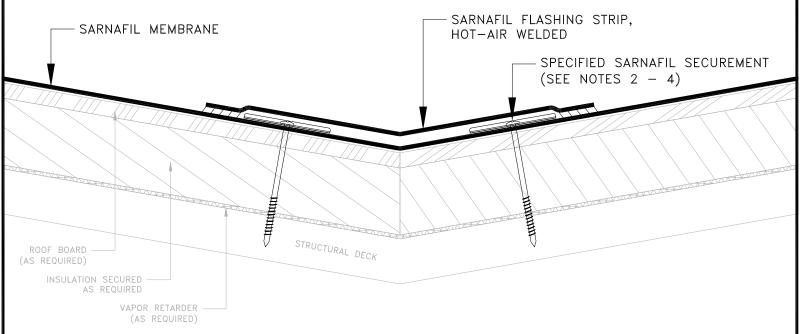

NOTES:

- 1) WOOD NAILER MAY BE REQUIRED AT VALLEY.
- 2) FASTENING IS REQUIRED IN MECHANICALLY ATTACHED SYSTEMS.
- 3) FASTENING IS REQUIRED ON SLOPES 5/12 AND GREATER WHEN USING SARNACOL 2170 / 2170 VC.
- 4) FASTENING IS REQUIRED ON SLOPES 2/12 AND GREATER WHEN USING SARNACOL 2121.

SLOPE TRANSITION (VALLEY)

