



Fastwall® 300 CI WaterMaster Stucco

Continuously Insulated Cement Plaster Stucco System
Featuring Sika Air/Water-Resistive Barrier
Typical Details

BUILDING TRUST



Fastwall 300 CI WaterMaster Stucco

Typical Details

Table of Contents


- | | |
|---|---|
| 1. Fastening Pattern | 16. Flanged Window Head |
| 2. Framed / Sheathed Construction | 17. Window Jamb (Flush) |
| 3. Masonry / Concrete Construction | 18. Window Jamb (Recessed) |
| 4. Termination at Foundation – Flush
with Casing / Stop Bead | 19. Flanged Window Jamb |
| 5. Termination at Foundation
with Casing / Stop Bead | 20. Window Sill (Flush) |
| 6. Termination at Foundation
with CI Weep Track | 21. Window Sill (Recessed) |
| 7. Change in Substrate | 22. Flanged Window Sill |
| 8. Trim Junction | 23. Pipe Penetration |
| 9. Surface Control Joint | 24. Dryer Vent |
| 10. Inside Corner Control Joint –
Framed / Sheathed Construction | 25. Downspout |
| 11. EPS Shape Application | 26. Light Fixture |
| 12. Corner Bead | 27. Termination at Metal Coping /
Roof Edge Flashing – Option 01 |
| 13. Decorative Shape | 28. Termination at Metal Coping /
Roof Edge Flashing – Option 02 |
| 14. Window Head (Flush) | 29. Flashing / Termination at Roof |
| 15. Window Head (Recessed) | 30. Kick-Out Flashing |

Notes:

- **The details within are the latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.**
- **Install Sika materials in accordance with current installation instructions.**
- **Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.**

Fastwall 300 CI WaterMaster Stucco

TYPICAL FASTENING PATTERN

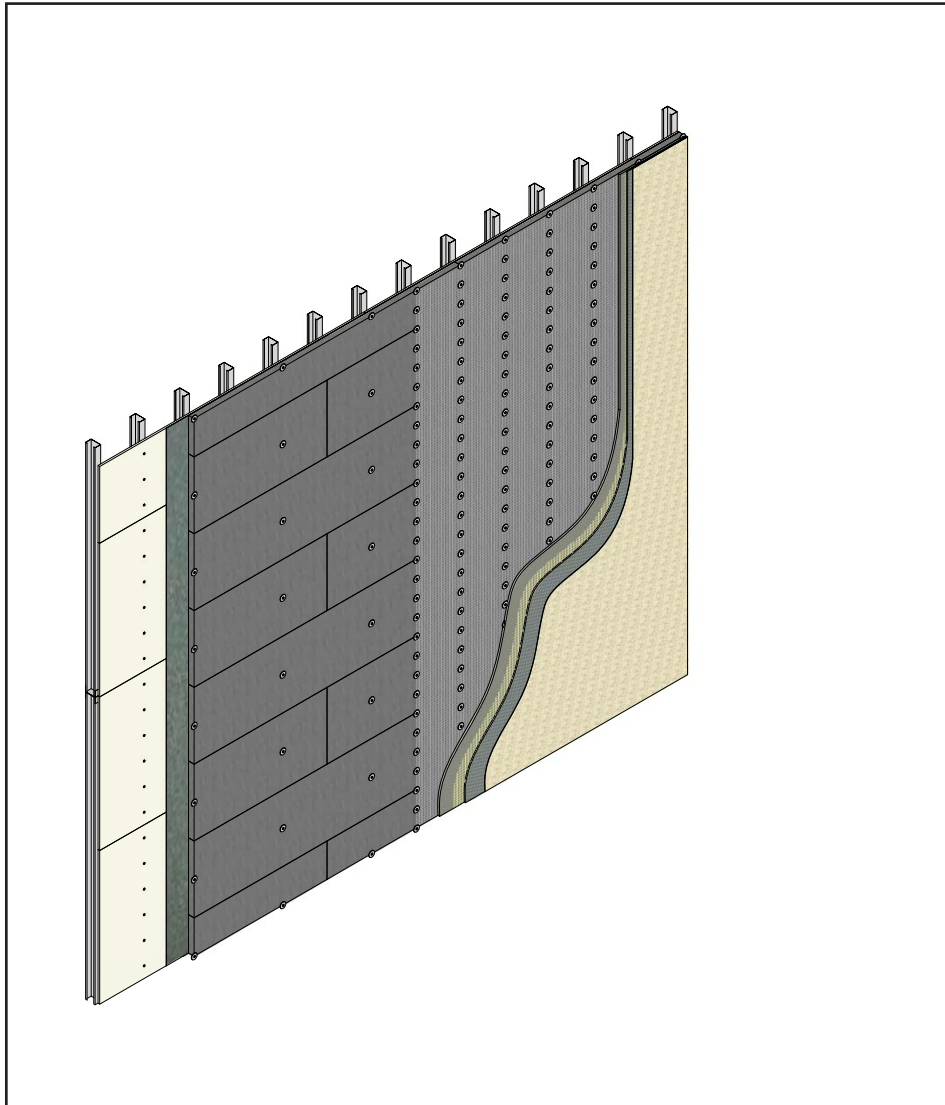

01 2604

(*NOTE: BY OTHERS)


- Sheathing:
Fasten per sheathing manufacturer's recommendations or project design requirements.
- Approved Rigid Insulation Board:
Secure with 2 to 3 fasteners per board to hold in place until lath is installed.
- Lath – SikaWall PermaLath 1000: use appropriate fasteners spaced not more than 6" (152 mm) o.c. vertically, 16" (406 mm) o.c. horizontally; metal or wire lath: use appropriate fasteners spaced not more than 7" (178 mm) o.c. vertically, 16" (406 mm) or 24" (610 mm) o.c. horizontally, per requirements of ASTM C1063. Refer to Sika Fastwall 300 WaterMaster CI specifications.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL FRAMED/SHEATHED CONSTRUCTION

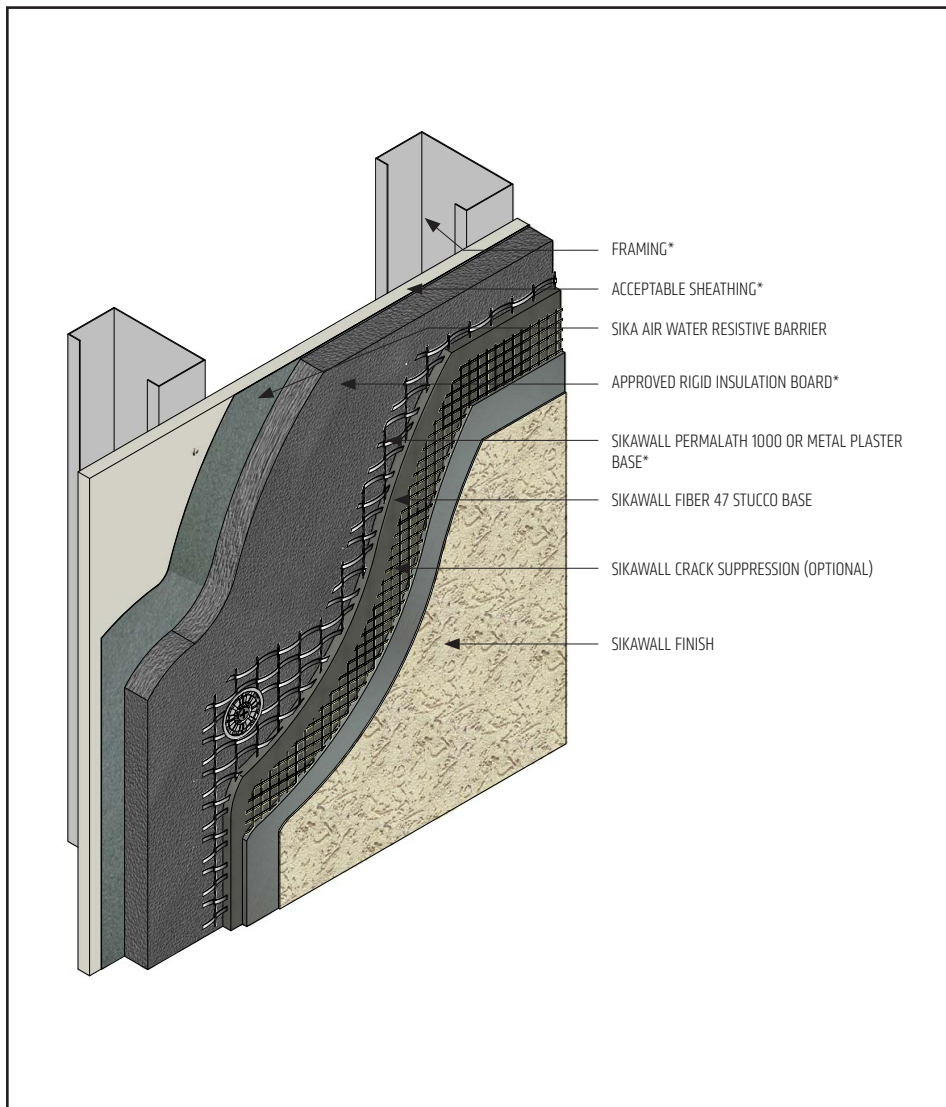

02 2604

(*NOTE: BY OTHERS)


- Ensure Sika Air Water Resistive Barrier is dry prior to Rigid Insulation Board installation.
- Basic requirements for Plaster Base:
 - Fiber 47 Stucco Base equal to or greater than 1/2" thickness: SikaWall PermaLath 1000 or min. 1 1/2" 17 ga. wire, min. 2.5 lb/sq. yd. metal lath or acceptable alternative.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level coat.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL MASONRY/CONCRETE CONSTRUCTION

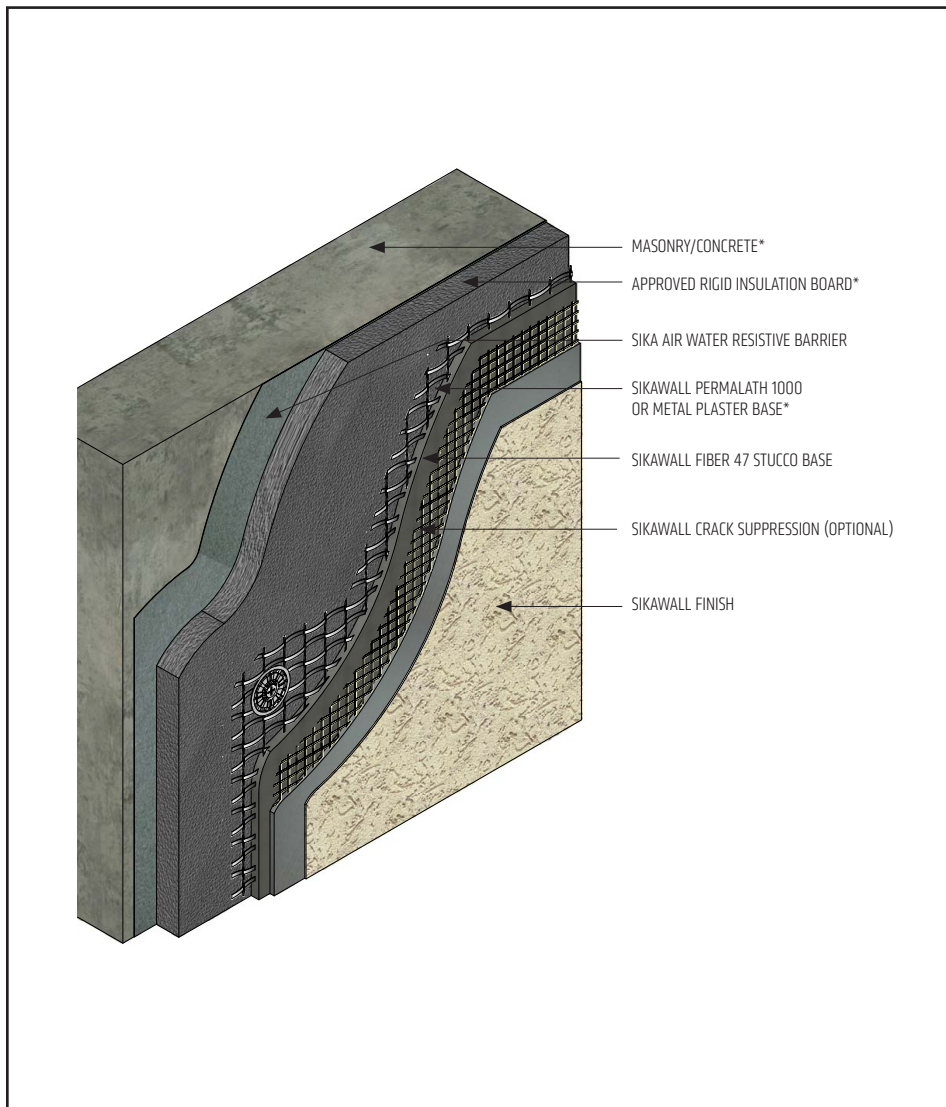

03 2604

(*NOTE: BY OTHERS)


- Multiple coats of Sika Air Water Resistive Barrier may be required to achieve a pin-hole free application.
- Ensure Sika Air Water Resistive Barrier is dry prior to Rigid Insulation Board installation.
- Basic requirements for Plaster Base:
 - Fiber 47 Stucco Base equal to or greater than 1/2" thickness: SikaWall PermaLath 1000 or min. 1 1/2" 17 ga. wire, min. 2.5 lb/sq. yd. metal lath or acceptable alternative.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level coat.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL TERMINATION AT FOUNDATION – FLUSH WITH CASING / STOP BEAD

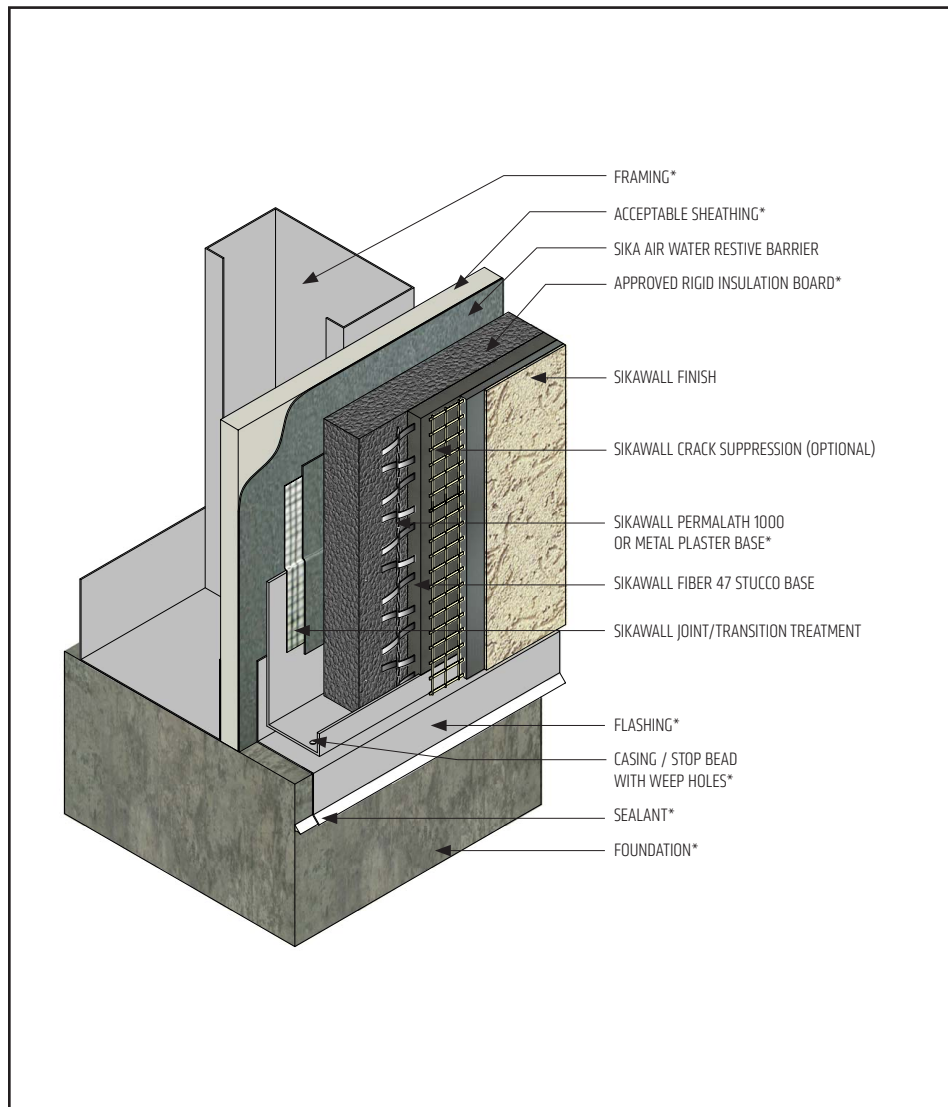

04 2604

(*NOTE: BY OTHERS)


- Terminate the Sika Fastwall 300 CI WaterMaster Stucco system a minimum of 6" (152 mm) above raw earth and 2" (50 mm) above paved surface.
- Use SikaWall Transition Treatment to lap on to the casing/stop bead flange.
- Ensure casing/stop bead includes weep holes to facilitate drainage.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in a Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level coat.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL TERMINATION AT FOUNDATION WITH CASING / STOP BEAD

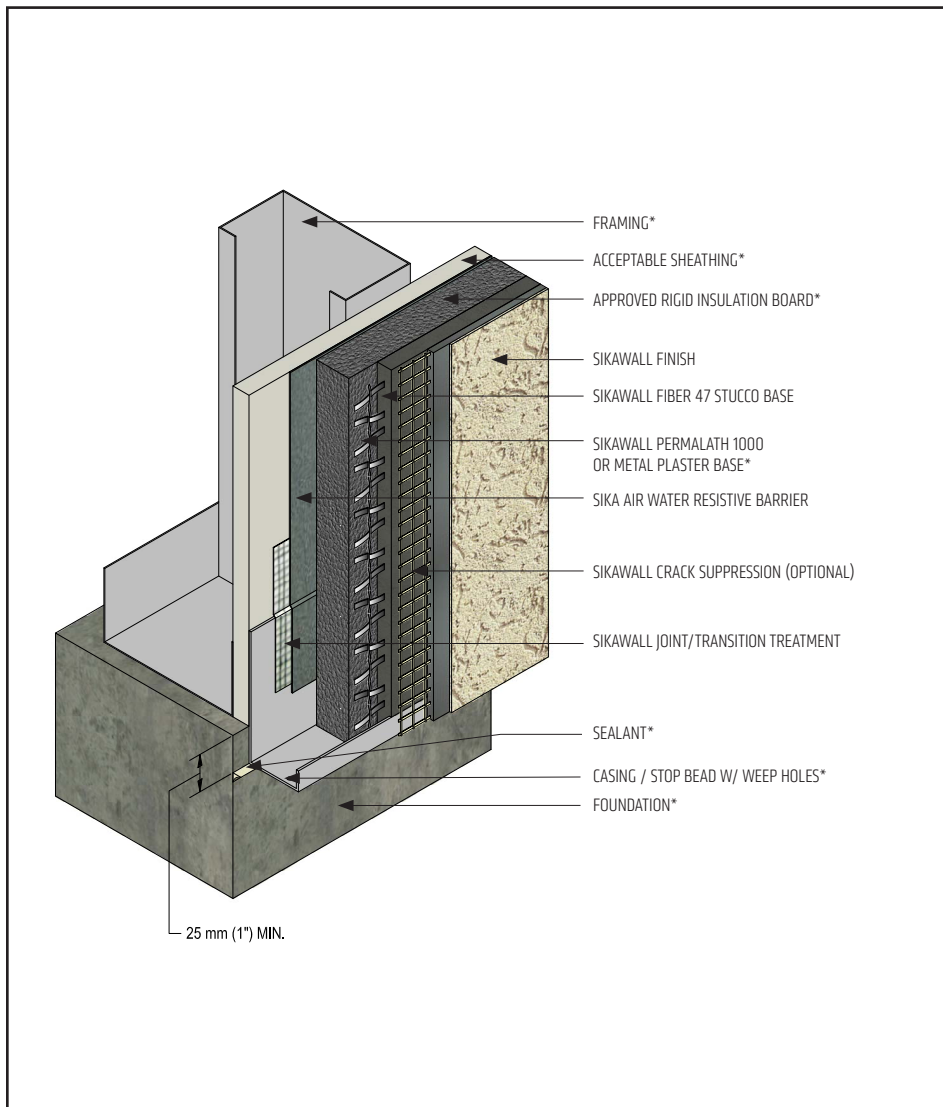

05 2604

(*NOTE: BY OTHERS)


- Terminate the Sika Fastwall 300 CI WaterMaster Stucco system a minimum of 6" (152 mm) above raw earth and 2" (50 mm) above paved surface.
- Provide minimum 1" (25 mm) overlap at framing/foundation transition.
- Use SikaWall Transition Treatment to lap on to the casing/stop bead flange.
- Ensure casing/stop bead includes weep holes to facilitate drainage.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in a Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level coat.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL TERMINATION AT FOUNDATION WITH CI WEEP TRACK

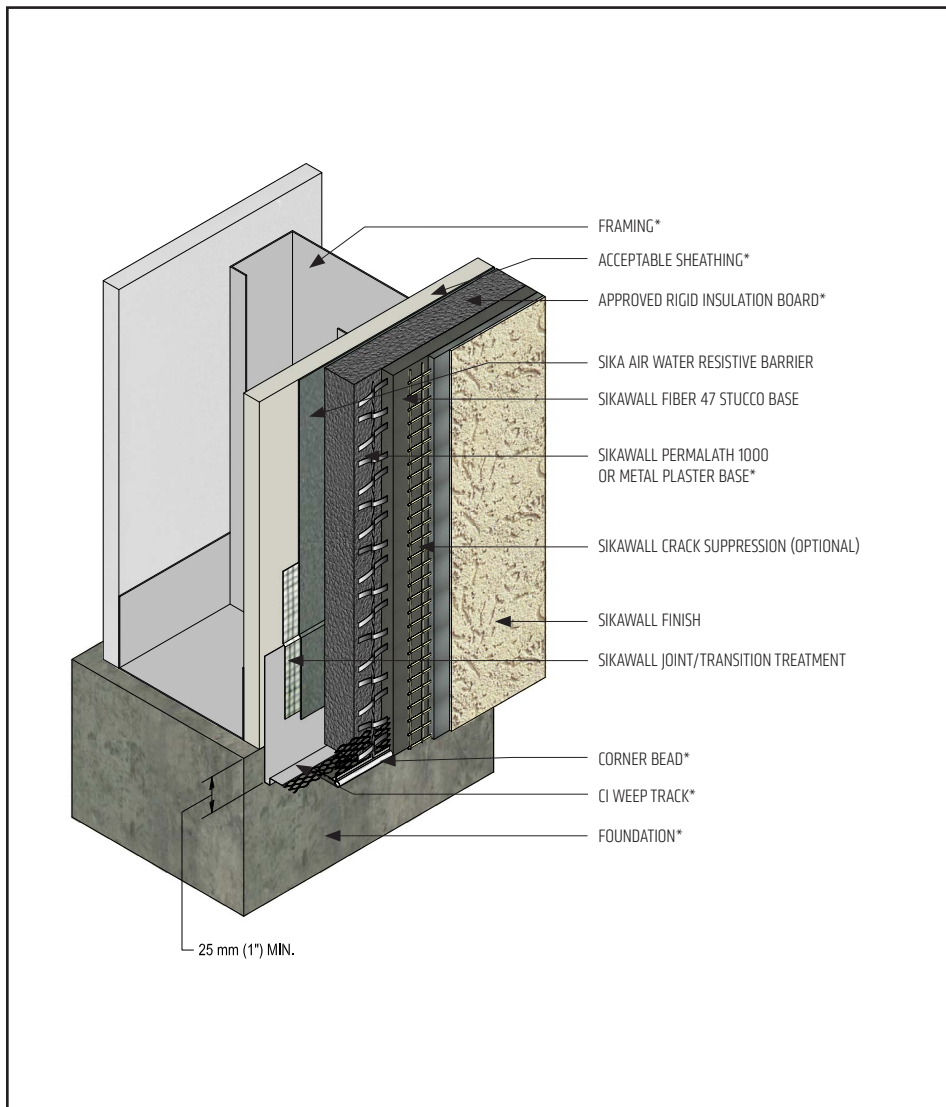

06 2604

(*NOTE: BY OTHERS)


- Terminate the Fastwall 300 CI WaterMaster system a minimum of 6" (152 mm) above raw earth and 2" (50 mm) above paved surface.
- Provide minimum 1" (25 mm) overlap at framing/foundation transition.
- Use SikaWall Transition Treatment to lap on to the CI Weep Track flange.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level coat.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL CHANGE IN SUBSTRATE

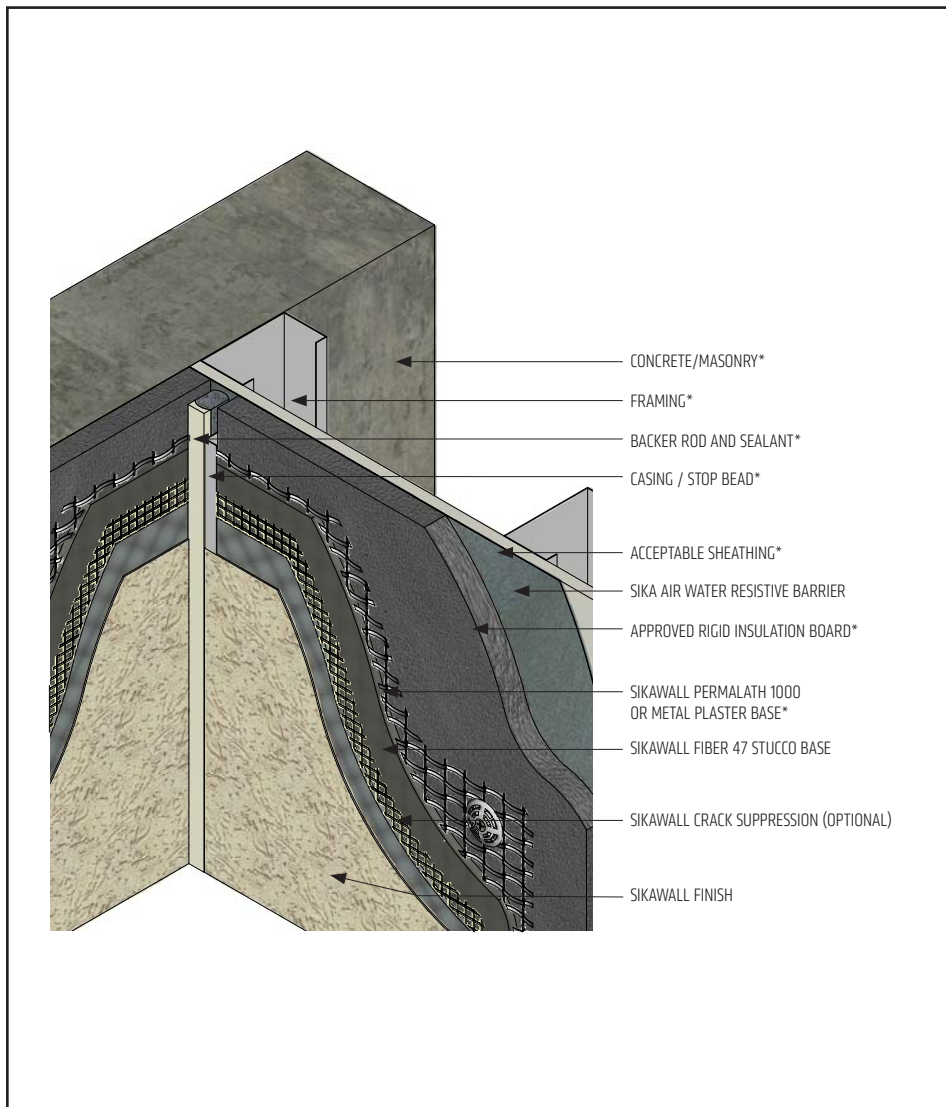

07 2604

(*NOTE: BY OTHERS)


- Ensure Sika Air Water Resistive Barrier application is continuous behind the Sika Fastwall 300 CI WaterMaster Stucco system at change in substrate – apply SikaWall Flash Seal NP at change in substrate followed by fully coating with Sika Air Water Resistive Barrier.
- Do not apply finish into joint to receive sealant.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- Reference "Acceptable Sealants for use with Sika EIFS and Stucco Systems" Technical Bulletin for a list of sealants.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL TRIM JUNCTION

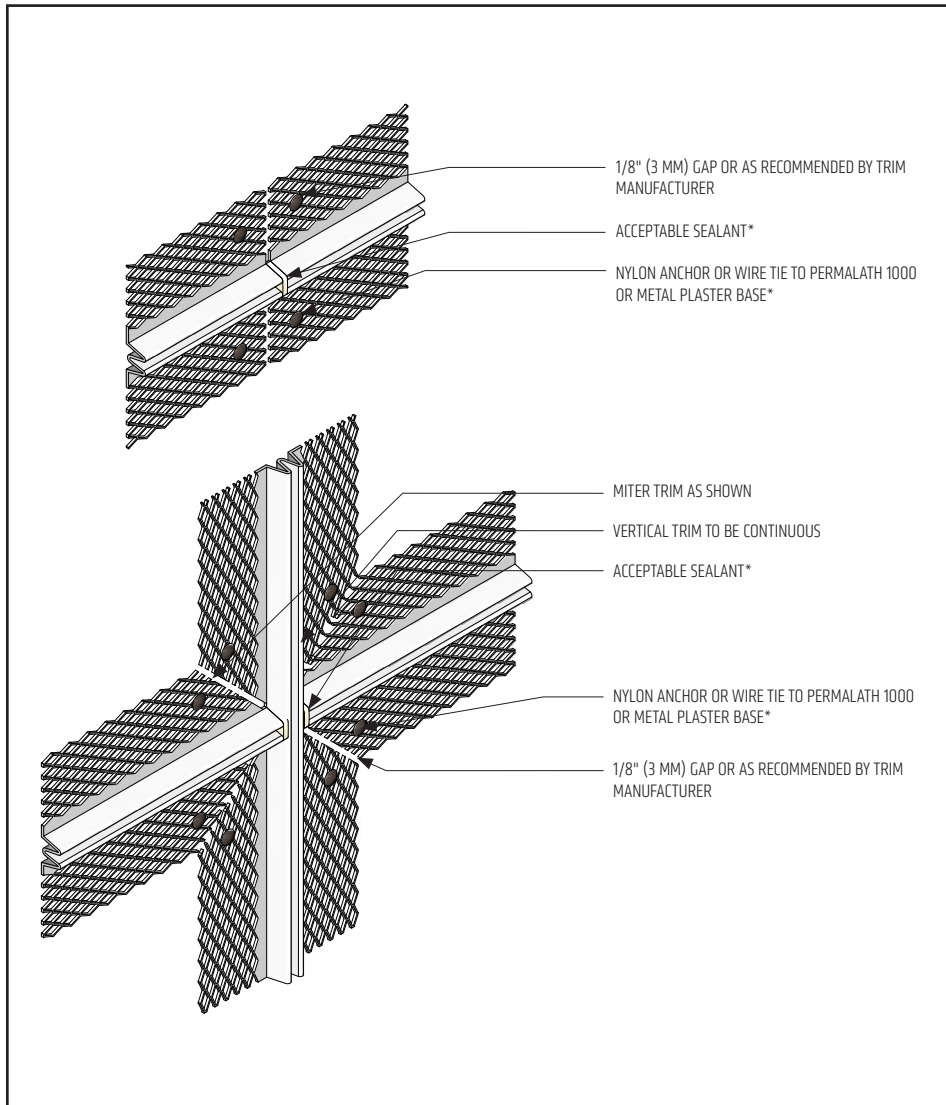

- At trim intersection it is recommended that the vertical trim be continuous.

08 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL SURFACE CONTROL JOINT

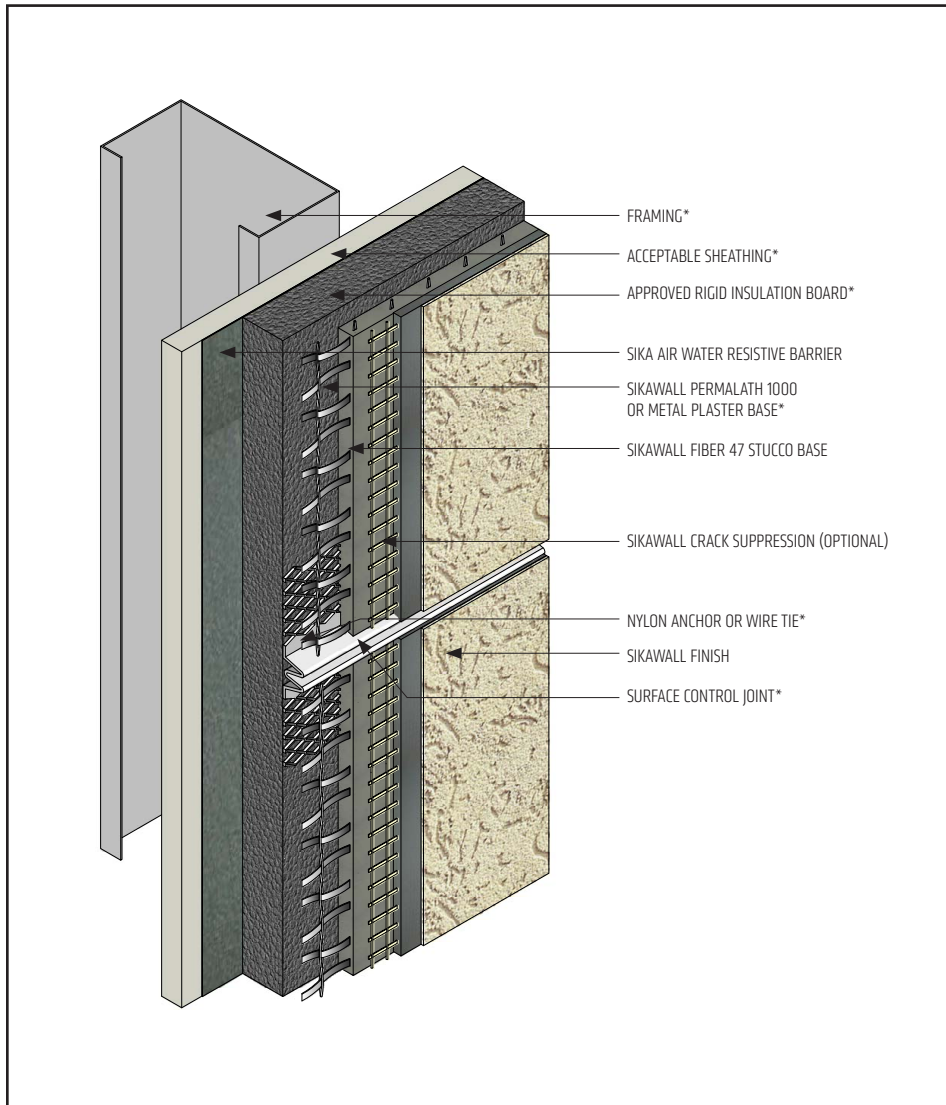

- Provide control joints every 144 ft² (13 m²) or placement as determined by the Design Professional. Maximum recommended uncontrolled length or width is 18 ft (5.5 m) and a maximum uncontrolled length to width ratio of 2-1/2 to 1.
- Lath must be broken at the control joint accessory.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

09 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL INSIDE CORNER CONTROL JOINT – FRAMED / SHEATHED CONSTRUCTION

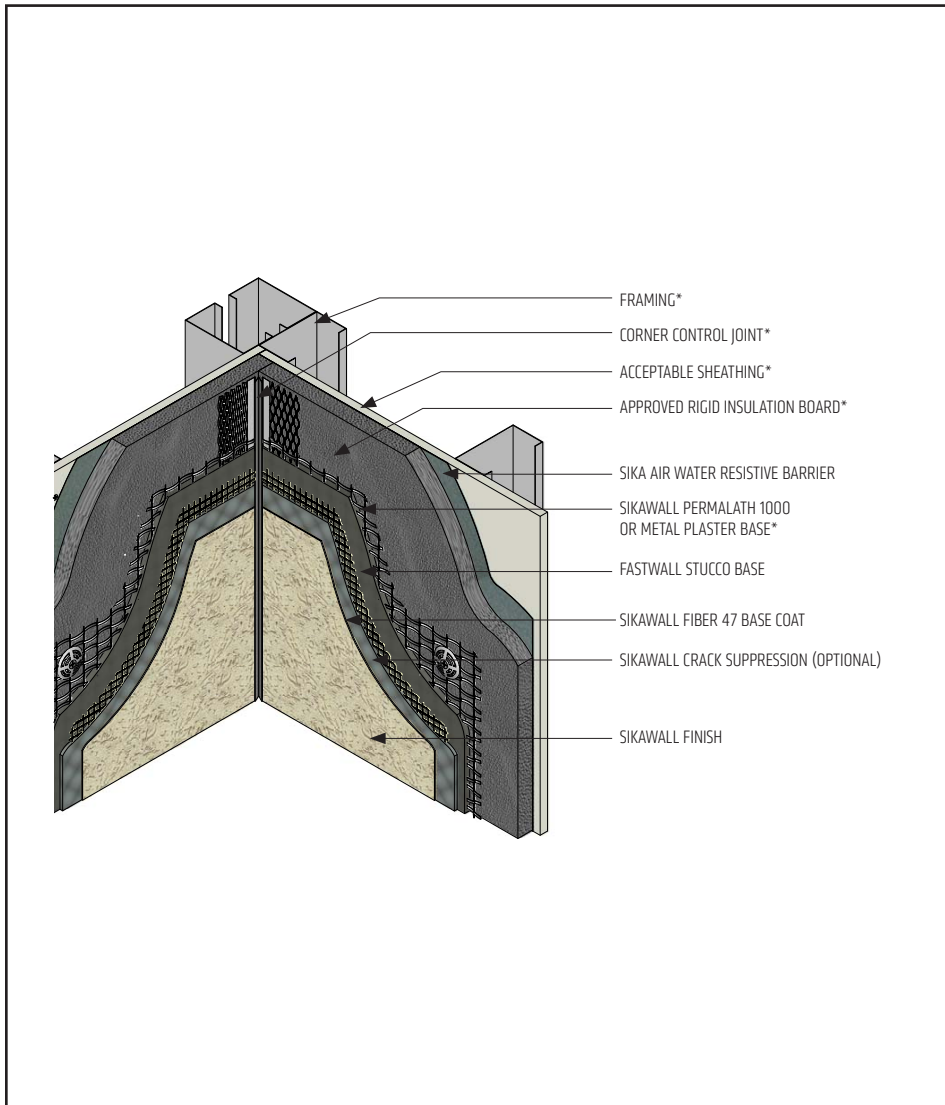

- Ensure Sika Air Water Resistive Barrier application is continuous behind the Fastwall 300 CI WaterMaster system – apply SikaWall Transition Treatment at inside corner.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.

10 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL EPS OR GPS SHAPE APPLICATION

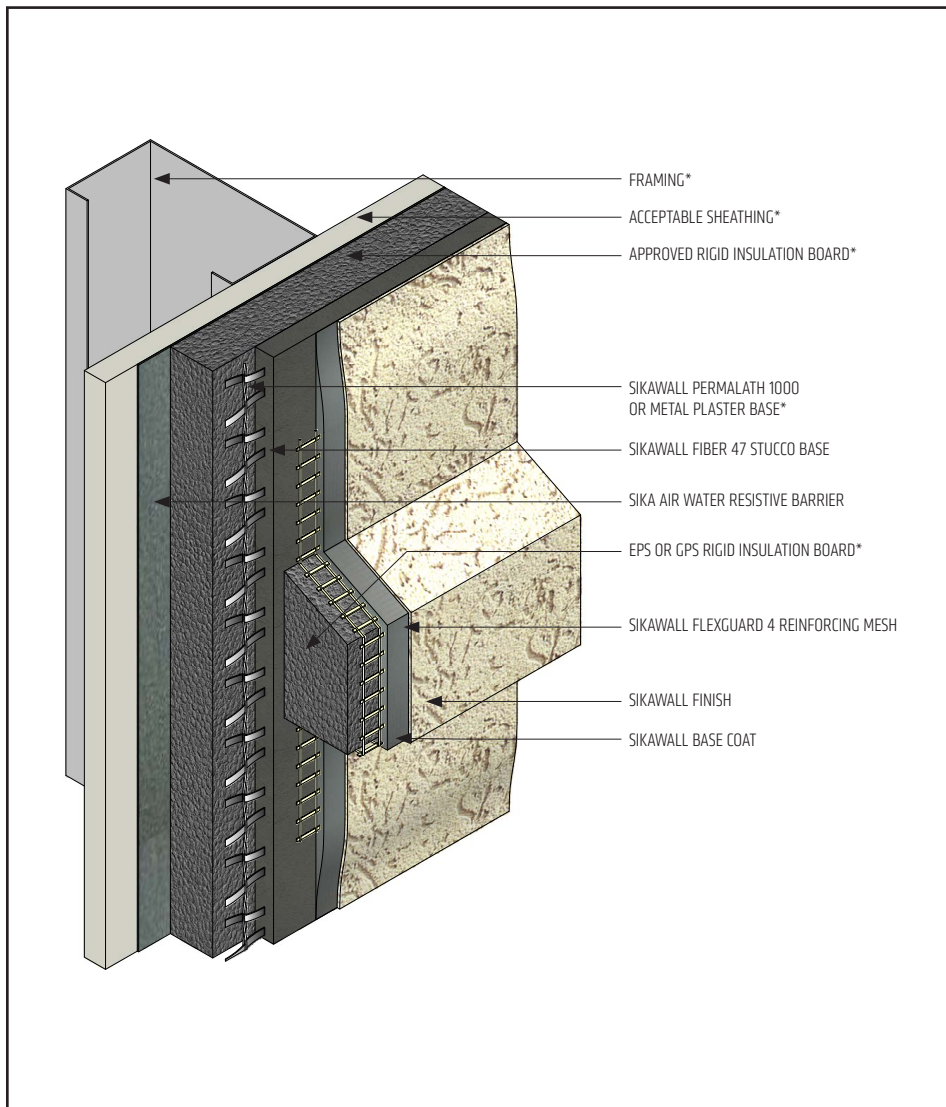

- Extend SikaWall Reinforcing Mesh and SikaWall Base Coat from band or shape onto Fastwall Stucco Base a minimum of 3" (76 mm).
- Provide a 6:12 slope on horizontal applications greater than 1".
- Adhere EPS or GPS Rigid Insulation band/ shape with SikaWall Base Coat to Fiber 47 Stucco Base surface.

11 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL CORNER BEAD

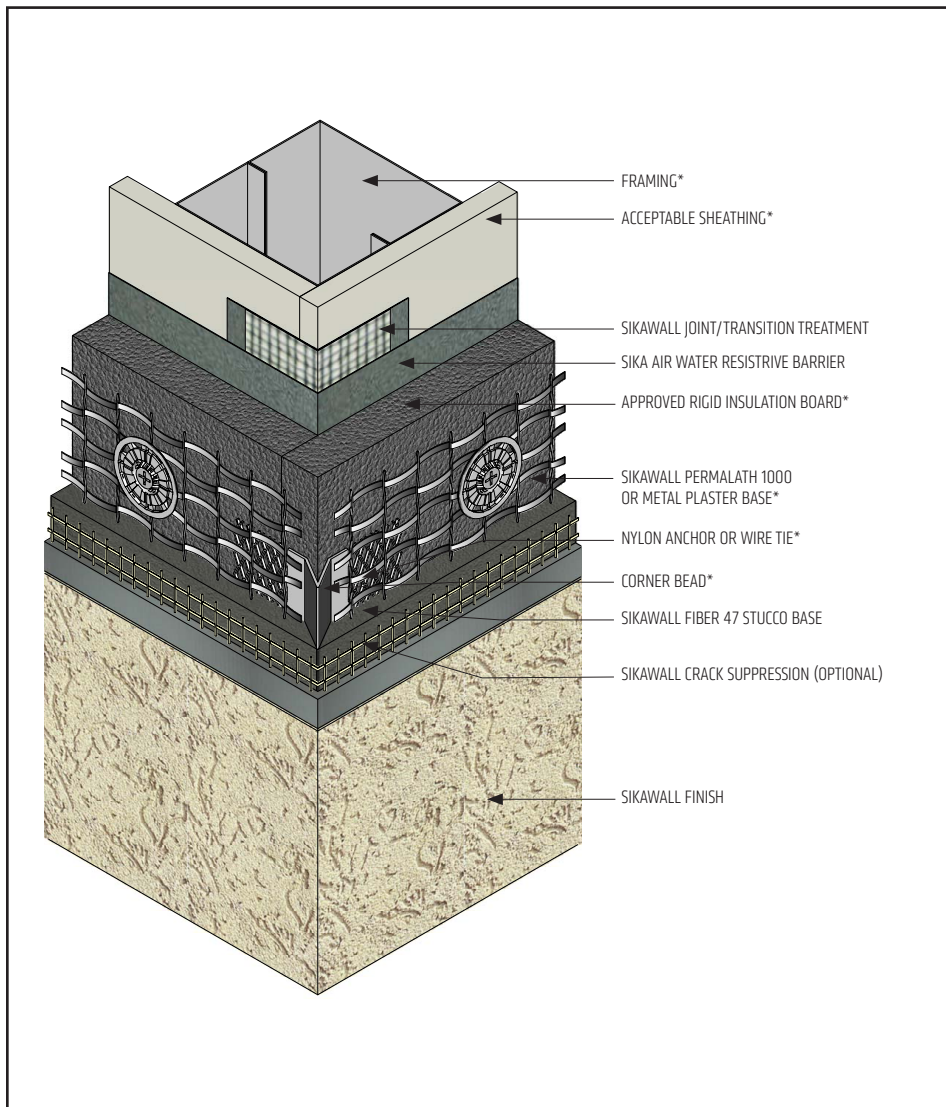

- Attach corner bead with wire ties, anchors or fasteners to resist movement during application of Fiber 47 Stucco Base.
- Fill corner bead solid with Fiber 47 Stucco Base.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

12 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL DECORATIVE SHAPE

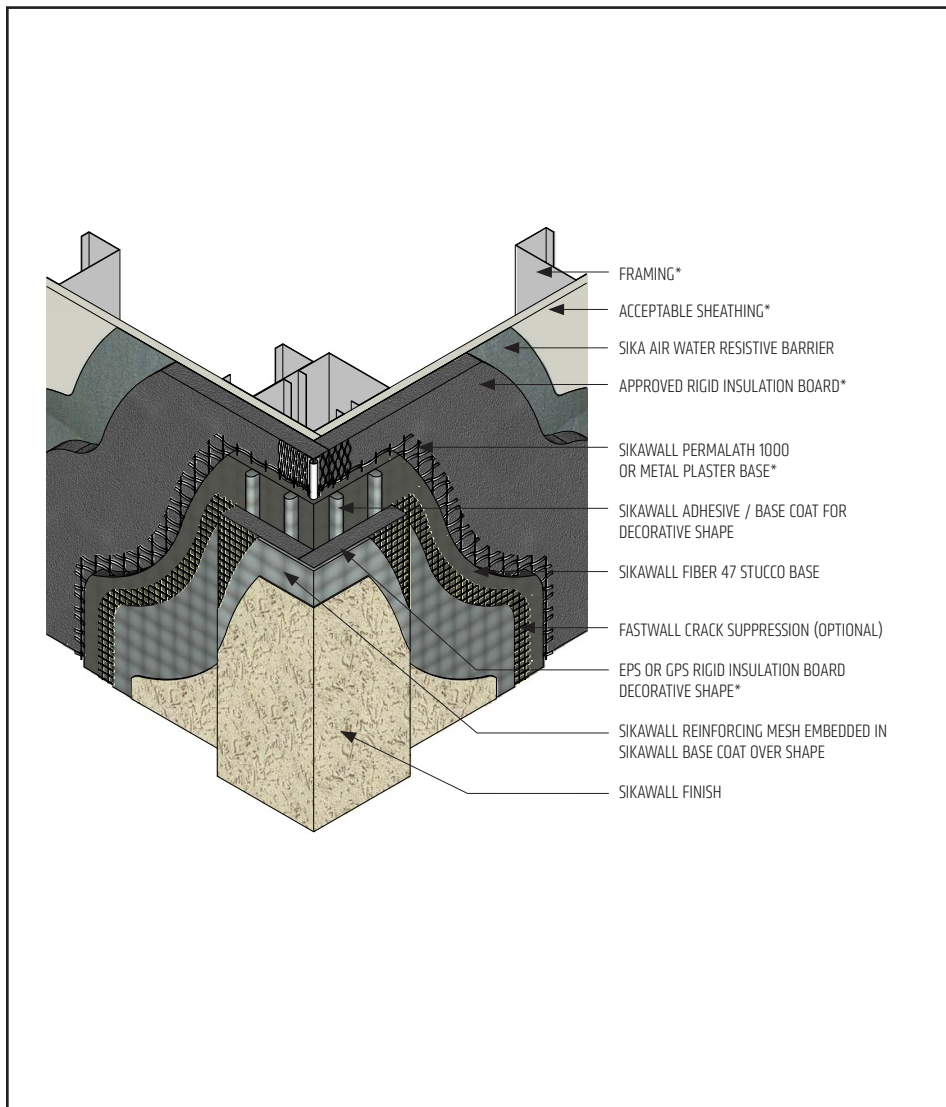

- Extend SikaWall Reinforcing Mesh and SikaWall Base Coat from band or shape onto Fiber 47 Stucco Base a minimum of 3" (76 mm).
- Adhere EPS or GPS Rigid Insulation band/ shape with SikaWall Base Coat to Fiber 47 Stucco Base surface.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

13 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL WINDOW HEAD (FLUSH)

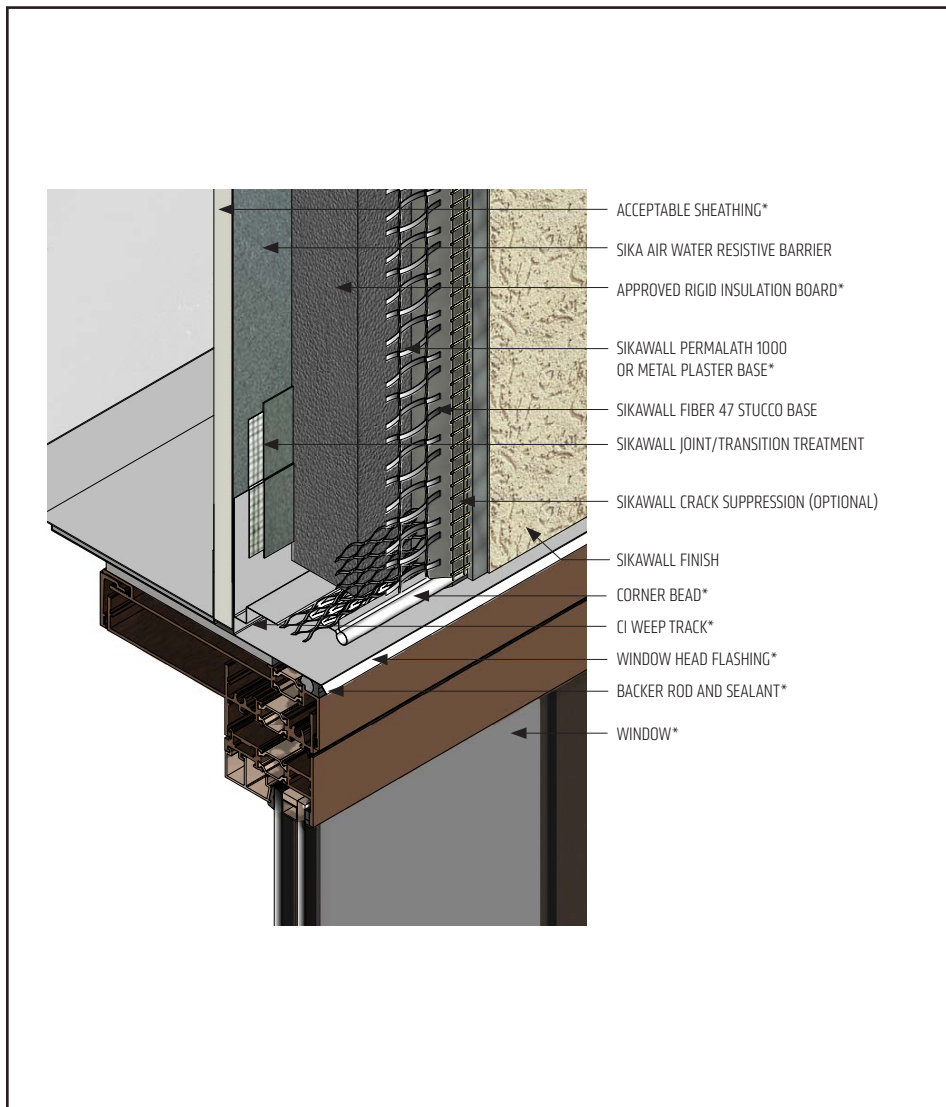

- Use SikaWall Transition Treatment to lap on to the CI Weep Track flange.
- Provide end-dams at flashing terminations.
- Seal flashing drip edge to window frame.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

14 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL WINDOW HEAD (RECESSED)

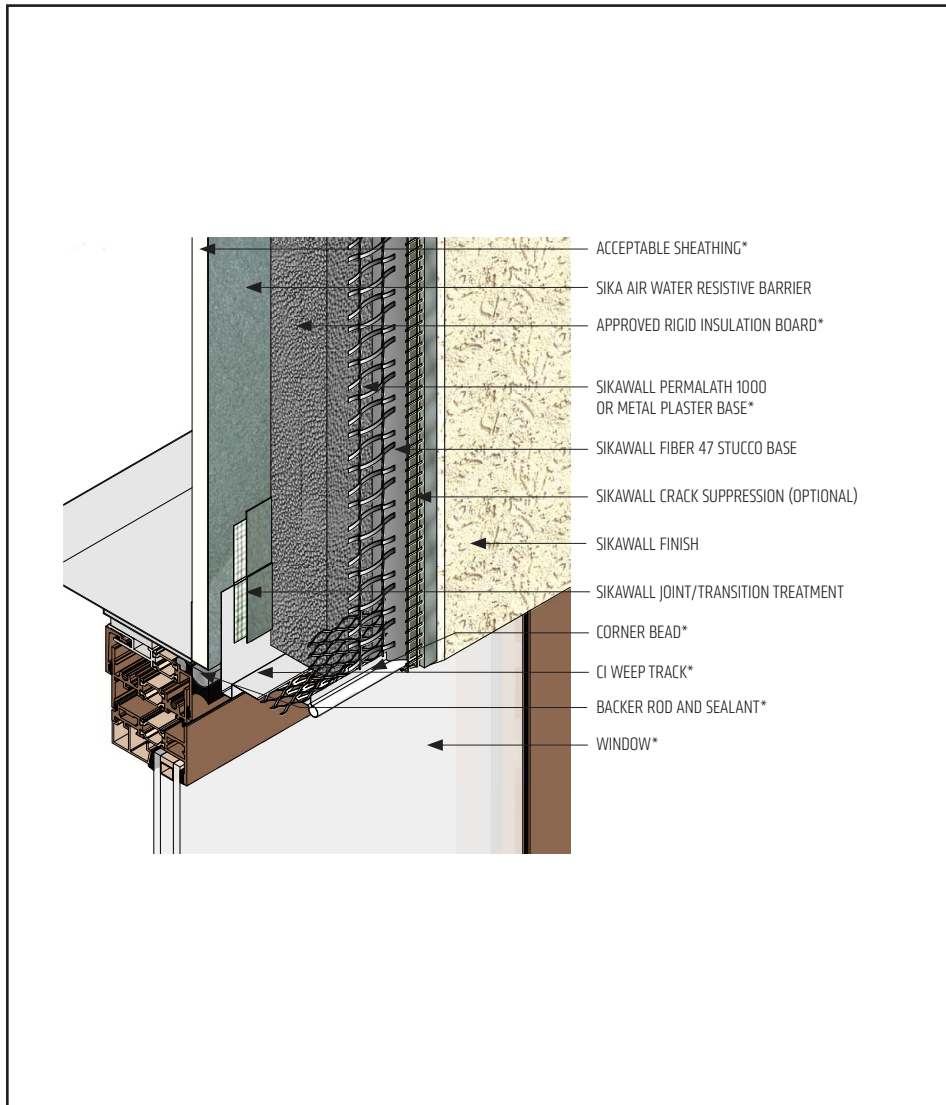

- Use SikaWall Transition Treatment to lap on to the CI Weep Track flange.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

15 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL FLANGED WINDOW HEAD

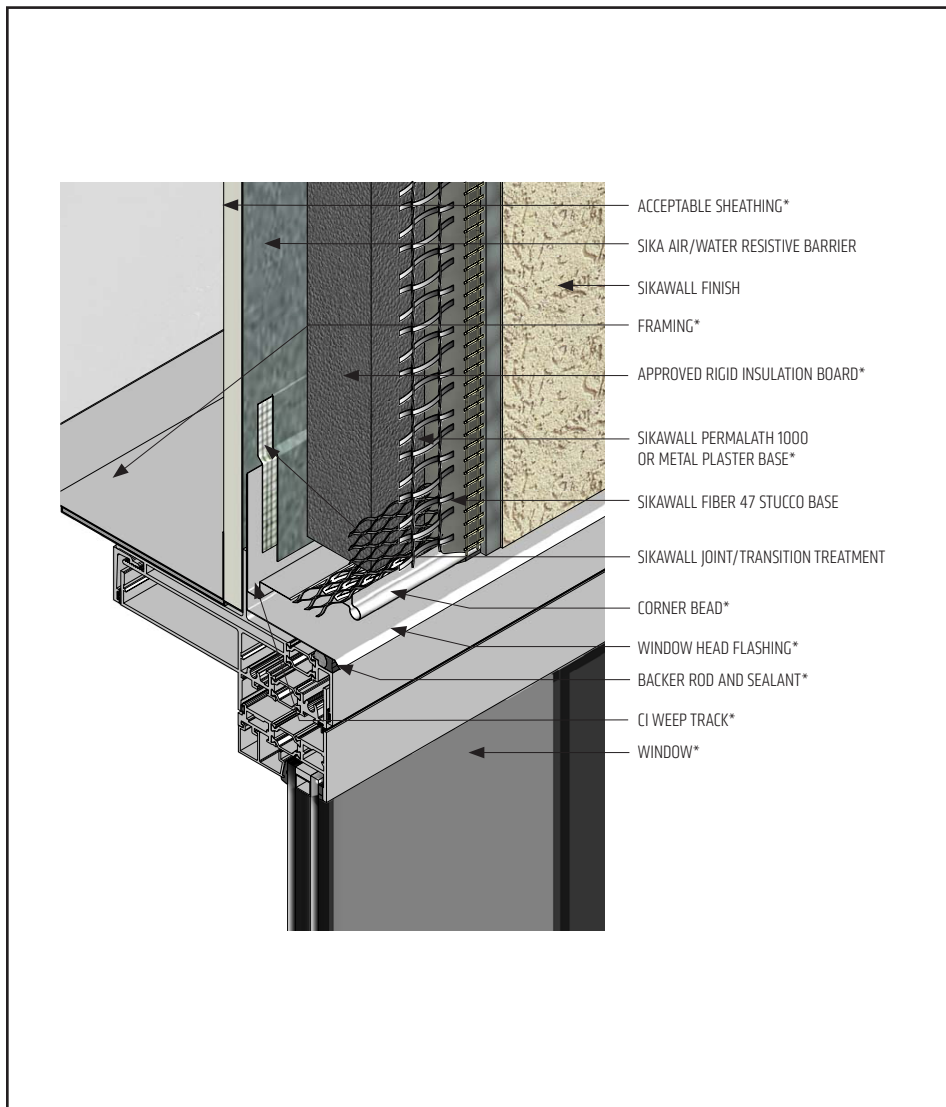

- As recommended by window manufacturer, apply sealant to back of window flange at head prior to installation of window.
- Use SikaWall Transition Treatment to lap on to the CI Weep Track flange.
- Provide end-dams at flashing terminations.
- Seal flashing drip edge to window frame.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

16 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL WINDOW JAMB (FLUSH)

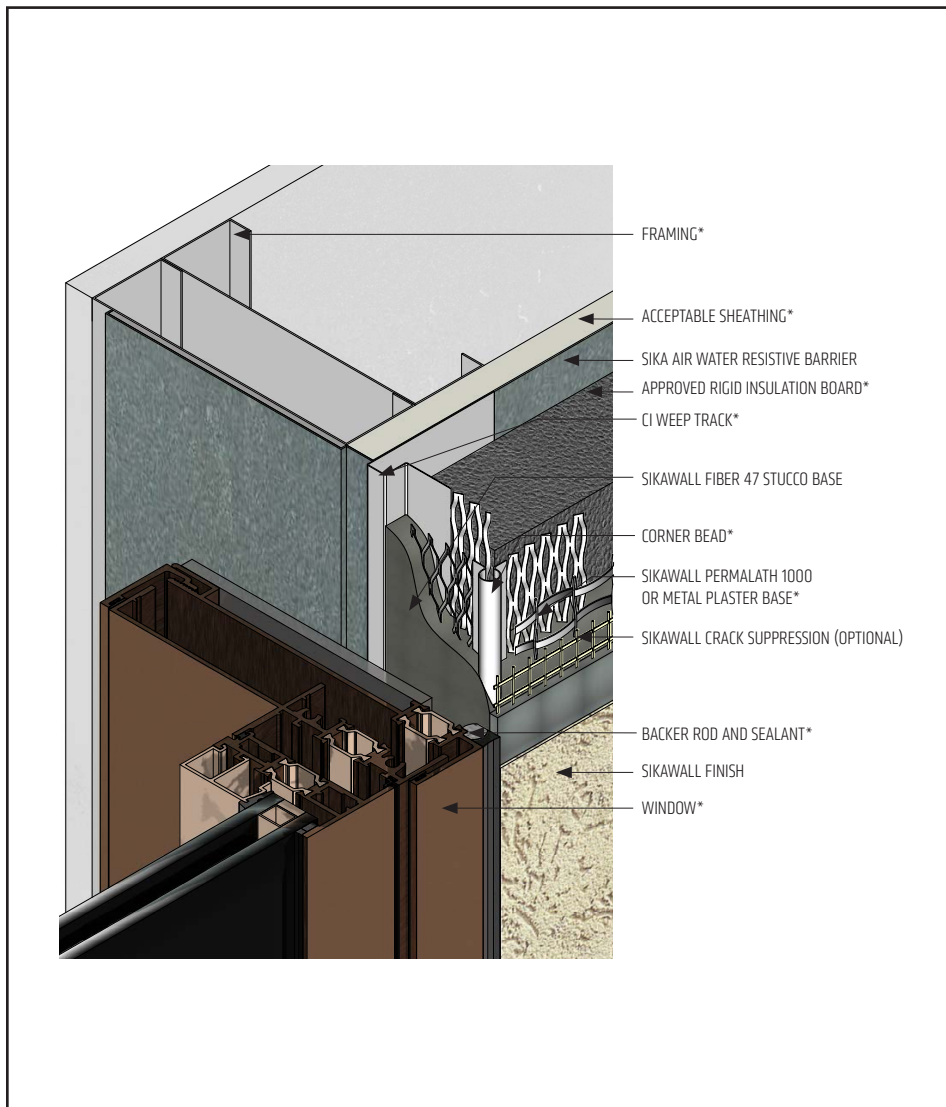

- Ensure Sika Air water Resistive Barrier and using SikaWall Joint/Transition Treatment are properly applied into rough opening in accordance with application guidelines. Reference Sika Air Water Resistive Barrier details.
- Do not apply finish into joint to receive sealant.
- Use non-hole punched version of CI Weep Track on jambs.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

17 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL WINDOW JAMB (RECESSED)

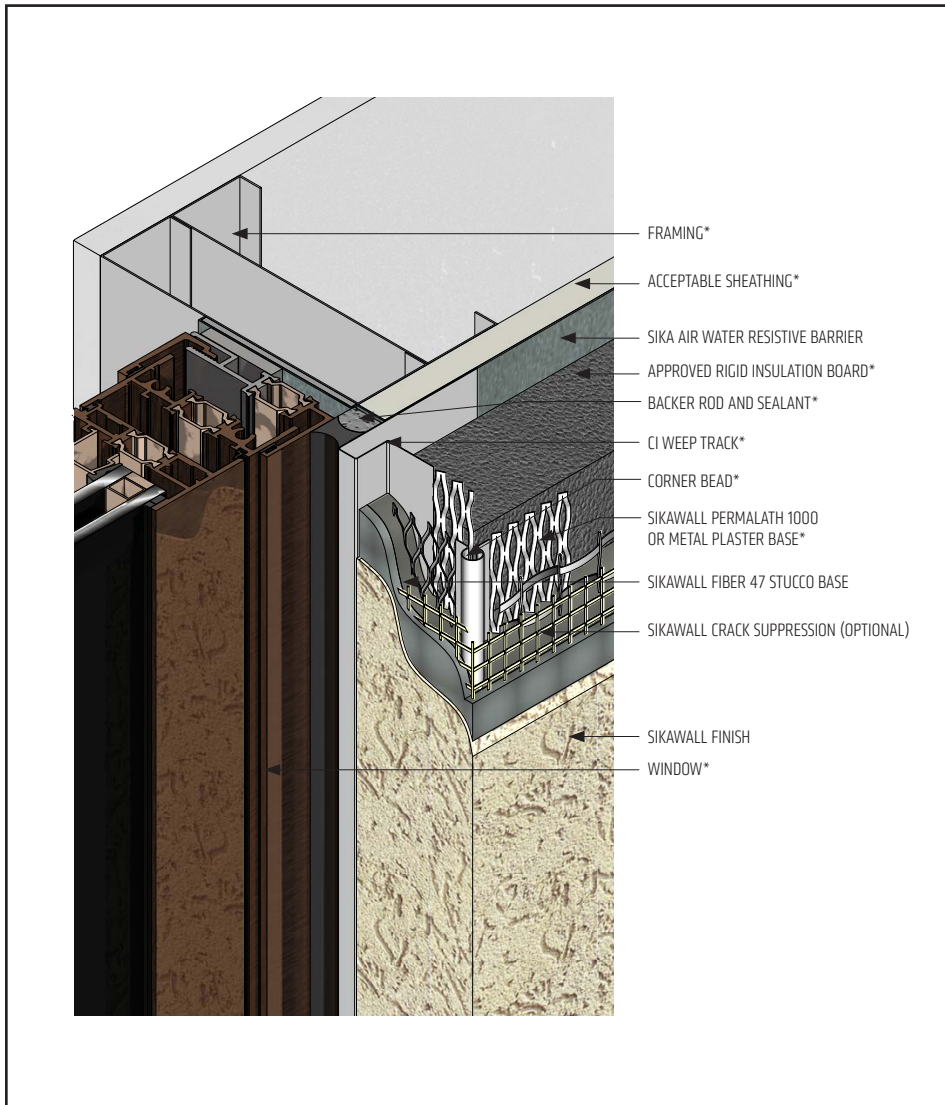

- Ensure Sika Air Water Resistive Barrier and using SikaWall Joint/Transition Treatment are properly applied into rough opening in accordance with application guidelines. Reference Sika air/water-resistive barrier details.
- Use non-hole punched version CI Weep Track on jambs.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air / Water-Resistive Barrier or SikaWall Flash Seal NP.

18 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL FLANGED WINDOW JAMB

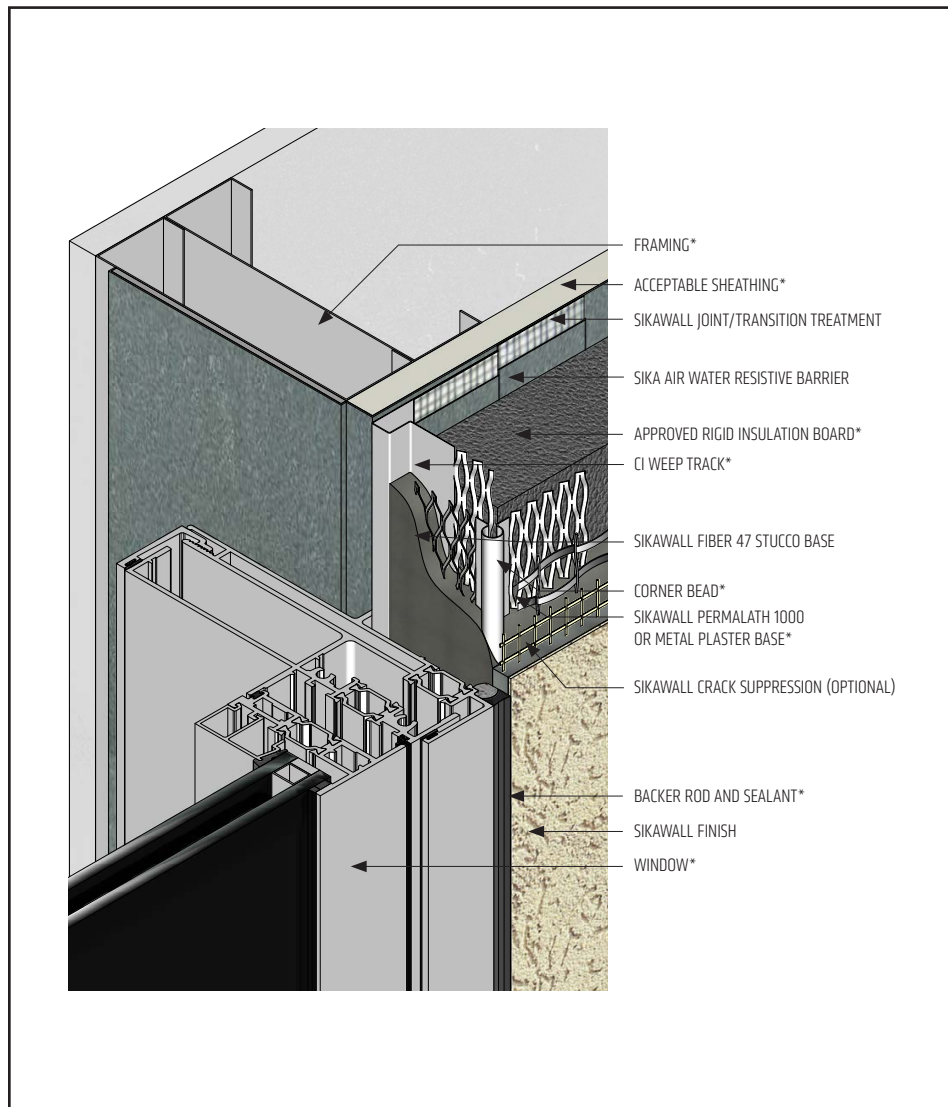

- Ensure Sika Air Water Resistive Barrier is properly applied into rough openings in accordance with application guidelines. Reference Sika air/water-resistive barrier details.
- As recommended by window manufacturer, apply sealant to back of window flange at jamb prior to installation of window.
- Use non-hole punched version of CI Weep Track on jambs.
- Use SikaWall Transition Treatment to lap on to the CI Weep Track flange.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- Reference "Acceptable Sealants for use with Sika EIFS and Stucco Wall Systems" Technical Bulletin for a list of sealants.

19 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL WINDOW SILL (FLUSH)

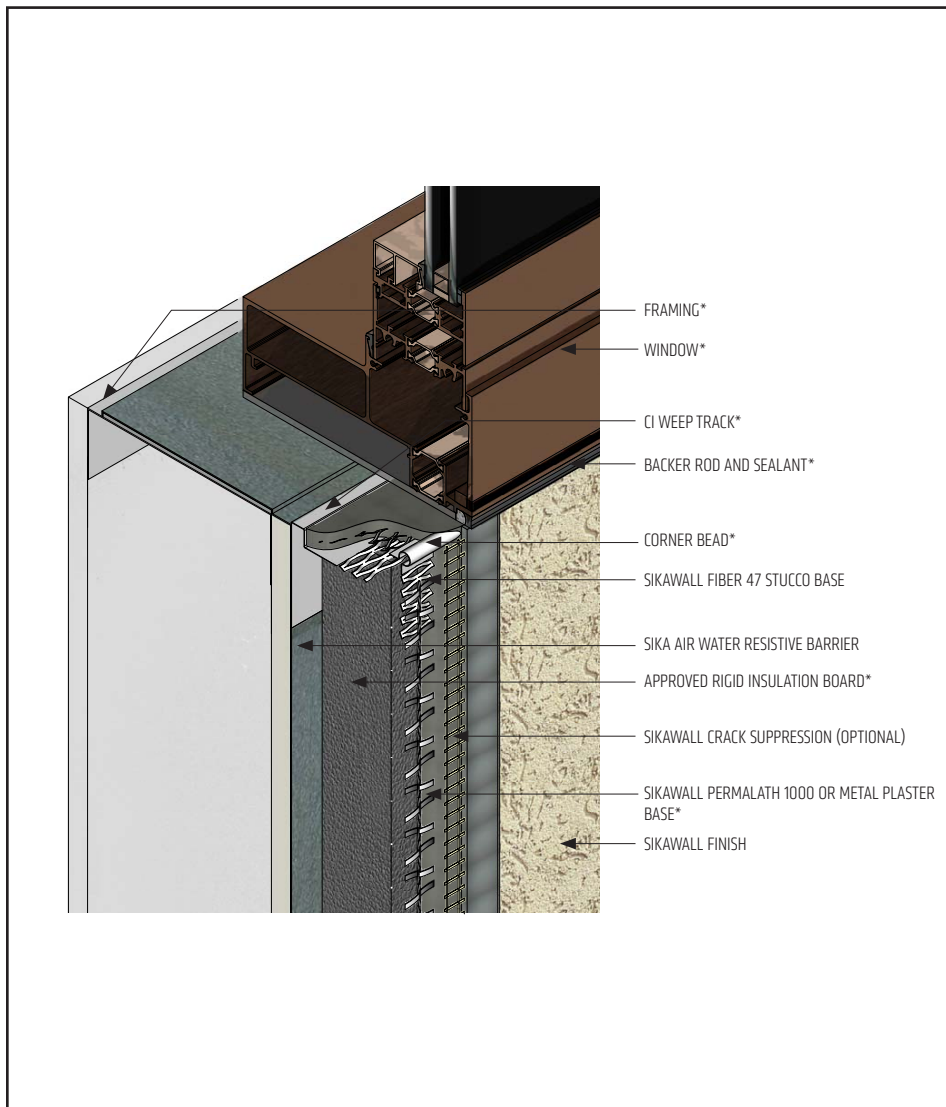

- Ensure Sika Air Water Resistive Barrier is properly applied into rough opening in accordance with application guidelines. Reference Sika air/water-resistive barrier details.
- Do not apply finish into joint to receive sealant.
- Use non-hole punched version of CI Weep Track on sill.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

20 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL WINDOW SILL (RECESSED)

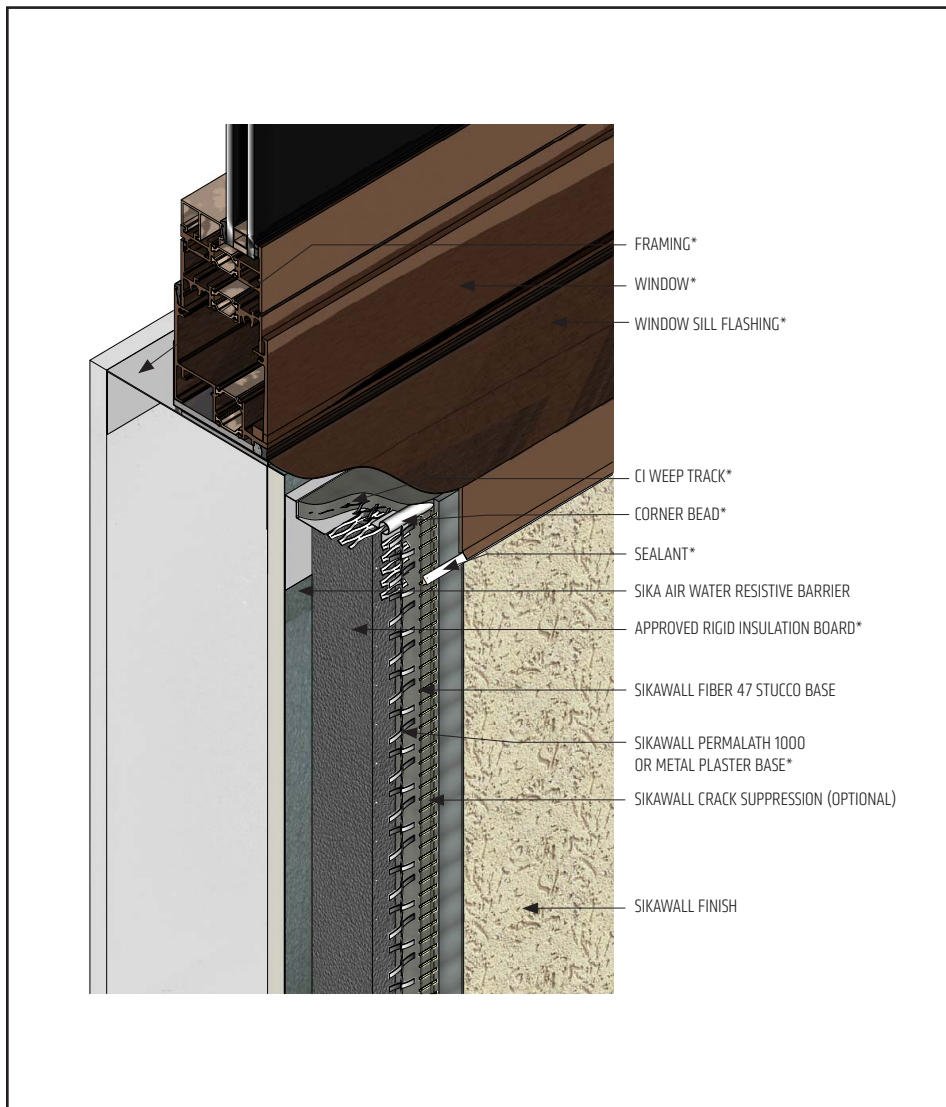

- Ensure Sika Air Water Resistive Barrier is properly applied into rough opening in accordance with application guidelines. Reference Sika air/water-resistive barrier details.
- Use non-hole punched version of CI Weep Track on sill.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

21 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL FLANGED WINDOW SILL

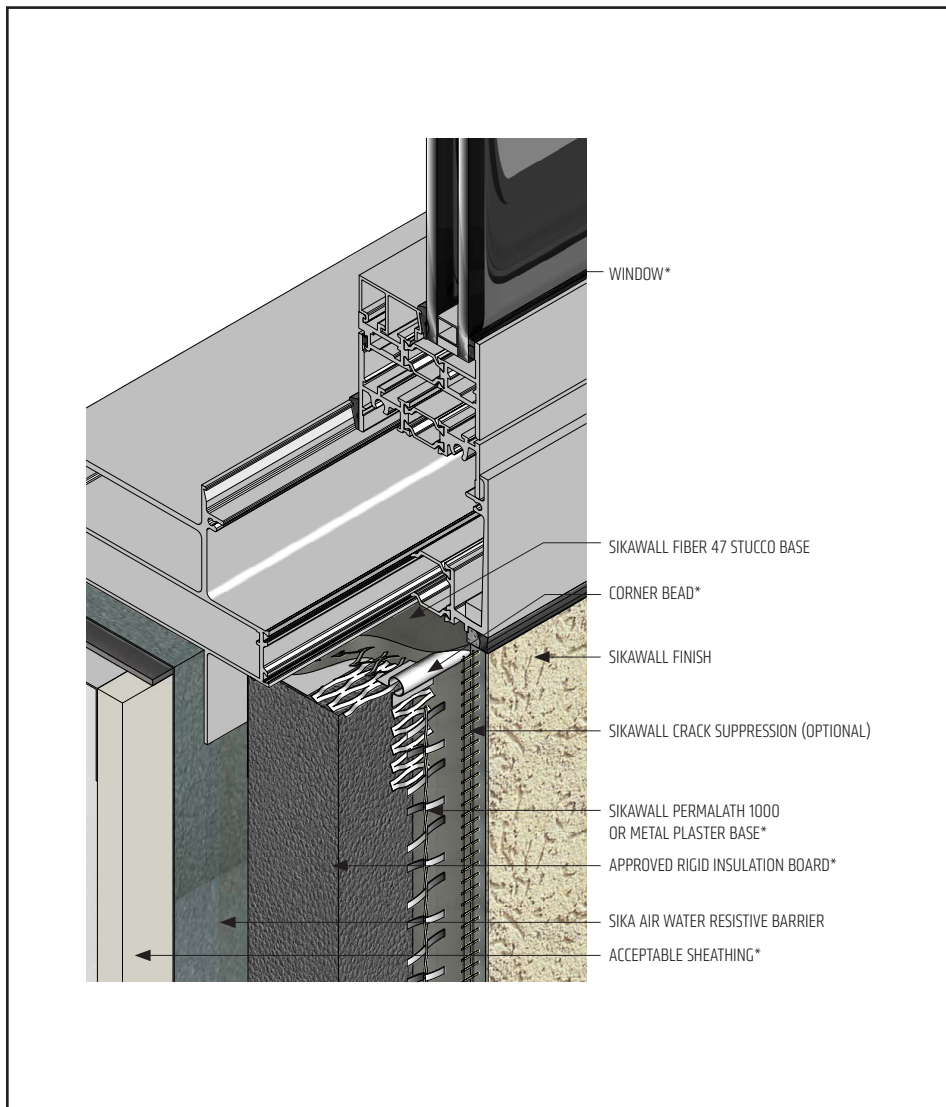

- Ensure Sika Air Water Resistive Barrier is properly applied into rough opening in accordance with application guidelines. Reference Sika air/water-resistive barrier details.
- Do not seal window sill flange unless recommended by window manufacturer.
- Use non-hole punched version of CI Weep Track on sill.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

22 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL PIPE PENETRATION

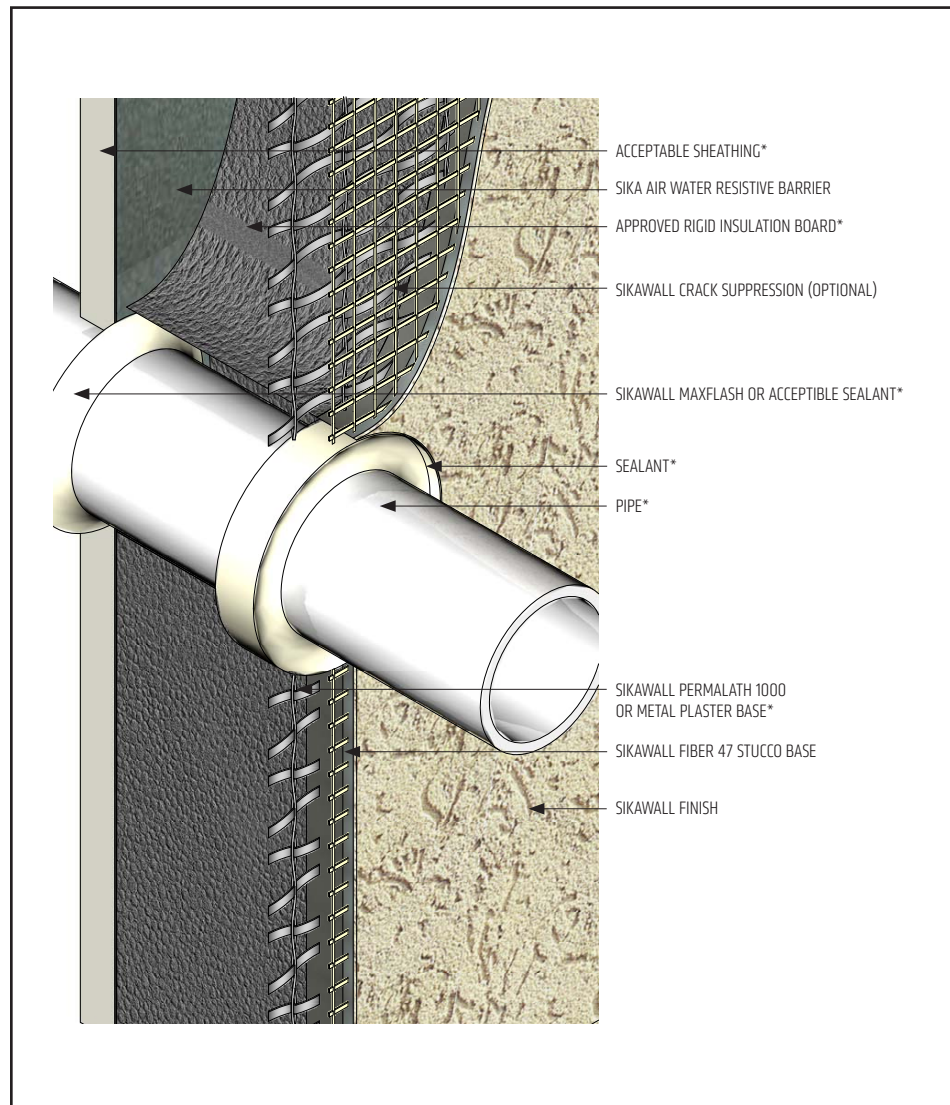

- SikaWall Transition Treatment can be applied from sheathing onto pipe in lieu of the secondary seal.
- Ensure all penetrations through the Fastwall 300 WaterMaster CI system are properly sealed.
- Provide continuous air seal around perimeter of penetration prior to rigid insulation application.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- Reference "Acceptable Sealants for use with Sika EIFS and Stucco Systems" Technical Bulletin for a list of sealants.

23 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL DRYER VENT

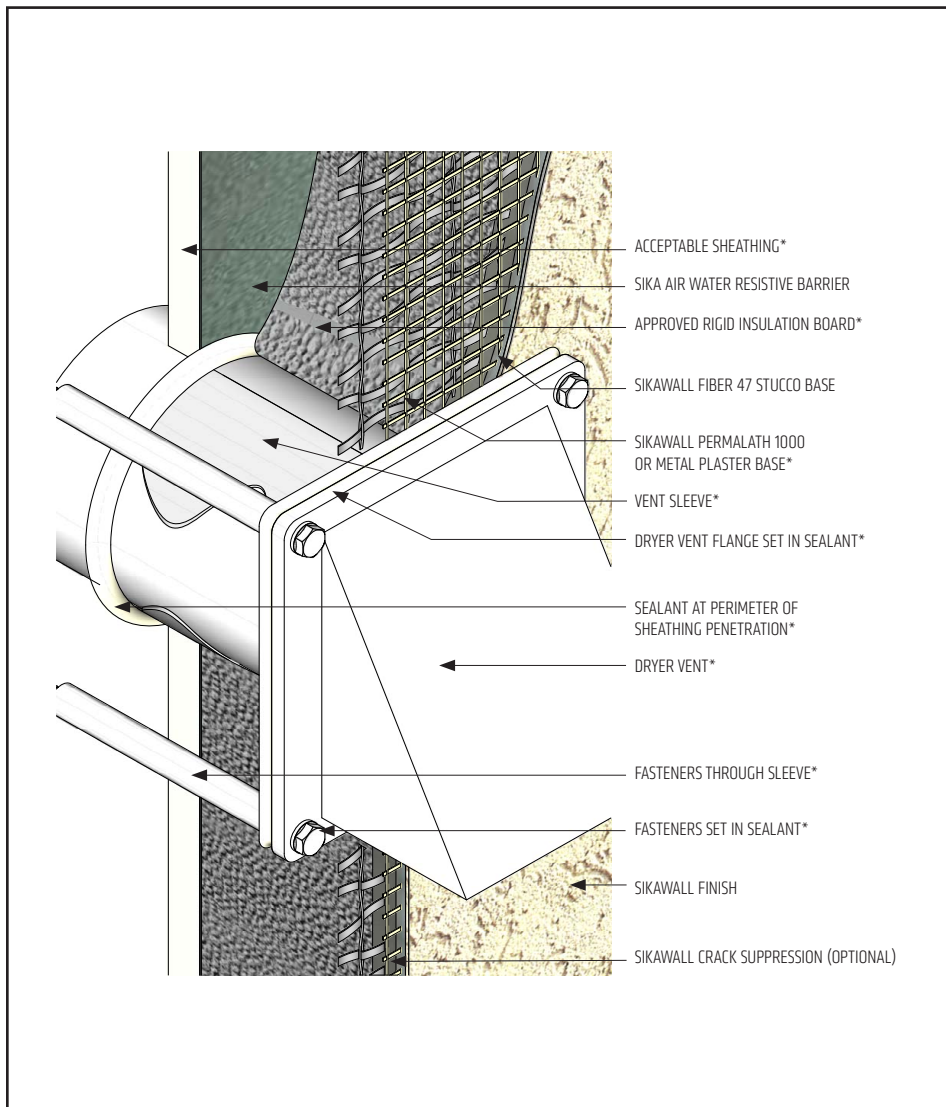

24 2604

(*NOTE: BY OTHERS)


- SikaWall Transition Treatment can be applied from sheathing onto pipe in lieu of the secondary seal.
- Ensure all fastener penetrations through the Sika Fastwall 300 CI WaterMaster Stucco system are properly sealed.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL DOWNSPOUT

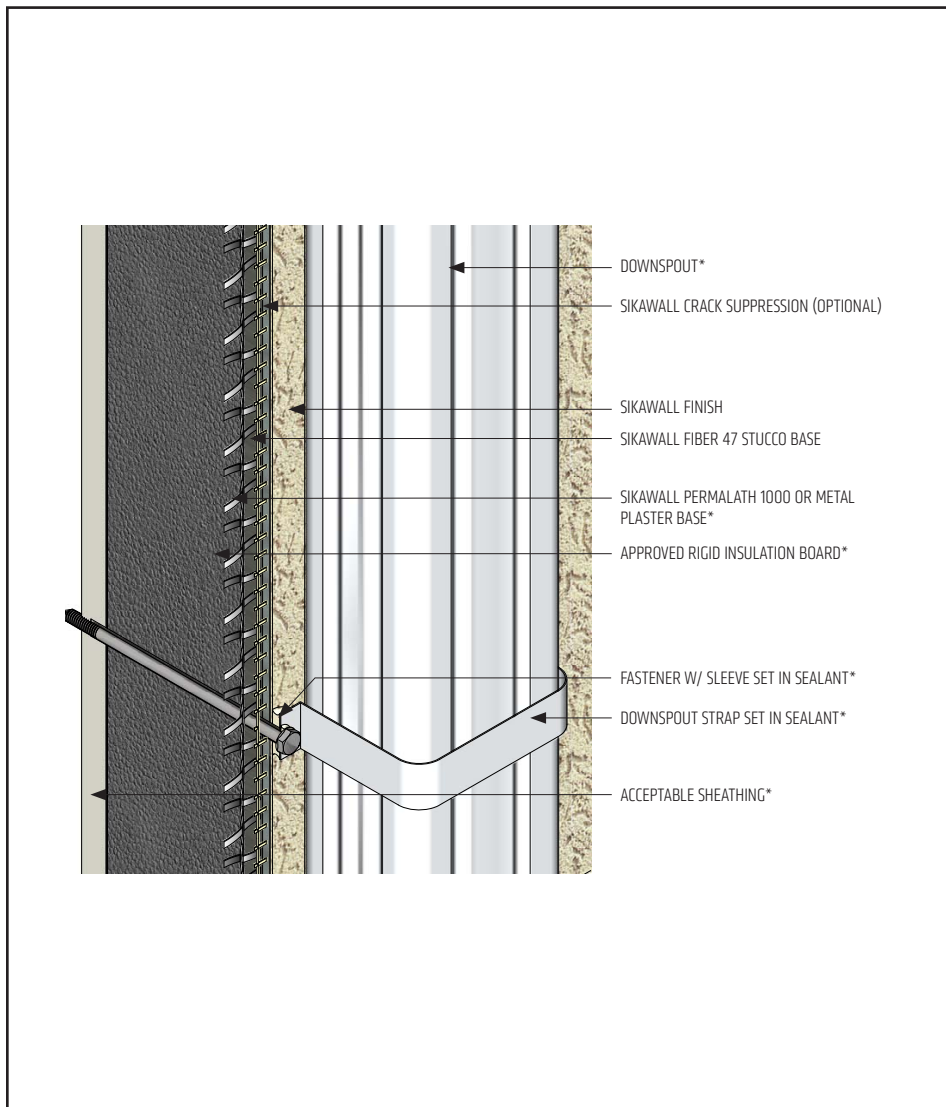

- Ensure all fastener penetrations through the Sika Fastwall 300 CI WaterMaster Stucco system are properly sealed.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

25 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL LIGHT FIXTURE

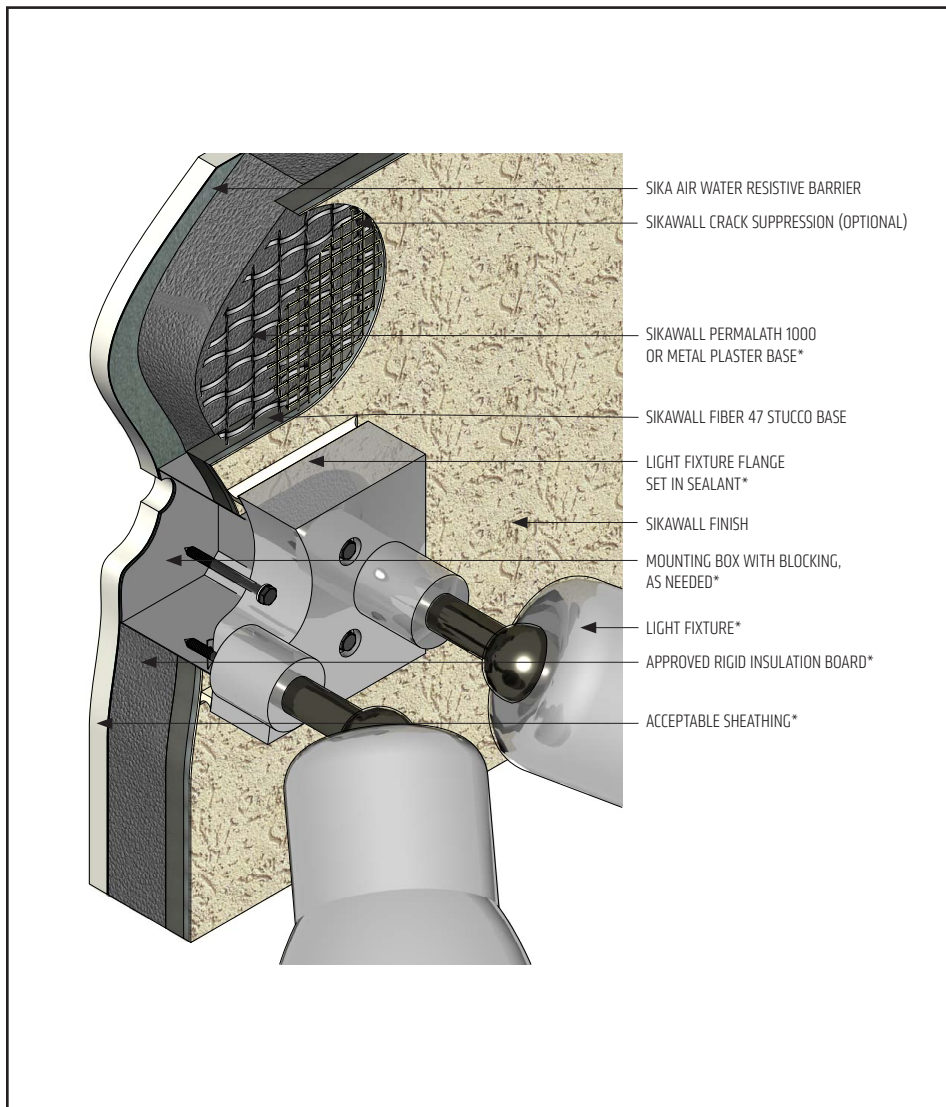

- Ensure all penetrations through the Sika Fastwall 300 CI WaterMaster Stucco system are properly sealed.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

26 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL TERMINATION AT METAL COPING / ROOF EDGE FLASHING – OPTION 01

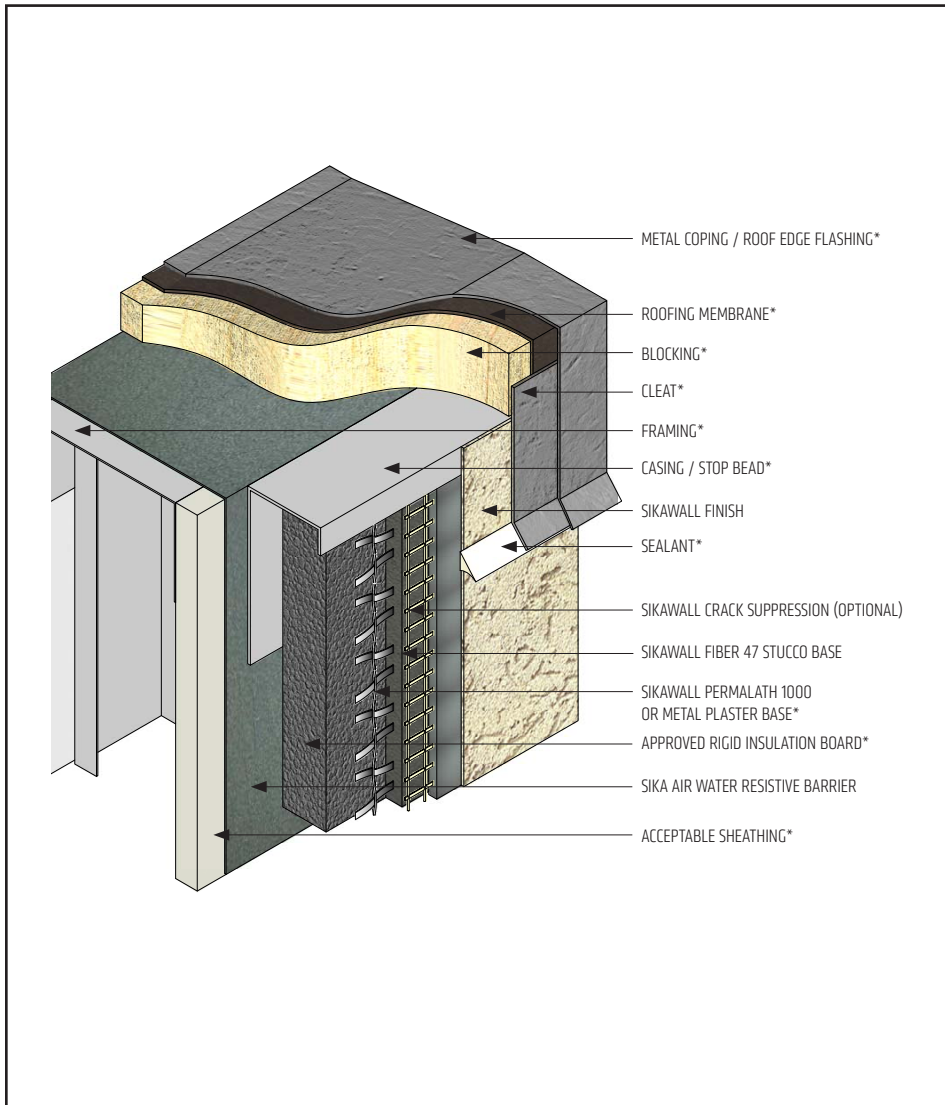

- Lap coping or roof edge flashing over the Sika Fastwall 300 CI WaterMaster Stucco system a minimum of 2" (50 mm) with drip edge sealed.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- Extend Sika Air Water Resistive Barrier or SikaWall MaxFlash onto bottom of blocking or provide alternate air seal at sheathing termination to blocking.
- Reference "Acceptable Sealants for use with Sika EIFS and Stucco Systems" Technical Bulletin for a list of sealants.

27 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL TERMINATION AT METAL COPING / ROOF EDGE FLASHING – OPTION 02

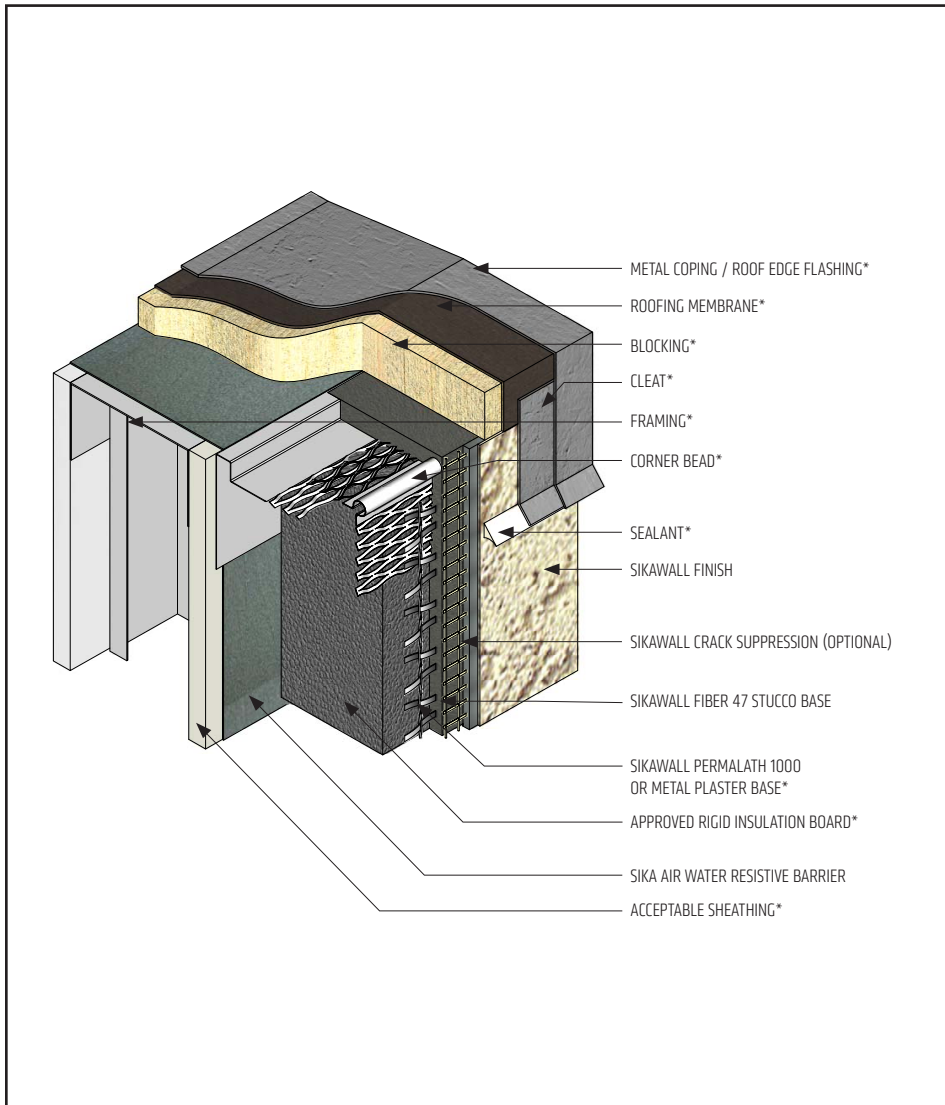

- Lap coping or roof edge flashing over the Sika Fastwall 300 CI WaterMaster Stucco Plus system a minimum of 2" (50 mm) with drip edge sealed.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- Extend Sika Air Water Resistive Barrier or SikaWall MaxFlash onto bottom of blocking or provide alternate air seal at sheathing termination to blocking.
- Reference "Acceptable Sealants for use with Sika EIFS and Stucco Systems" Technical Bulletin for a list of sealants.

28 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 CI WaterMaster Stucco

TYPICAL FASTENING / TERMINATION AT ROOF

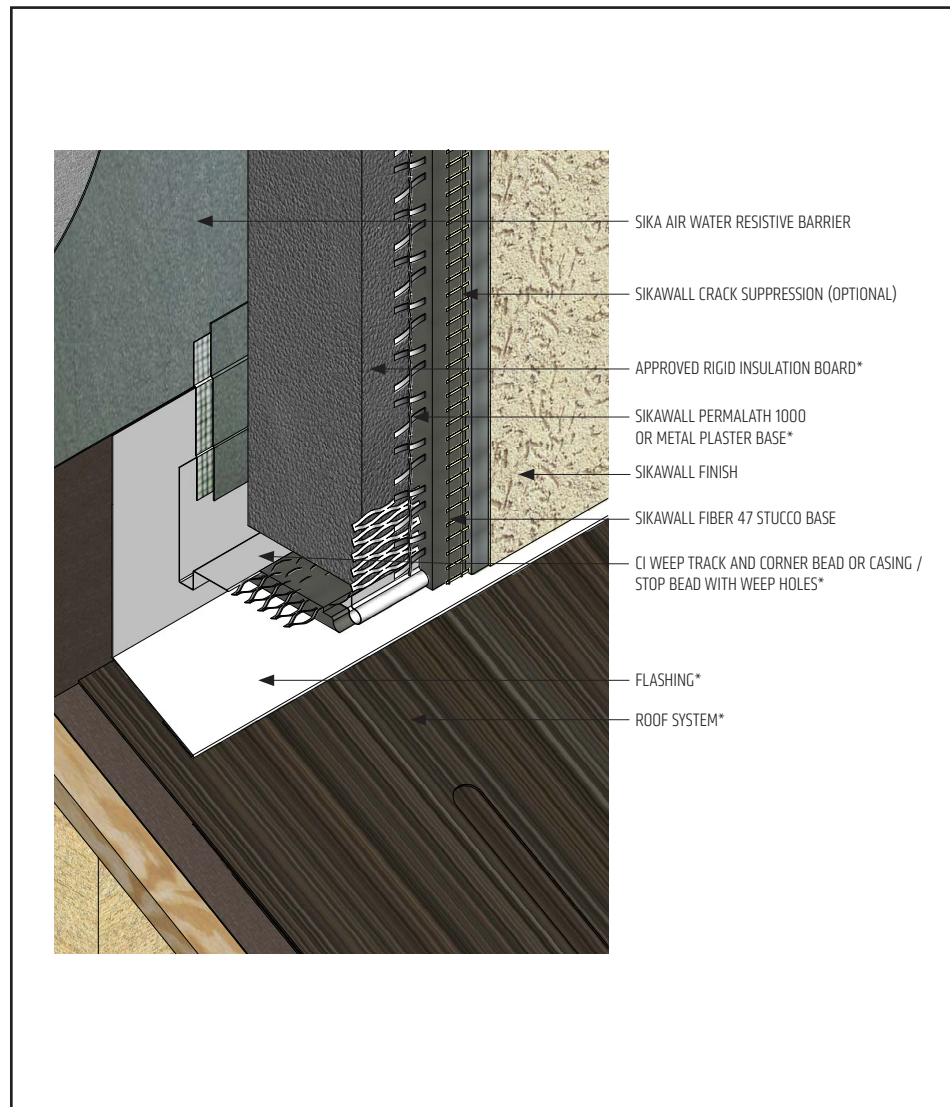

- Use SikaWall Transition Treatment to lap on to the CI Weep Track flange.
- Terminate Sika Fastwall 300 CI WaterMaster Stucco system a minimum of 2" (50 mm) above sloped roof.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.

29 2604


(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

Fastwall 300 WaterMaster CI Stucco

TYPICAL KICK-OUT FLASHING

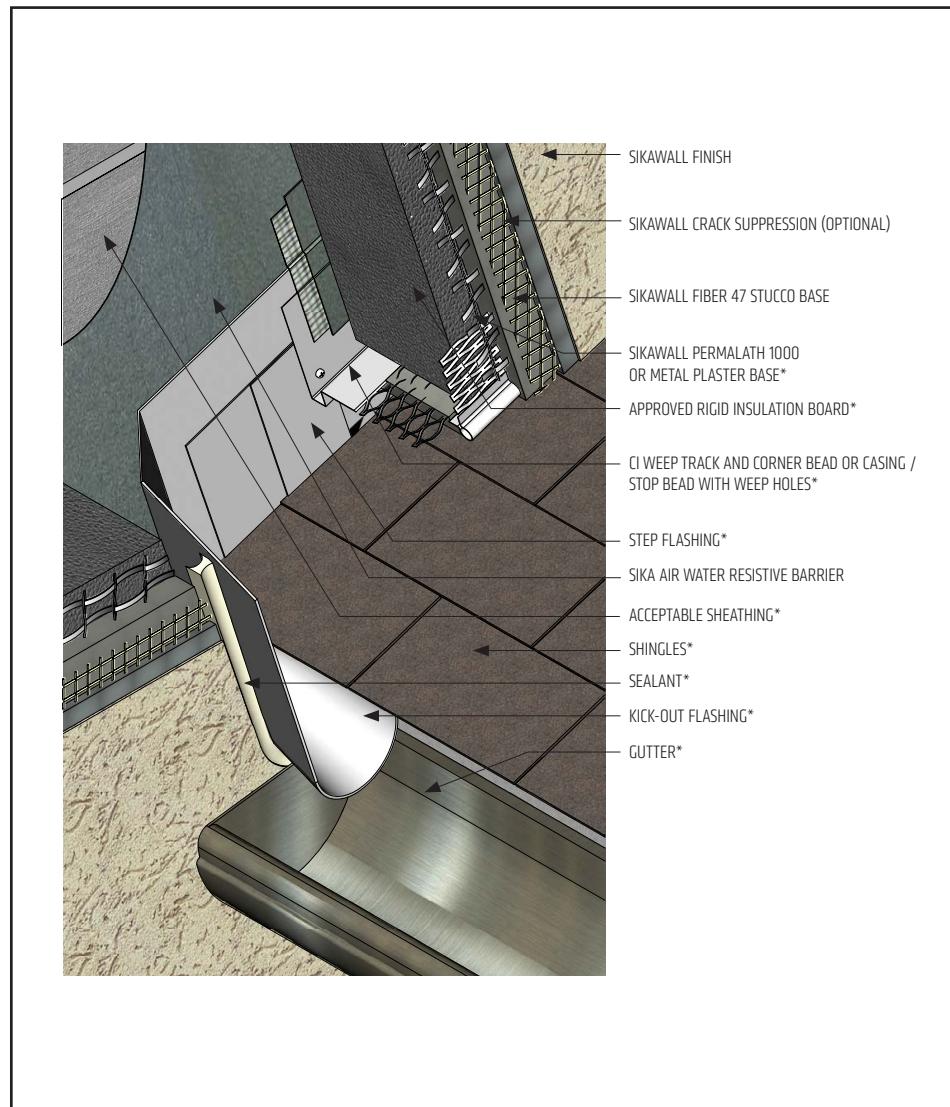

- Use SikaWall Transition Treatment to lap on to the CI Weep Track flange.
- Terminate Fastwall 300 WaterMaster CI system a minimum of 2" (50 mm) above sloped roof.
- Extend step flashing 2" (50 mm) behind Fastwall 300 WaterMaster CI system.
- Kickout flashing: sealed or soldered seams, recommended minimum 4" (100 mm) in height, extend 2" (50 mm) from wall and angled to direct water into gutter/away from wall surface.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in Sika Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat, SikaWall Stucco Surface Leveler, or SikaWall Stucco Level Coat.

30 2604

(*NOTE: BY OTHERS)

The details within are the latest recommendations and are represented in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

LIMITED WARRANTY NOTICE

Prior to each use of any product of Sika Corporation, its subsidiaries or affiliates ("SIKA"), the user must always read and follow the warnings and instructions on the product's most current product label, Product Data Sheet and Safety Data Sheet which are available at usa.sika.com/eifs-stucco or by calling our Technical Service Department at +1 (800) 226-2424.

Nothing contained in any SIKA literature or materials relieves the user of the obligation to read and follow the warnings and instructions for each SIKA product as set forth in the current product label, Product Data Sheet and Safety Data Sheet prior to use of the SIKA product.

SIKA warrants this product for one year from date of installation to be free from manufacturing defects and to meet the technical properties on the current Product Data Sheet if used as directed within the product's shelf life. User determines suitability of product for intended use and assumes all risks. User's and/or buyer's sole remedy shall be limited to the purchase price or replacement of this product exclusive of any labor costs. NO OTHER WARRANTIES EXPRESS OR IMPLIED SHALL APPLY INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SIKA SHALL NOT BE LIABLE UNDER ANY LEGAL THEORY FOR SPECIAL OR CONSEQUENTIAL DAMAGES. SIKA SHALL NOT BE RESPONSIBLE FOR THE USE OF THIS PRODUCT IN A MANNER TO INFRINGE ON ANY PATENT OR ANY OTHER INTELLECTUAL PROPERTY RIGHTS HELD BY OTHERS. Sale of SIKA products are subject to the Terms and Conditions of Sale which are available at usa.sika.com.

For the most current version of this literature, please visit our website at usa.sika.com/eifs-stucco.

Sika Corporation

201 Polito Avenue
Lyndhurst, NJ 07071 USA
Customer Service +1 (800) 433-9517
Technical Service +1 (800) 226-2424
usa.sika.com/eifs-stucco

Rev May 2026

BUILDING TRUST

