



# Fastwall® 300 WaterMaster Stucco

Premium Cement Plaster Stucco with a Sika  
Fluid Applied Air/Water-Resistive Barrier

Typical Details

BUILDING TRUST



# Fastwall 300 WaterMaster Stucco

## Typical Details

### Table of Contents


- |                                   |                                     |
|-----------------------------------|-------------------------------------|
| 1. Application over Steel Framing | 13. EPS Shape Application           |
| 2. Application over Wood Framing  | 14. Termination at Soffit/Gable End |
| 3. Application over CMU           | 15. Termination at Foundation       |
| 4. Surface Control Joint          | 16. Kick-out Flashing               |
| 5. Expansion Joint                | 17. Termination at Deck             |
| 6. Drainage at Floorline          | 18. Coping                          |
| 7. Clad Window Jamb               | 19. Corner Bead                     |
| 8. Clad Window Head               | 20. Downspout Application           |
| 9. Clad Window Sill               | 21. Pipe Penetration                |
| 10. Primed Window Head            | 22. Light Fixture                   |
| 11. Primed Window Jamb            | 23. Dryer Vent                      |
| 12. Primed Window Sill            |                                     |

### Notes:

- The details within are the latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.
- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL APPLICATION OVER STEEL FRAMING

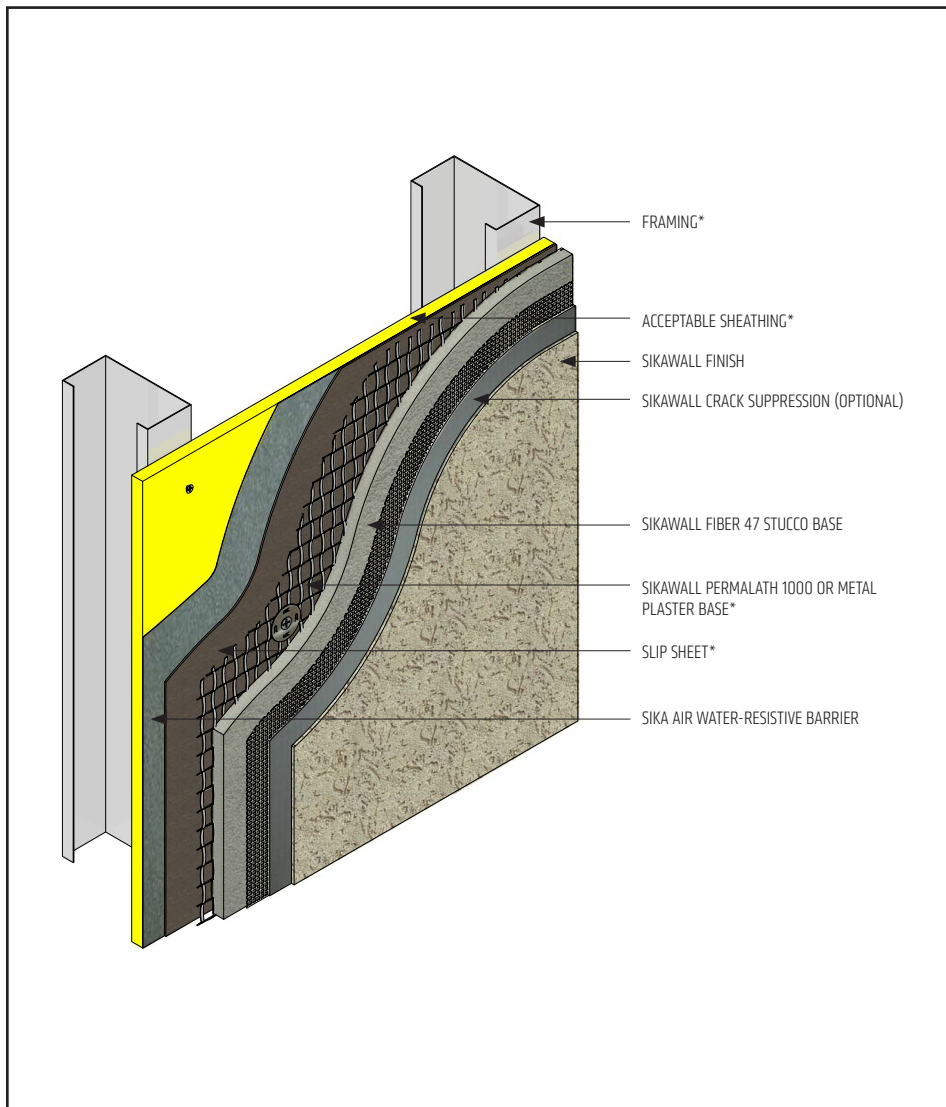

0326

(\*NOTE: BY OTHERS)

- Basic requirements for water-resistive barrier:
  - Sika Air Water Resistive Barrier. Consult local codes for drainage requirements. one layer minimum Grade D as slip sheet.
  - Wood based sheathing requires two coats of Sika Air Water Resistive Barrier prior to installation of slip sheet.
  - Comply with applicable local building code.
- SikaWall Crack Suppression: SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.


The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



# Fastwall 300 WaterMaster Stucco

## TYPICAL APPLICATION OVER WOOD FRAMING

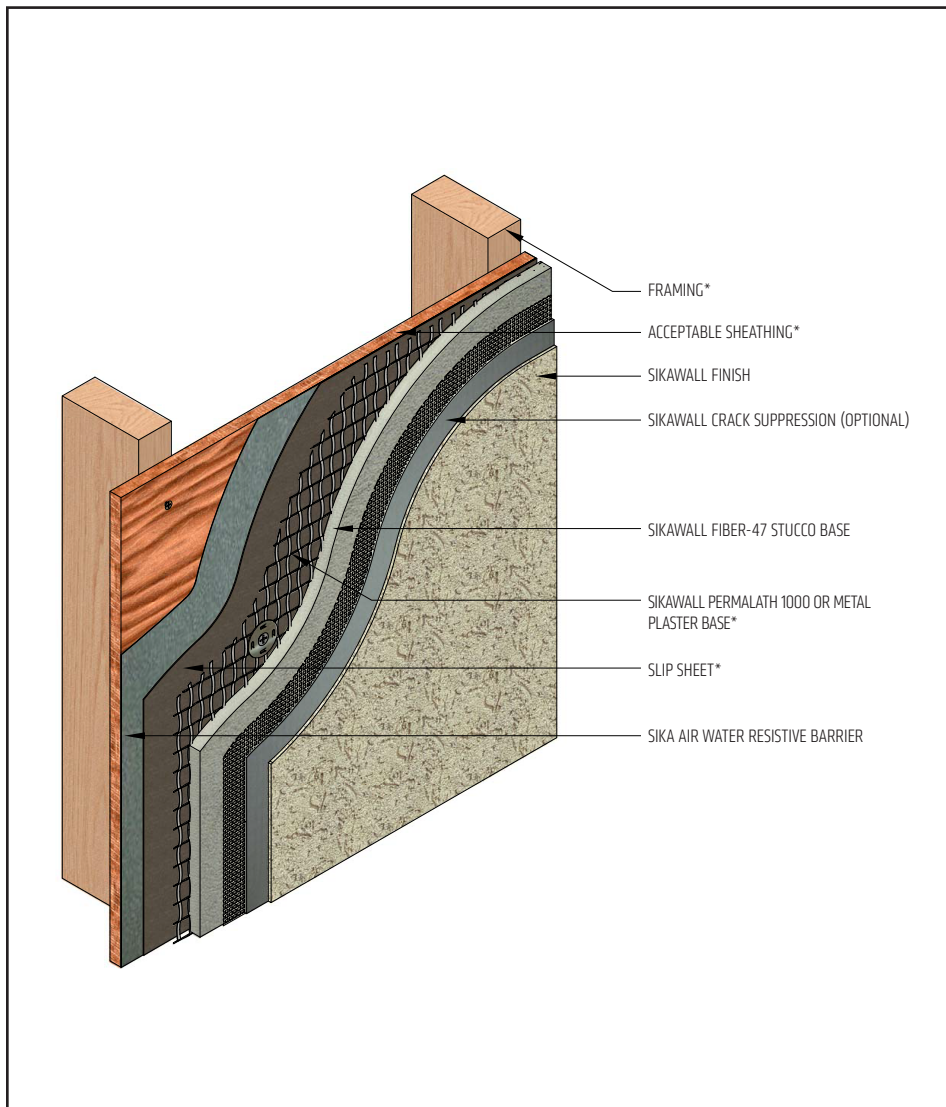

0326

(\*NOTE: BY OTHERS)

- Basic requirements for water-resistive barrier:
  - Sika Air Water Resistive Barrier. Consultant Local Codes for drainage requirements.
  - Wood based sheathing requires two coats of Sika Air Water Resistive Barrier prior to installation of slip sheet.
  - Comply with applicable local building code.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.


The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



# Fastwall 300 WaterMaster Stucco

## TYPICAL APPLICATION OVER CMU

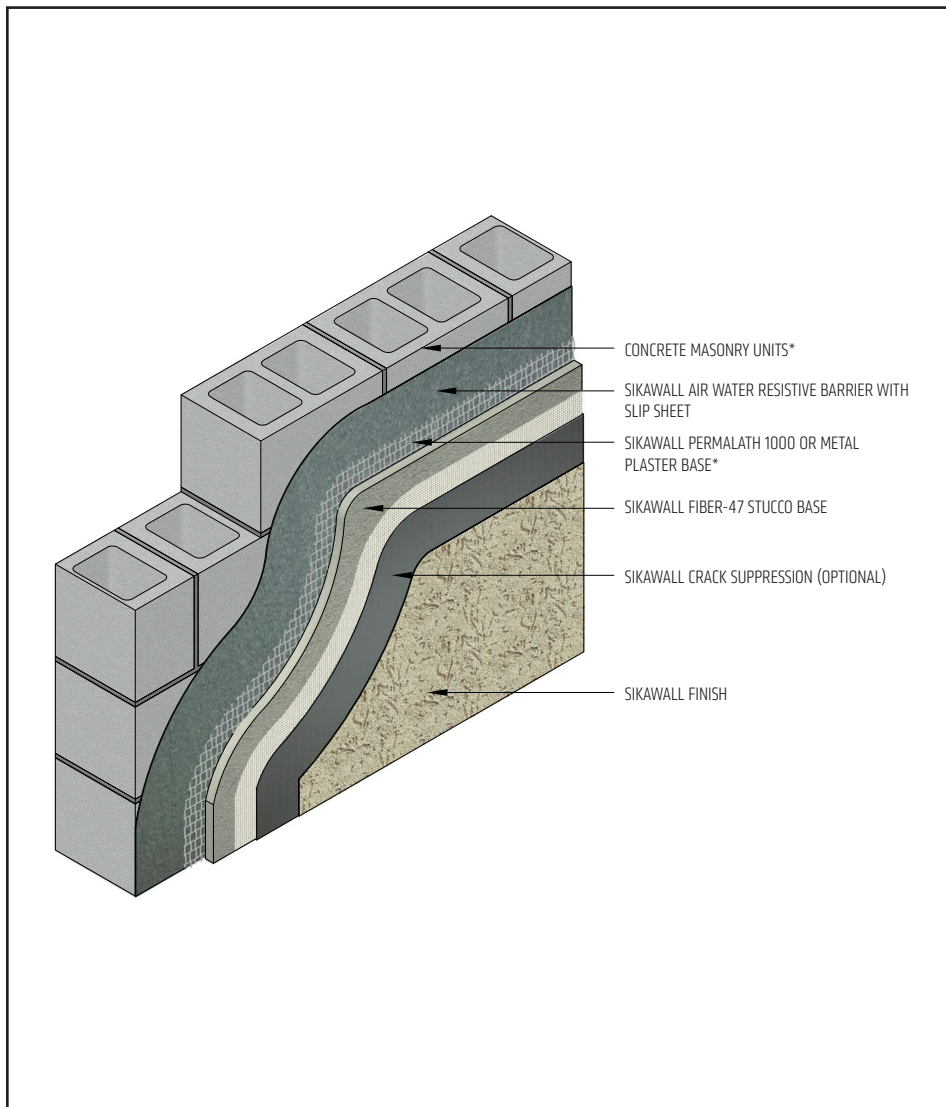

0326

(\*NOTE: BY OTHERS)


- Basic requirements for water-resistive barrier:
  - Sika Air Water Resistive Barrier. Consultant Local Codes for drainage requirements.
  - Multiple coats of Sika Air Water Resistive Barrier may be required to achieve a pinhole free application.
  - Comply with applicable local building code.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL SURFACE CONTROL JOINT

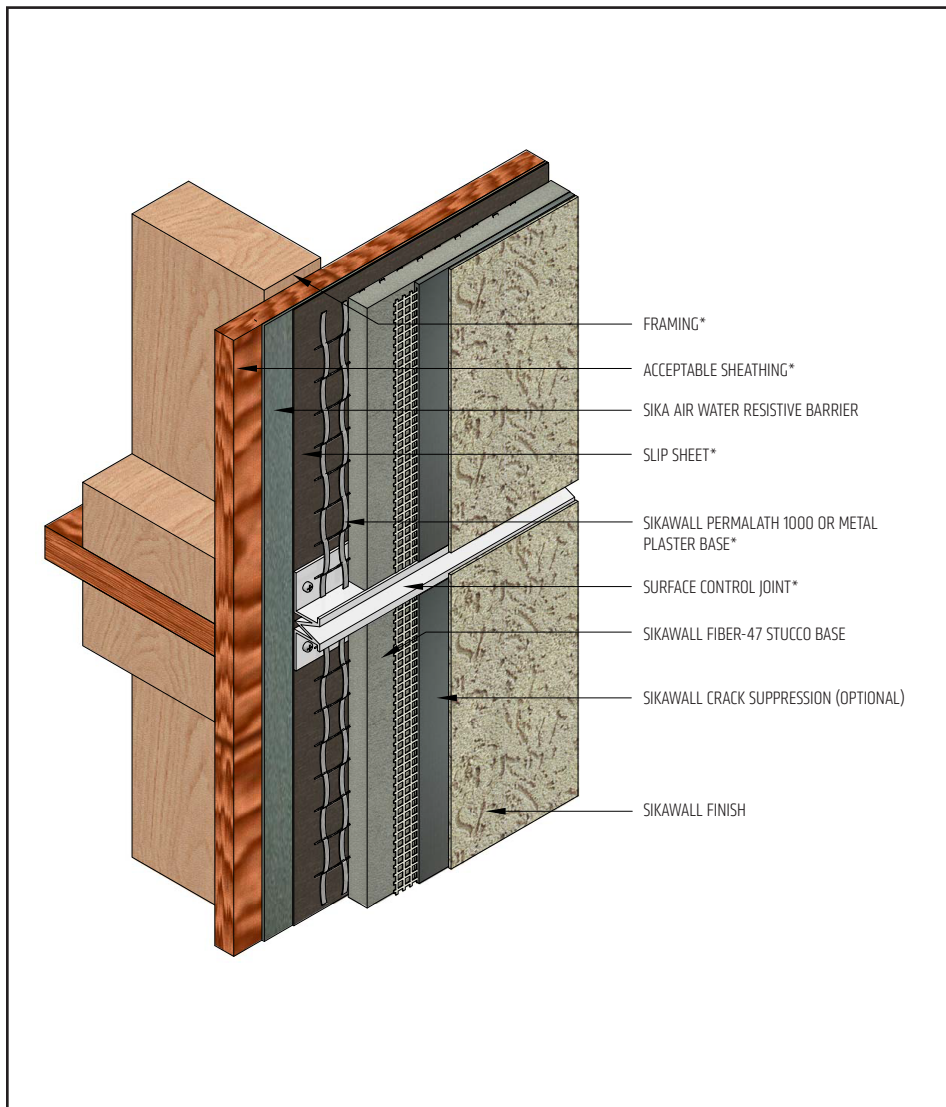

0326

(\*NOTE: BY OTHERS)


- Install all materials in accordance with installation instructions and applicable code.
- Provide control joints at a maximum 144 sq.ft. (13.4 sq. m.) and placement as determined by the design professional.
- Install per requirements of ASTM C1063.
- Lath must be broken at the joint accessory.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL EXPANSION JOINT

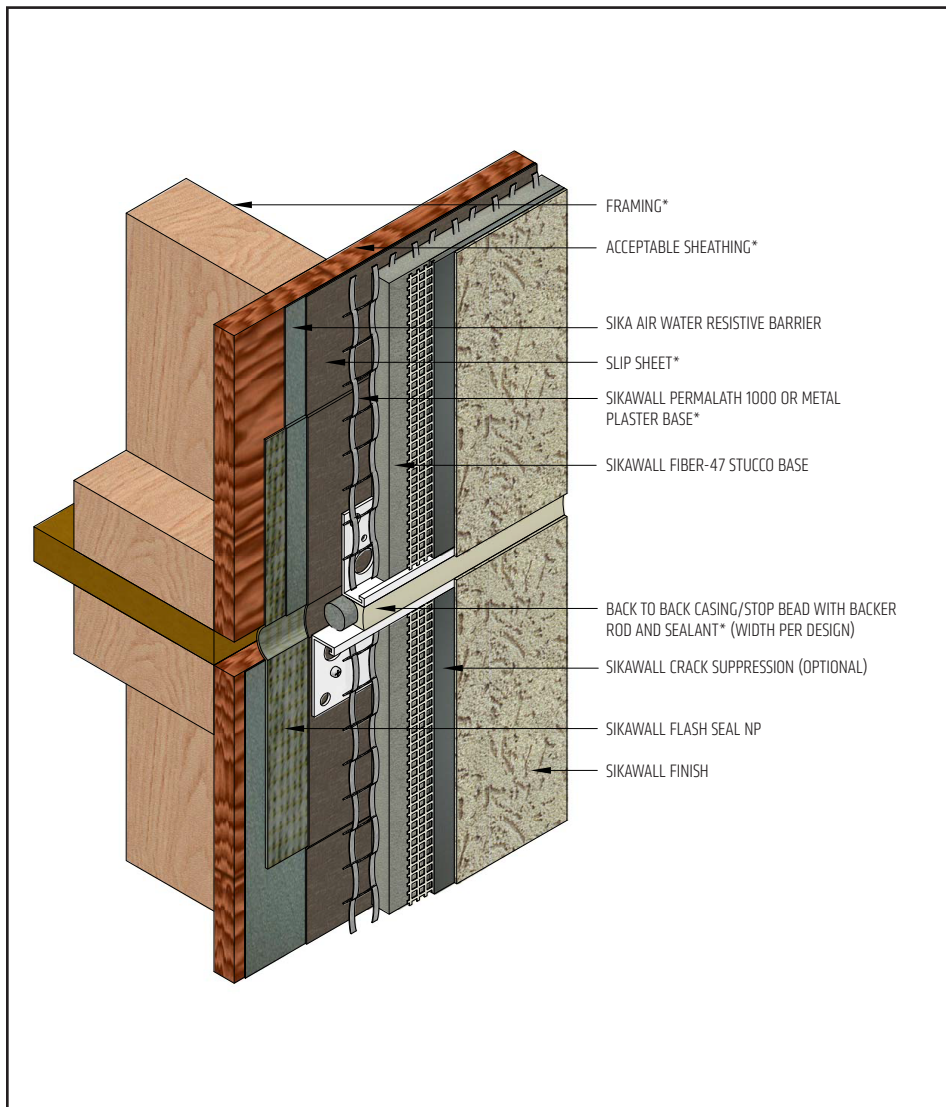

0326

(\*NOTE: BY OTHERS)

- Typical locations for system expansion joints are at building expansion joints, at prefabricated panel joints, floor lines of wood frame construction or where slip tracks are used in steel frame construction, where substrates change and where structural movement is anticipated. It is the sole responsibility of the project design team, including the architect, engineer, etc., to ultimately determine specific expansion joint placement, width and design. Detail specific locations in construction drawings.
- Install per requirements of ASTM C1063.
- Lath must be broken at the joint accessory.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- Reference *Acceptable Sealants for use with Sika EIFS and Stucco Systems* Technical Bulletin for a list of sealants.
- Provide sufficient slack in SikaWall Flash Seal NP at expansion joint to allow for movement.


The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



# Fastwall 300 WaterMaster Stucco

## TYPICAL DRAINAGE AT FLOORLINE

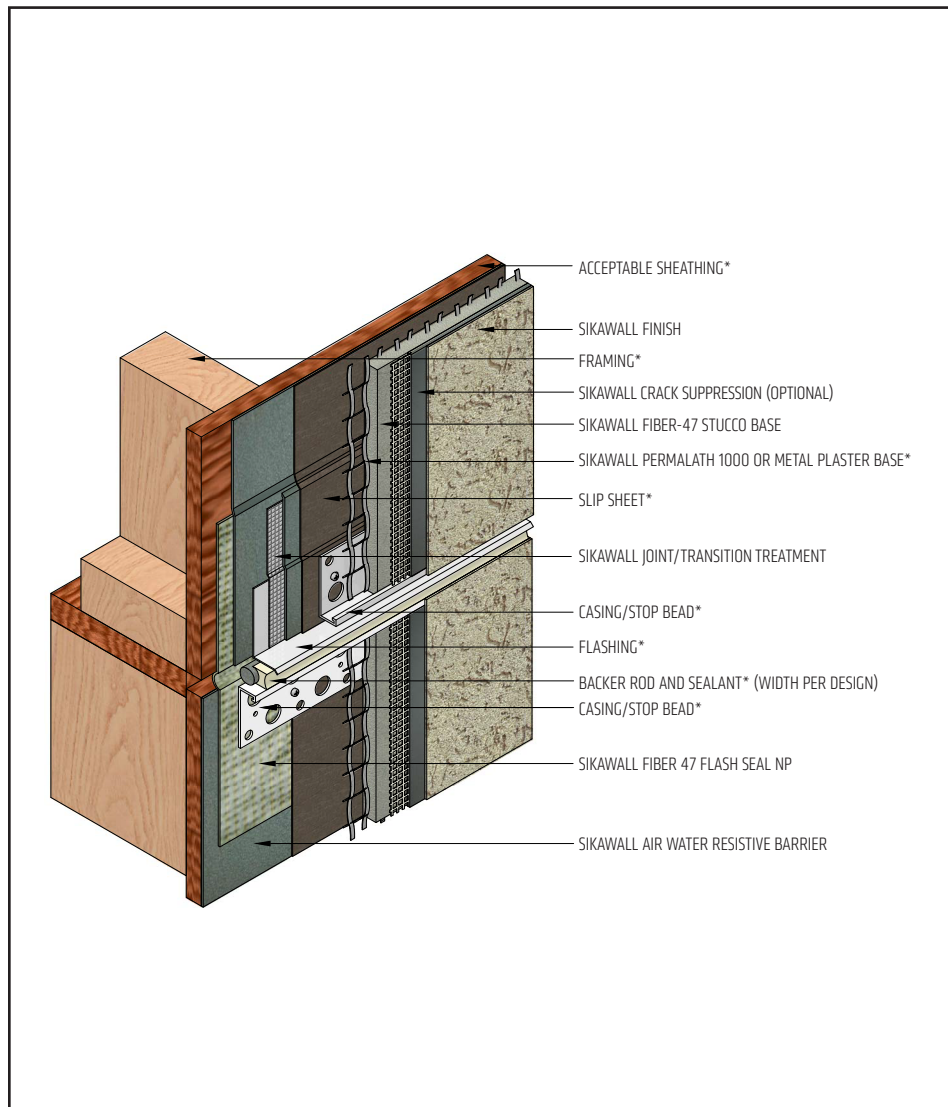

0326

(\*NOTE: BY OTHERS)


- Install Sika air/water-resistive barrier up and behind flashing.
- Apply SikaWall transition treatment over flashing prior to casing/stop bead installation.
- Provide end-dams at flashing terminations as required.
- Lath must be broken at the joint accessory.
- It is recommended that a means for drainage is provided at every floor.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in A SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- Provide sufficient slack in SikaWall Flash Seal NP at expansion joint to allow for movement.
- Typical locations for system expansion joints are at building expansion joints, at prefabricated panel joints, floor lines of wood frame construction or where slip tracks are used in steel frame construction, where substrates change and where structural movement is anticipated. It is the sole responsibility of the project design team, including the architect, engineer, etc., to ultimately determine specific expansion joint placement, width and design. Detail specific locations in construction drawings.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL CLAD WINDOW – JAMB

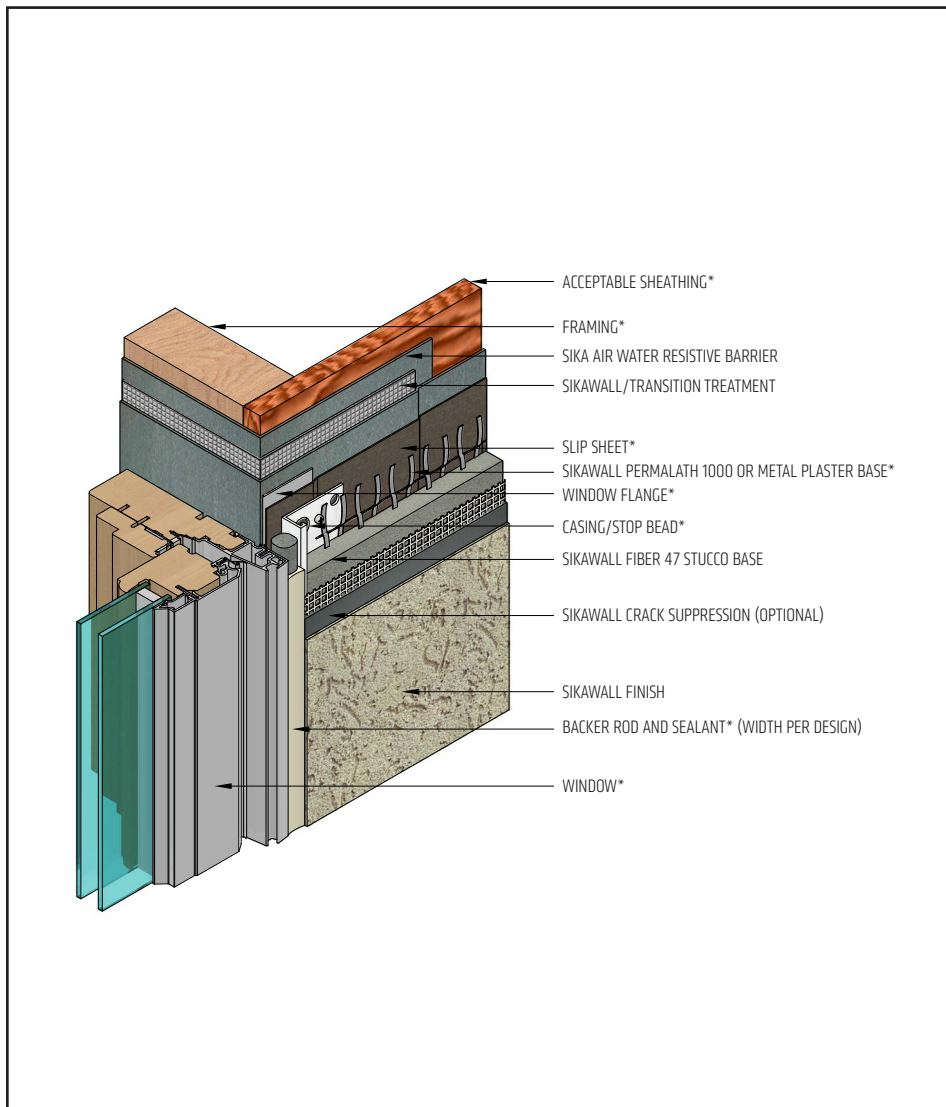

0326

(\*NOTE: BY OTHERS)


- Prior to window and lath installation, ensure water-resistive barrier is properly applied into the rough openings in accordance with Sika application guidelines and code requirements. Reference Sika Air Water Resistive Barrier published typical details for further information.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- Consult window and sealant manufacturers to verify window installation, detailing and to ensure no water leakage into the wall assembly.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL CLAD WINDOW - HEAD

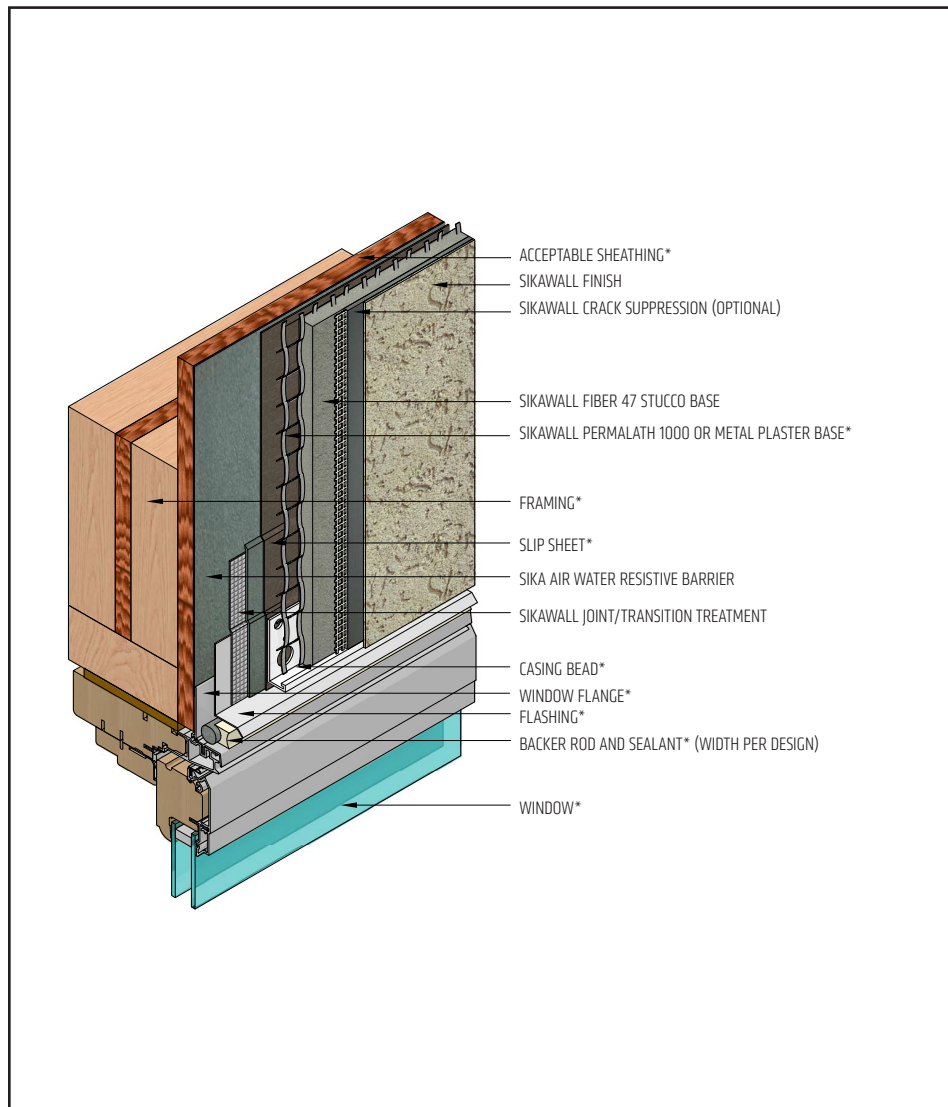

0326

(\*NOTE: BY OTHERS)


- Prior to window and lath installation, ensure water-resistive barrier is properly applied into the rough openings in accordance with Sika application guidelines and code requirements. Reference Sika Air Water Resistive Barrier published typical details for further information.
- Provide end-dams at flashing terminations.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL CLAD WINDOW – SILL

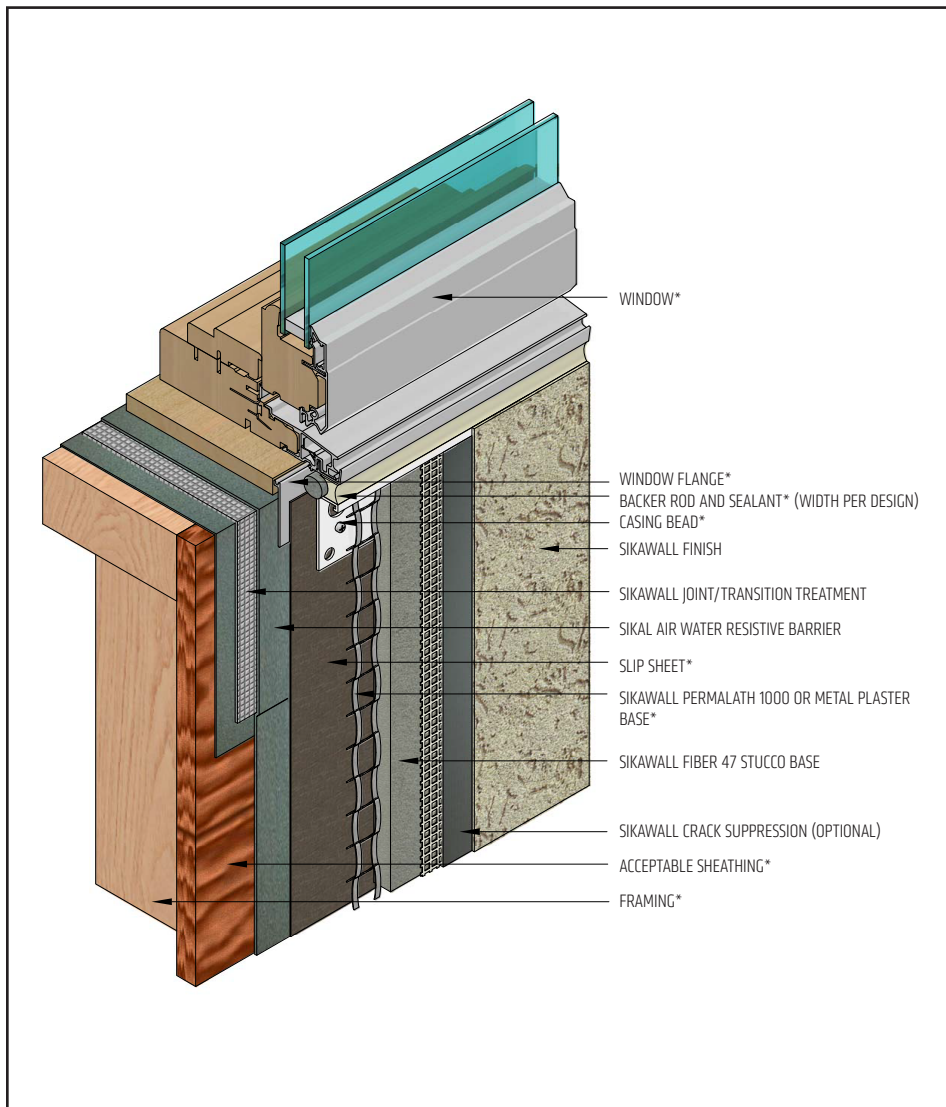

0326

(\*NOTE: BY OTHERS)

- Prior to window and lath installation, ensure water-resistive barrier is properly applied into the rough openings in accordance with Sika application guidelines and code requirements. Reference Sika Air Water Resistive Barrier published typical details for further information.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.


The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



# Fastwall 300 WaterMaster Stucco

## TYPICAL PRIMED WINDOW - HEAD

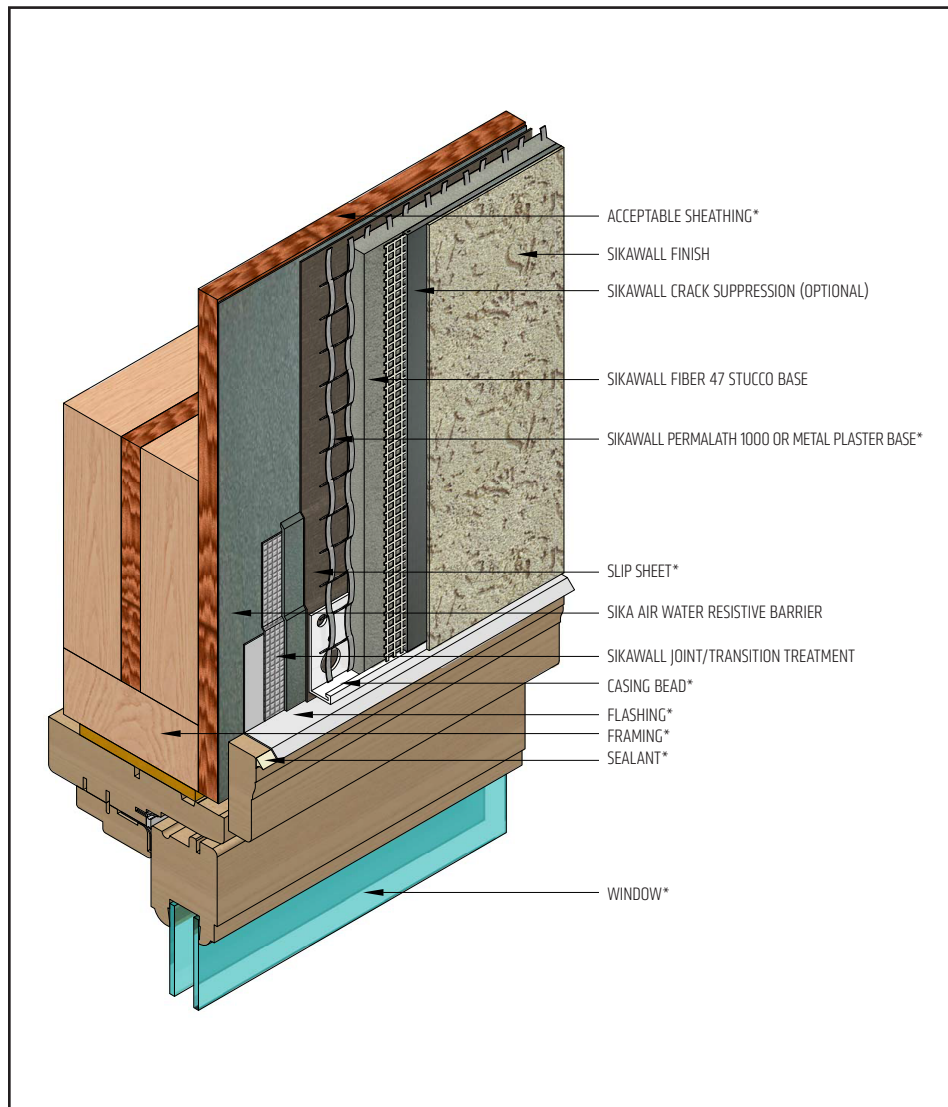

0326

(\*NOTE: BY OTHERS)


- Prior to window and lath installation, ensure water-resistive barrier is properly applied into the rough openings in accordance with Sika application guidelines and code requirements. Reference Sika Air Water Resistive Barrier published typical details for further information.
- Provide end-dams at flashing terminations.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL PRIMED WINDOW – JAMB

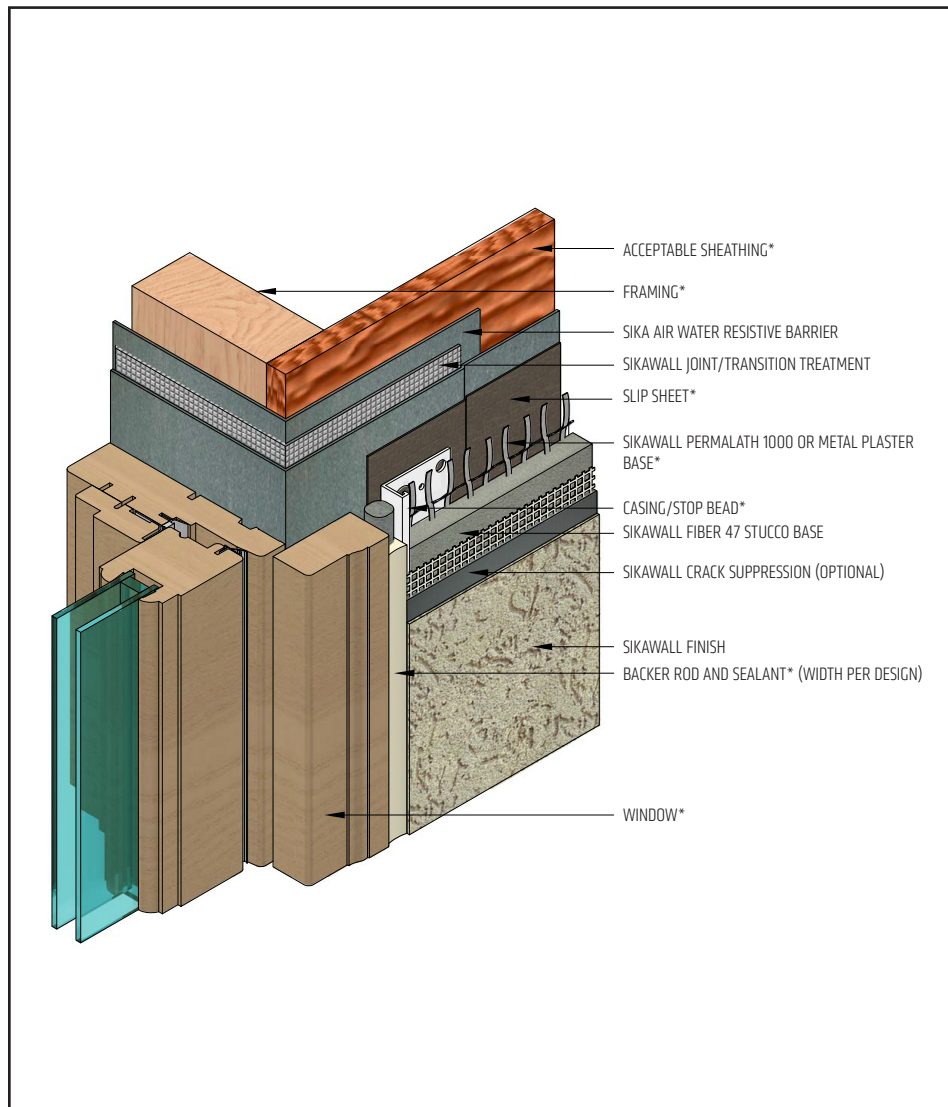

0326

(\*NOTE: BY OTHERS)


- Prior to window and lath installation, ensure water-resistive barrier is properly applied to the rough openings in accordance with Sika application guidelines and code requirements. Reference Sika Air Water Resistive Barrier published typical details for further information.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: a SikaWall Reinforcing or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- Consult window and sealant manufacturers to verify window installation, detailing and to ensure no water leakage into the wall assembly.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL PRIMED WINDOW - SILL

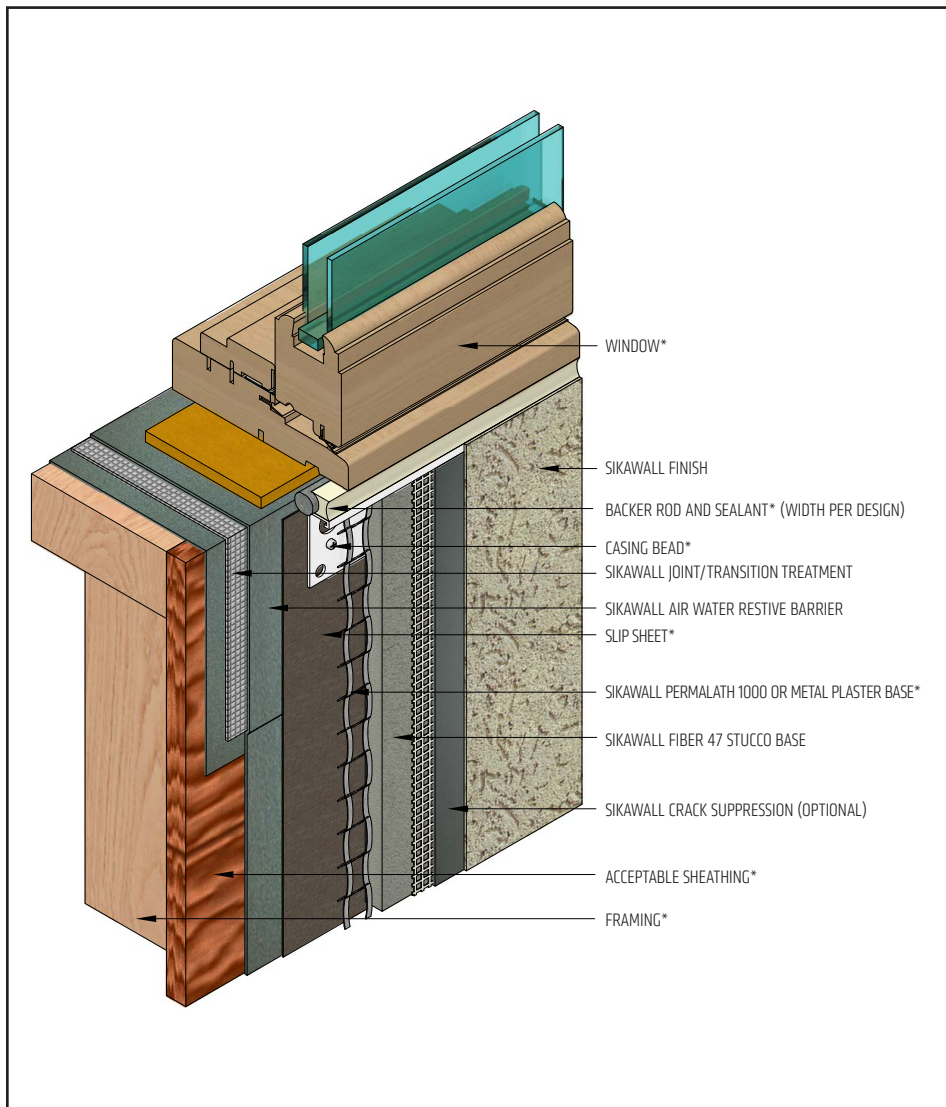

0326

(\*NOTE: BY OTHERS)


- Prior to window and lath installation, ensure water-resistive barrier is properly applied to the rough openings in accordance with Sika application guidelines and code requirements. Reference Sika Air Water Resistive Barrier published typical details for further information.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- Consult window and sealant manufacturers to verify window installation, detailing and to ensure no water leakage into the wall assembly.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL EPS SHAPE APPLICATION

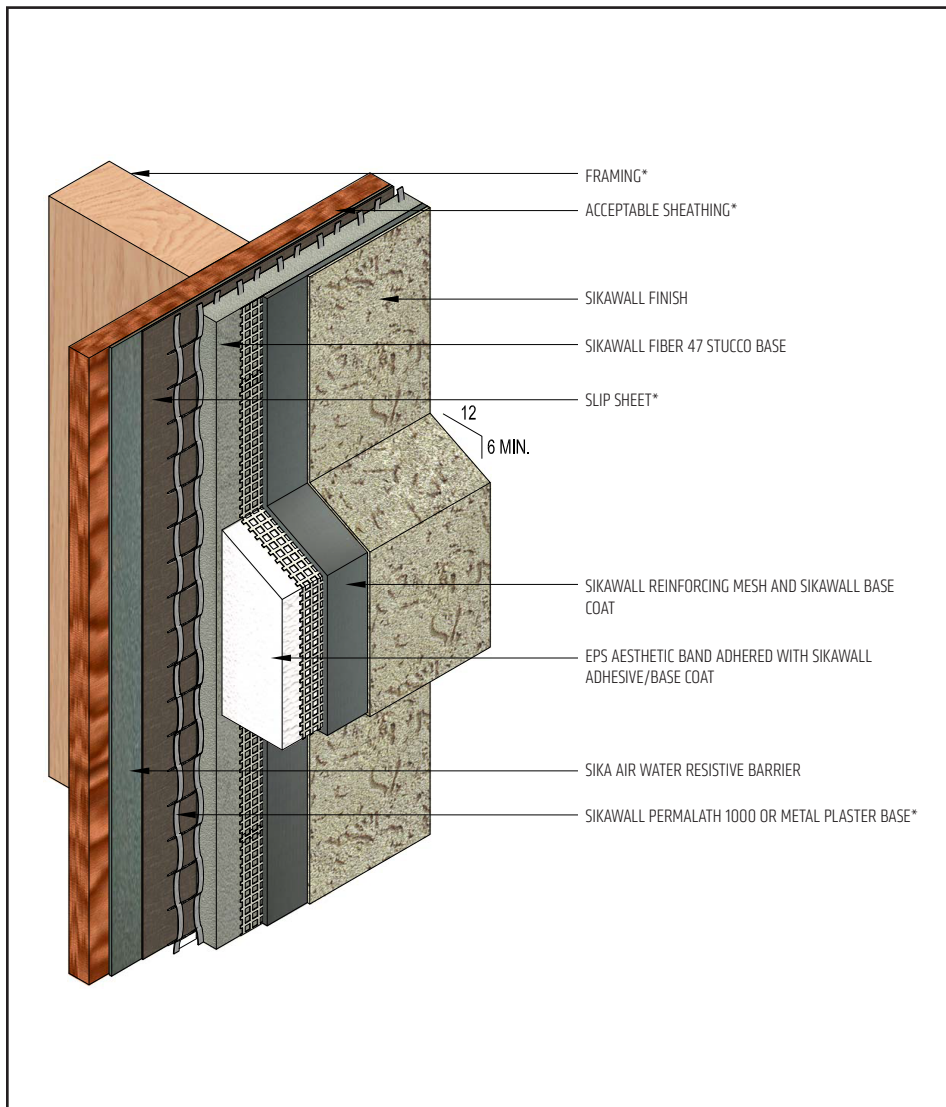

0326

(\*NOTE: BY OTHERS)

- Overlap reinforced base coat onto SikaWall Stucco Base a minimum of 3" (76 mm).
- On horizontal projections greater than 1" (25 mm) maintain a minimum 6:12 slope. For sloped surfaces over 24" (340mm), a roofing system or a metal cap flashing is required.


The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



# Fastwall 300 WaterMaster Stucco

## TYPICAL TERMINATION AT SOFFIT/GABLE END

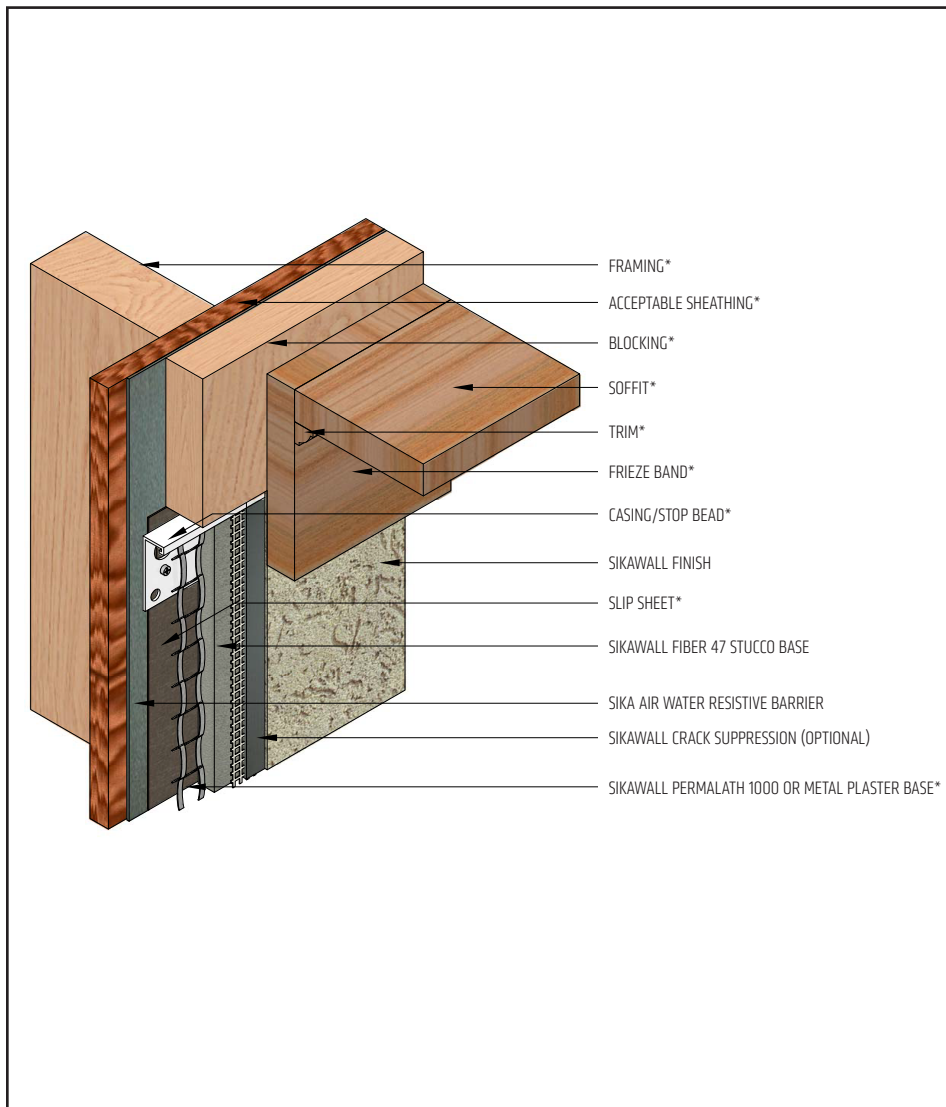

- Lap frieze band a minimum of 2" (50 mm) over the Fastwall 300 WaterMaster Stucco System.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.

0326


(\*NOTE: BY OTHERS)

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL TERMINATION AT FOUNDATION

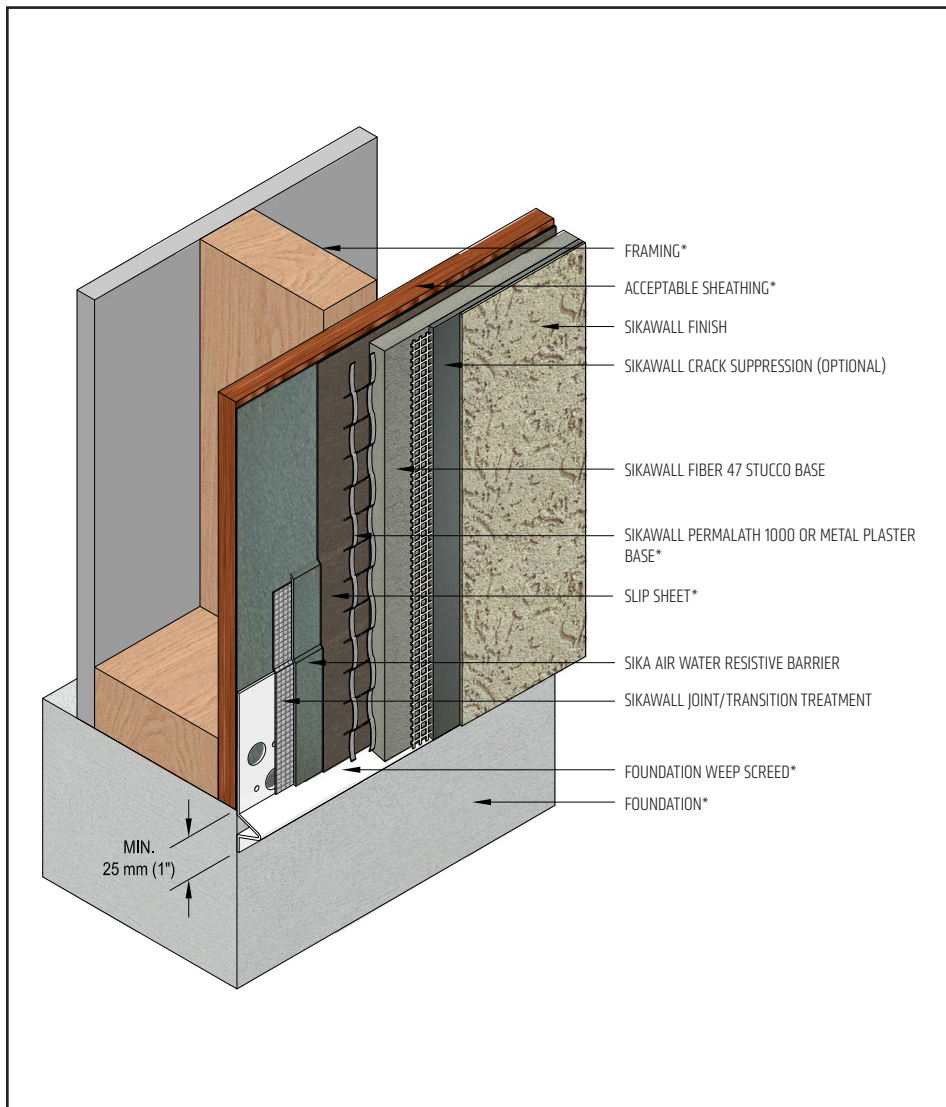

0326

(\*NOTE: BY OTHERS)


- Per ASTM C1063 terminate the stucco wall system a minimum of 4" (100 mm) above raw earth and 2" (50 mm) above paved surface.
- Apply SikaWall transition treatment over weep screed flange prior to lath installation.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL KICK-OUT FLASHING

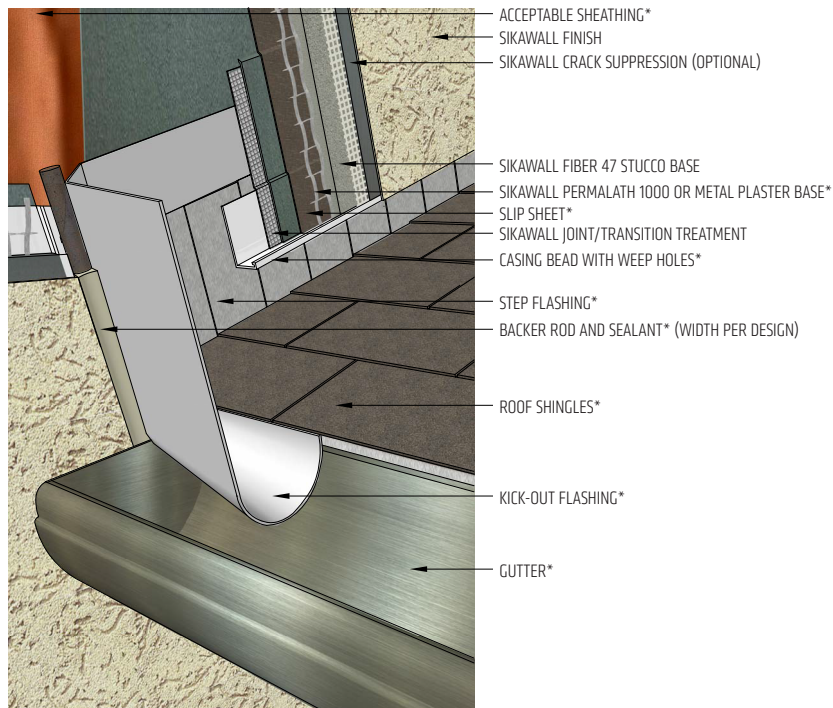

- Terminate stucco wall system a minimum of 2" (50 mm) above sloped roof.
- Ensure step flashing is a minimum 2" (50 mm) behind Fastwall 300 WaterMaster Stucco System.
- Kick-out flashing shall be a minimum 4" (100 mm) in height.
- Kick-out flashing shall be angled a minimum 100° with seams sealed or soldered.
- Ensure a means for drainage is provided at system termination at roof.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in A SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.
- Apply SikaWall transition treatment over casing bead flange prior to lath installation.

0326


(\*NOTE: BY OTHERS)

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL TERMINATION AT DECK

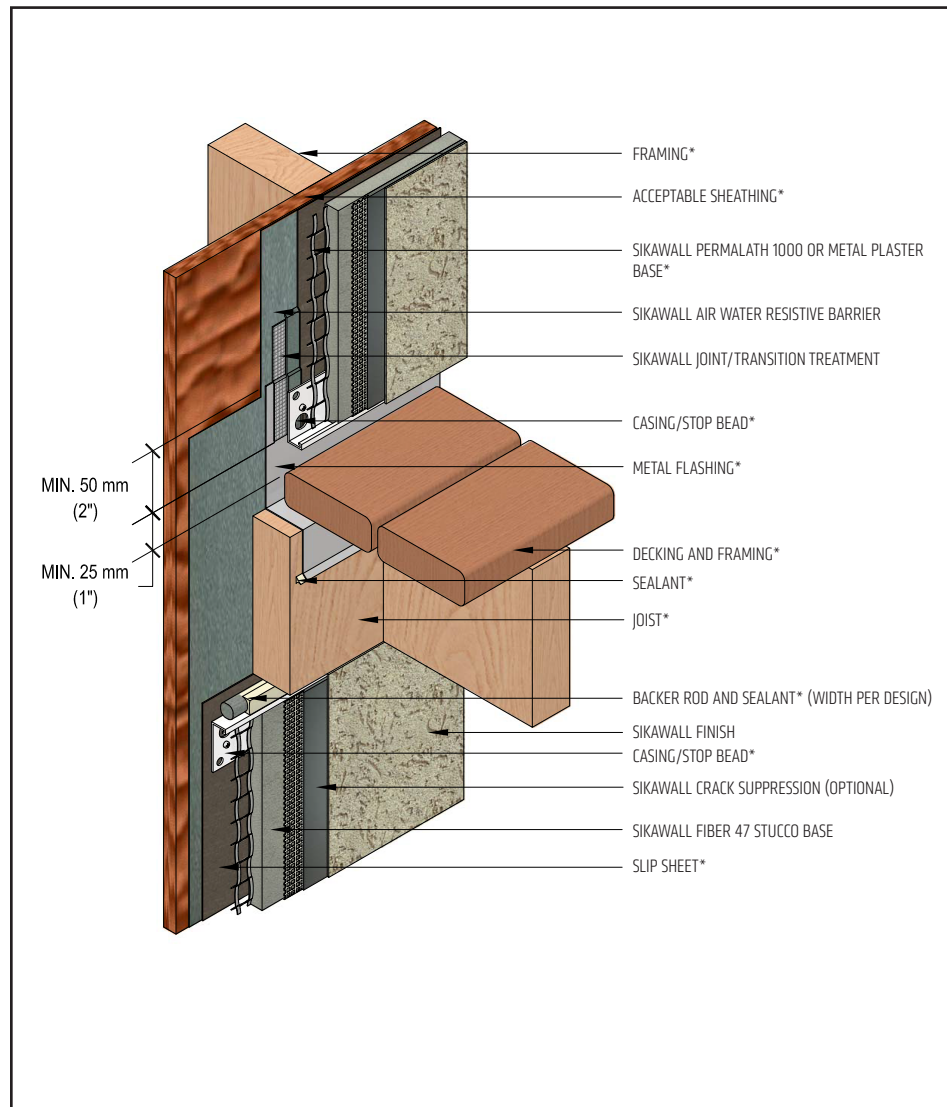

0326

(\*NOTE: BY OTHERS)

- Apply SikaWall transition treatment over flashing.
- Install Sika air/water-resistive barrier up and behind flashing.
- Provide end-dams at flashing terminations as required.
- SikaWall Crack Suppression: a SikaWall Reinforcing or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.


The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



# Fastwall 300 WaterMaster Stucco

## TYPICAL COPING

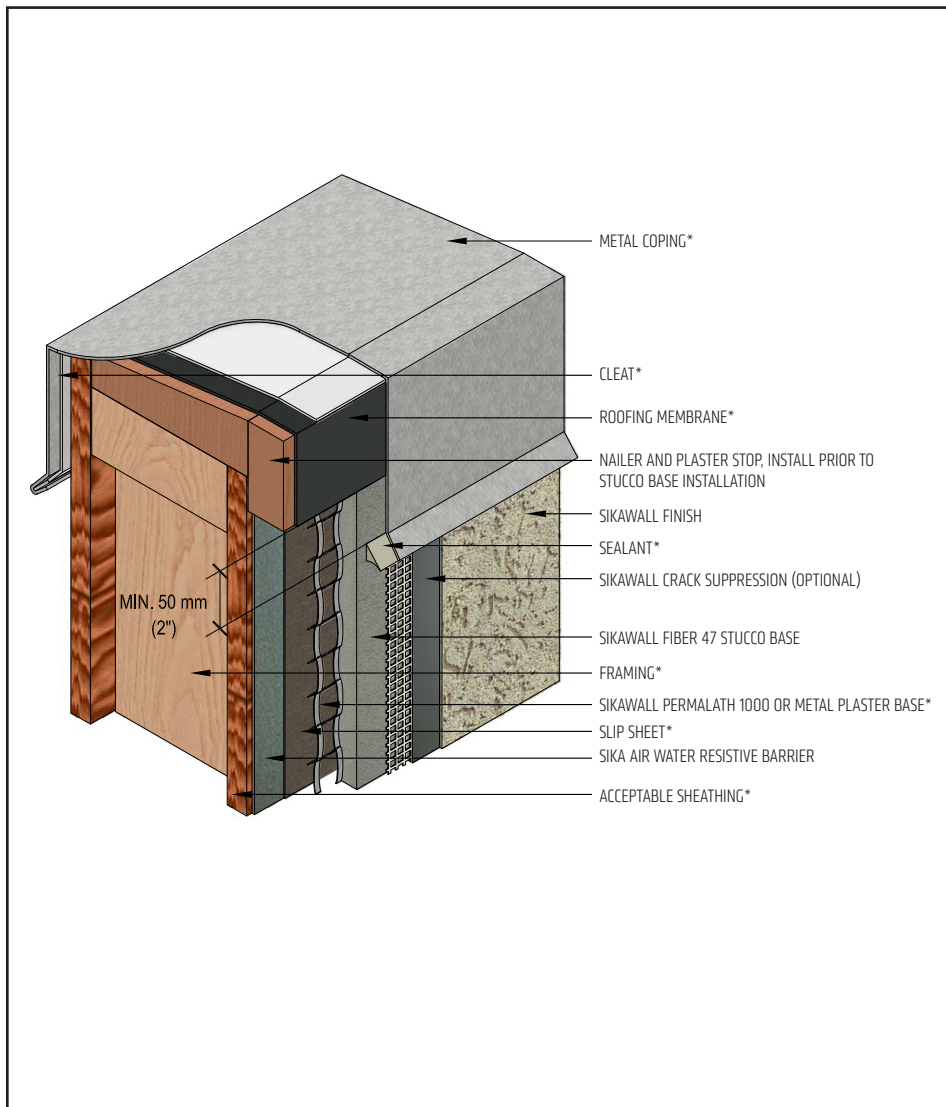

- Extend coping a minimum of 2" (50 mm) on to face of Fastwall 300 WaterMaster Stucco System and seal drip edge.
- Extend Sika Air Water Resistive Barrier or SikaWall MaxFlash onto bottom of blocking or provide alternate air seal at sheathing termination to blocking.

0326


(\*NOTE: BY OTHERS)

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL CORNER BEAD

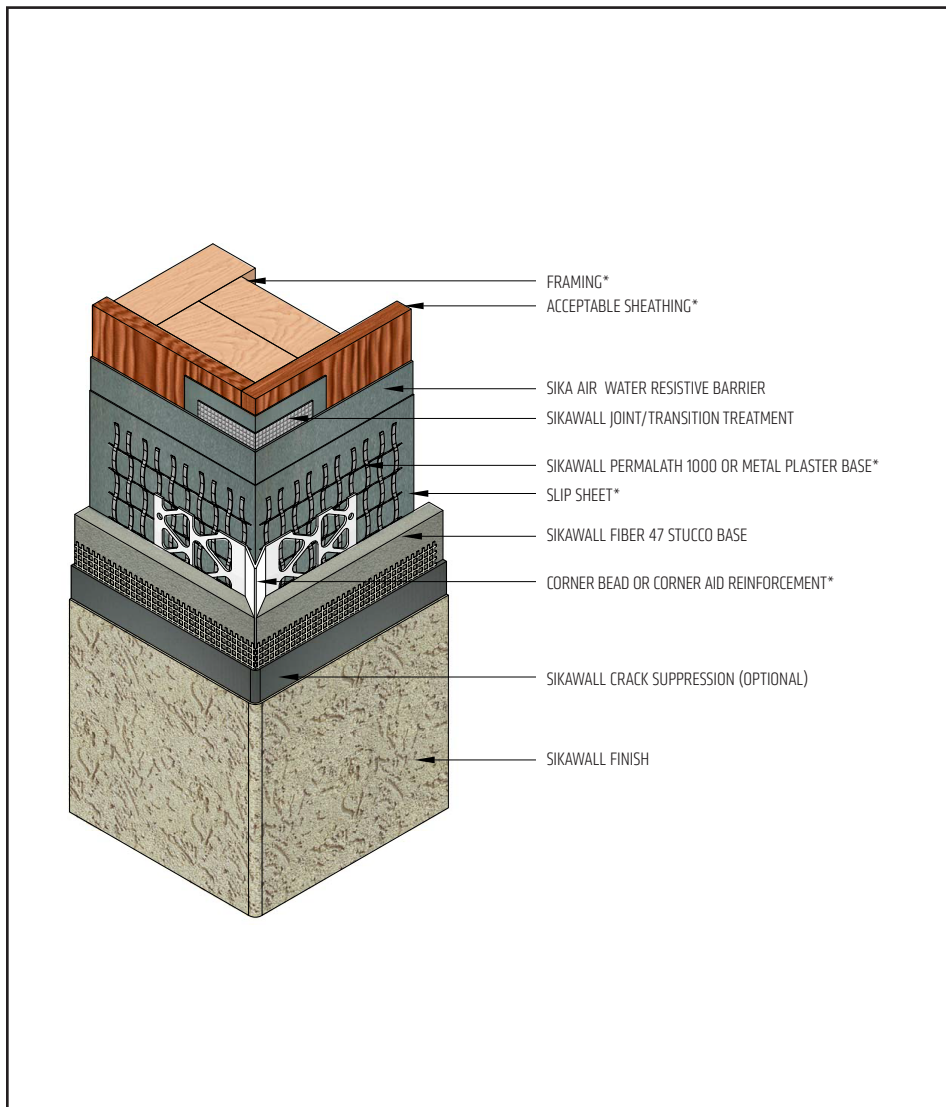

- Attach corner bead over SikaWall Permalath 1000 or metal plaster base.
- Corner bead shall be filled solid with SikaWall Stucco Base, as required.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- SikaWall Joint/Transition Treatment Options: SikaWall MaxFlash, SikaWall Sheathing Fabric embedded in SikaWall Air Water Resistive Barrier or SikaWall Flash Seal NP.

0326


(\*NOTE: BY OTHERS)

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL DOWNSPOUT APPLICATION

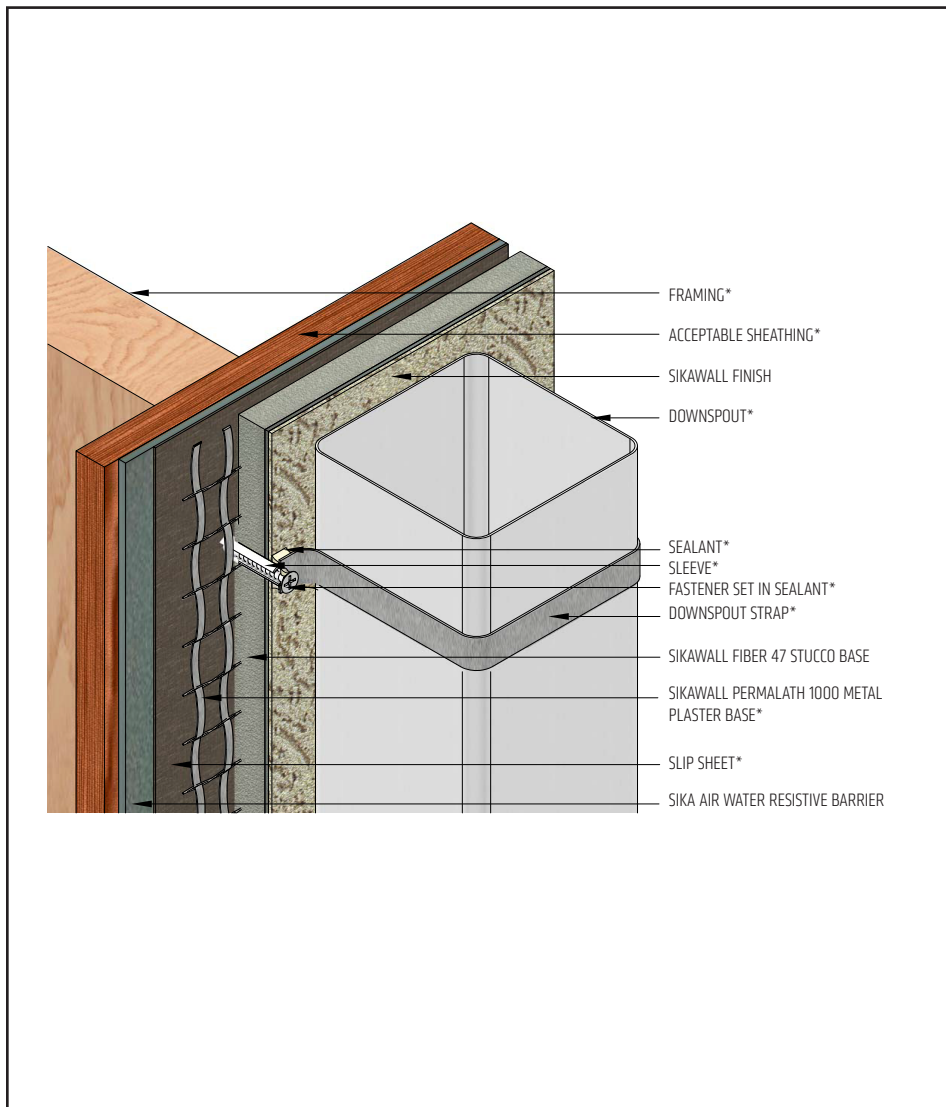

- Install all materials in accordance with installation instructions and applicable code.
- Properly seal all penetrations through the Fastwall 300 WaterMaster Stucco System.

0326


(\*NOTE: BY OTHERS)

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL PIPE PENETRATION

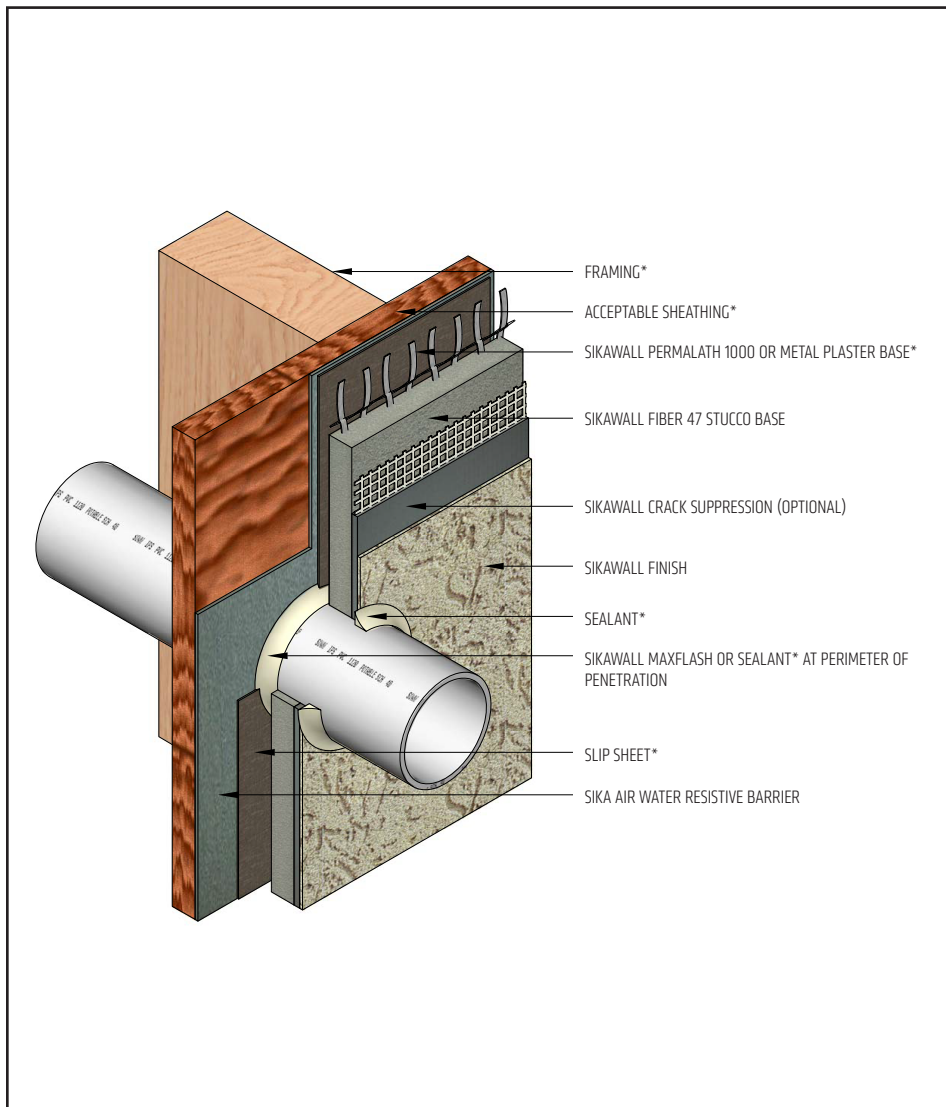

0326

(\*NOTE: BY OTHERS)

- Ensure all penetrations into the system are properly sealed. Reference *Acceptable Sealants for use with Sika EIFS and Stucco Systems* Technical Bulletin for a list of sealants.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- Provide continuous air seal around perimeter of penetration prior to slip sheet application.


The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.



# Fastwall 300 WaterMaster Stucco

## TYPICAL LIGHT FIXTURE

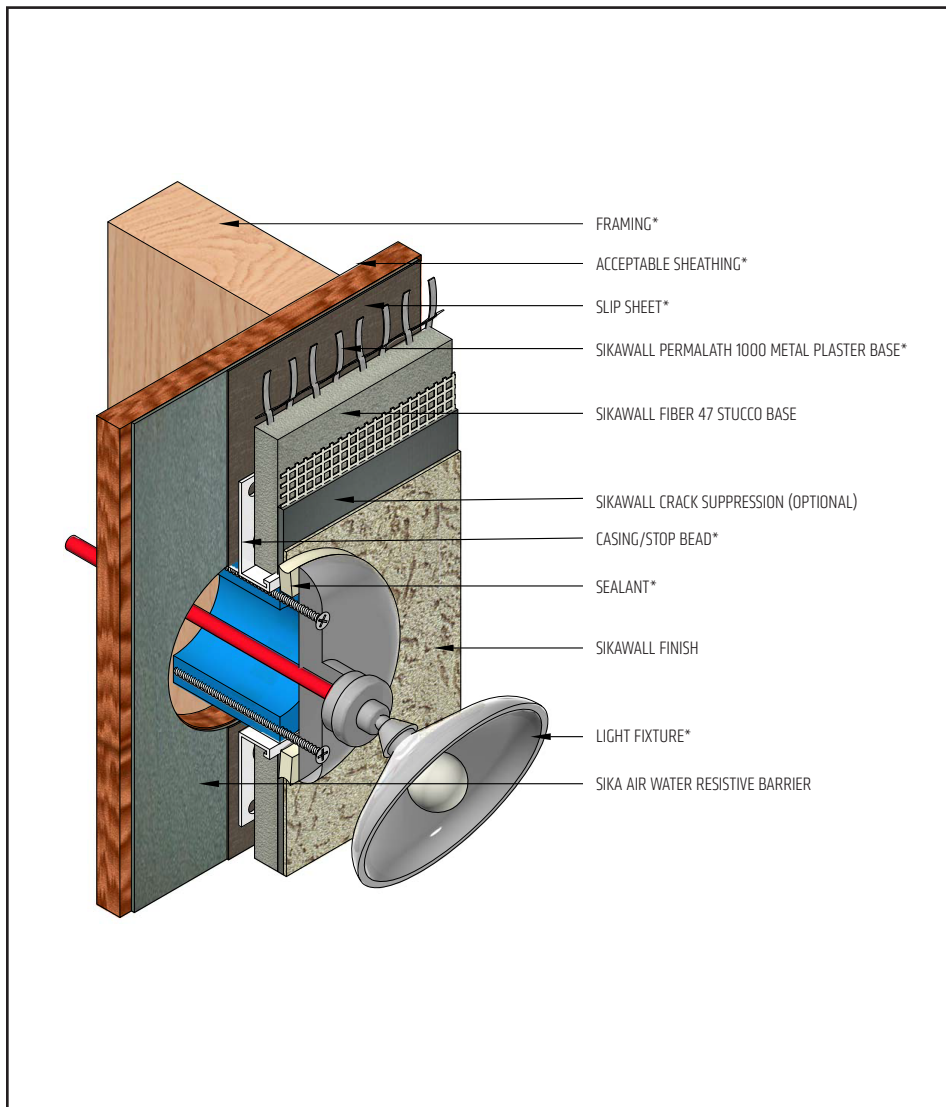

0326

(\*NOTE: BY OTHERS)


- Ensure all penetrations into the system are properly sealed. Reference *Acceptable Sealants for use with Sika EIFS and Stucco Systems* Technical Bulletin for a list of sealants.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.
- Provide continuous air seal around perimeter of penetration prior to slip sheet application.

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

# Fastwall 300 WaterMaster Stucco

## TYPICAL DRYER VENT

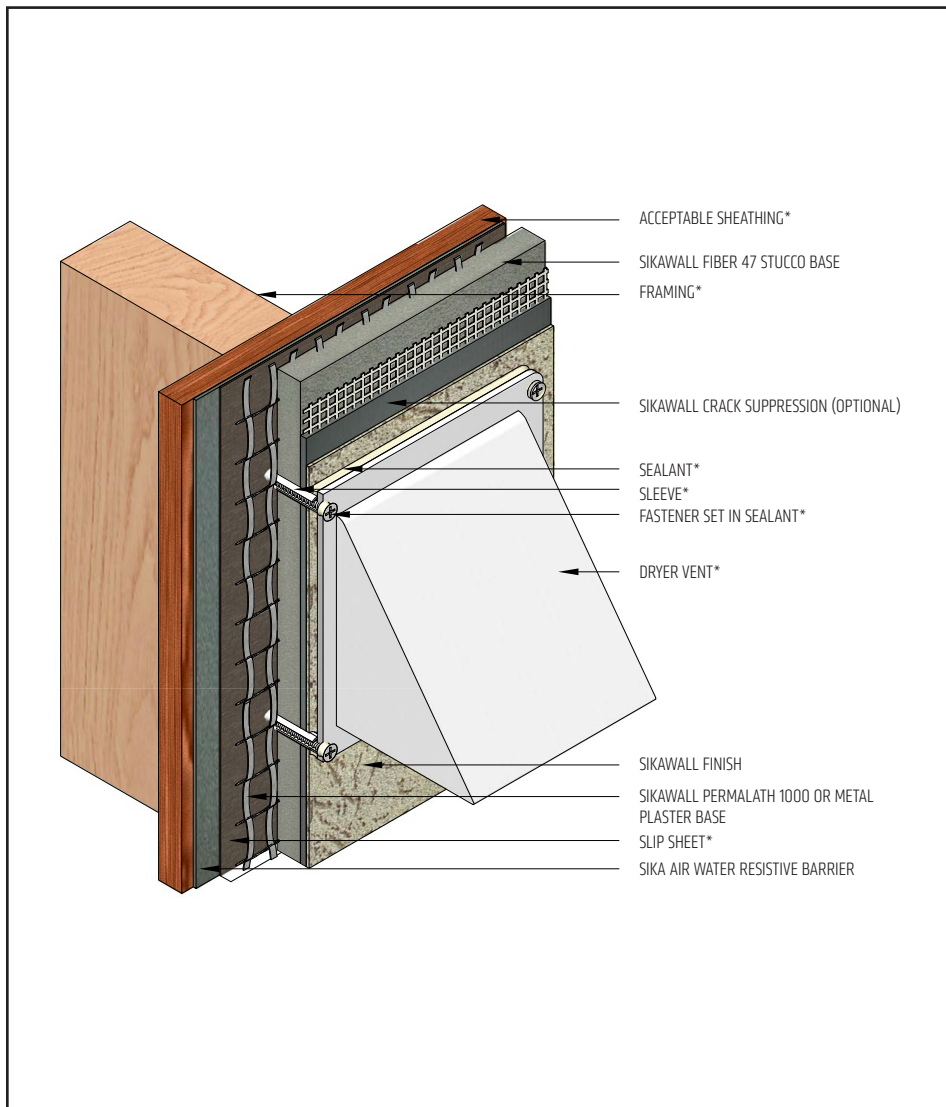

- Properly seal all penetrations through the Fastwall 100 Watermaster Stucco System.
- SikaWall Crack Suppression: a SikaWall Reinforcing Mesh or SikaWall SRT Mesh embedded in a SikaWall Base Coat or SikaWall Stucco Surface Leveler.

0326

(\*NOTE: BY OTHERS)

The details within are latest recommendations and are represent in good faith by Sika Corporation US (hereinafter Sika). The details are subject to change without notice. Sika accepts no liability for the end use of the details. For conditions not shown, consult Sika for review of specific details.

- Install Sika materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Sika products.

## LIMITED WARRANTY NOTICE

Prior to each use of any product of Sika Corporation, its subsidiaries or affiliates ("SIKA"), the user must always read and follow the warnings and instructions on the product's most current product label, Product Data Sheet and Safety Data Sheet which are available at [usa.sika.com/eifs-stucco](http://usa.sika.com/eifs-stucco) or by calling our Technical Service Department at +1 (800) 226-2424.

Nothing contained in any SIKA literature or materials relieves the user of the obligation to read and follow the warnings and instructions for each SIKA product as set forth in the current product label, Product Data Sheet and Safety Data Sheet prior to use of the SIKA product.

SIKA warrants this product for one year from date of installation to be free from manufacturing defects and to meet the technical properties on the current Product Data Sheet if used as directed within the product's shelf life. User determines suitability of product for intended use and assumes all risks. User's and/or buyer's sole remedy shall be limited to the purchase price or replacement of this product exclusive of any labor costs. NO OTHER WARRANTIES EXPRESS OR IMPLIED SHALL APPLY INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SIKA SHALL NOT BE LIABLE UNDER ANY LEGAL THEORY FOR SPECIAL OR CONSEQUENTIAL DAMAGES. SIKA SHALL NOT BE RESPONSIBLE FOR THE USE OF THIS PRODUCT IN A MANNER TO INFRINGE ON ANY PATENT OR ANY OTHER INTELLECTUAL PROPERTY RIGHTS HELD BY OTHERS. Sale of SIKA products are subject to the Terms and Conditions of Sale which are available at [usa.sika.com](http://usa.sika.com).

For the most current version of this literature, please visit our website at [usa.sika.com/eifs-stucco](http://usa.sika.com/eifs-stucco).

**Sika Corporation**

201 Polito Avenue  
Lyndhurst, NJ 07071 USA  
Customer Service +1 (800) 433-9517  
Technical Service +1 (800) 226-2424  
[usa.sika.com/eifs-stucco](http://usa.sika.com/eifs-stucco)

Rev May 2026

**BUILDING TRUST**

